

[Manuals.plus](#) /

› [Tangkula](#) /

› Tangkula 6.6x6.6 Ft Pop Up Canopy Instruction Manual

Tangkula AM6753HM

Tangkula 6.6x6.6 Ft Pop Up Canopy Instruction Manual

Model: AM6753HM | Brand: Tangkula

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your Tangkula 6.6x6.6 Ft Pop Up Canopy. Please read this manual thoroughly before initial use to ensure safe and optimal performance of your product. Keep this manual for future reference.

SAFETY INFORMATION

Important Safety Warnings:

- This product should not be used in extreme weather conditions such as heavy rain or snow.
- Secure the canopy tent to the ground with included wind ropes and ground stakes for added wind resistance.
- Do not use near fire or high heat sources.
- Use under adult supervision and follow the manufacturer's instructions for safe setup, use, and dismantling.

COMPONENTS LIST

Before assembly, please ensure all parts are present and in good condition. Refer to the image below for visual identification of components.

8 stakes & 4 wind ropes secure the canopy tent in place



Package Includes



- ① 1 x Carry Bag
- ② 1 x Metal Frame
- ③ 1 x Canopy Top
- ④ 4 x Wind Rope
- ⑤ 8 x Stakes

Figure 1: Package Contents. This image displays all items included in your Tangkula Pop Up Canopy package: one carry bag, one metal frame, one canopy top, four wind ropes, and eight stakes.

- 1 x Carry Bag
- 1 x Metal Frame
- 1 x Canopy Top
- 4 x Wind Ropes
- 8 x Stakes

SETUP INSTRUCTIONS

The Tangkula Pop Up Canopy is designed for quick and easy setup, even by one person. Follow these steps for assembly:

1. **Open the Frame:** With a partner, or by yourself, gently pull the legs of the folded metal frame outwards until it begins to expand. Ensure the frame is on a flat, stable surface.


Easy Setup Adjustable & Foldable Canopy Tent



1 Button



1 Person

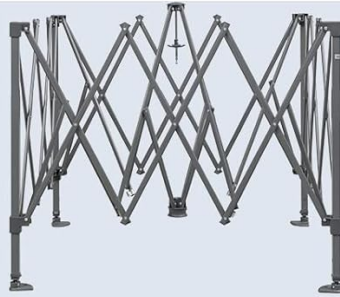

Step 1:

Unfold the metal frame



Easy Center Push Mechanism



Step 2:

Attach the canopy top and push up the frame



Spring Button

Step 3:

Adjust the canopy height

Figure 2: Easy Setup Steps. This image illustrates the three main steps for setting up the canopy: unfolding the frame, attaching the canopy top and pushing up, and adjusting the height.

- 2. Attach the Canopy Top:** Drape the canopy fabric over the expanded frame. Secure the canopy top to the frame using the hook and loop fasteners located at the corners and along the edges.
- 3. Extend the Legs and Push Up Center Lock:** Extend each leg to its initial height. Then, push up the center lock hub located underneath the canopy's peak until it clicks into place. This mechanism significantly reduces setup time.
- 4. Adjust Height:** Use the spring buttons on each support leg to adjust the canopy to your desired height (6.2-8 ft). Ensure all legs are set to the same height for stability.
- 5. Secure with Stakes and Ropes:** For optimal stability, especially in windy conditions, use the provided 8 stakes to anchor the canopy legs to the ground. Attach the 4 wind ropes to the canopy corners and secure them to the ground using additional stakes, pulling them taut at an angle.

Video Guide: How to Set Up

Your browser does not support the video tag.

Video 1: How to Set Up Your Tangkula Pop Up Canopy. This 24-second video demonstrates the quick and easy setup process, including opening the frame, attaching the canopy top, extending the legs, and engaging the center lock mechanism.

OPERATING INSTRUCTIONS

Your Tangkula Pop Up Canopy is designed for versatile outdoor use, providing shade and protection.

- **Adjustable Height:** The canopy features 3 adjustable height settings (6.2-8 ft) to suit various needs and environments. Simply press the spring buttons on the legs to raise or lower the canopy.
- **Sun Protection:** The canopy top is coated with premium silver to provide UPF 50+ sun protection, making it ideal for sunny outdoor activities.
- **Water Resistance:** The durable oxford fabric is water-resistant, offering protection against light rain. *Note: This canopy is not designed for heavy rain or severe weather conditions.*
- **Portability:** When not in use, the canopy can be easily folded and stored in the included carrying bag for convenient transport to various locations such as picnics, camping trips, parties, or small business events.



Figure 3: Versatile Usage. This image demonstrates the canopy's suitability for various outdoor settings, including poolside, courtyards, and beaches, emphasizing its portability and weather-resistant features.

MAINTENANCE

Proper maintenance will extend the lifespan of your canopy.

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow the fabric to air dry completely before folding and storing.
- **Frame Care:** Wipe down the metal frame with a damp cloth to remove dirt and debris. Ensure the frame is dry before storage to prevent rust.
- **Storage:** Always store the canopy in its carrying bag in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the canopy is completely dry before storage to prevent mold and mildew.
- **Inspection:** Periodically inspect the frame, fabric, ropes, and stakes for any signs of wear, damage, or corrosion. Replace any damaged components immediately.

TROUBLESHOOTING

Here are some common issues and their solutions:

Problem	Possible Cause	Solution
Canopy is unstable or sways in wind.	Not properly anchored; legs uneven; strong winds.	Ensure all 8 stakes are used and firmly driven into the ground. Use all 4 wind ropes and pull them taut. Verify all legs are at the same height. Do not use in strong winds.
Water pooling on canopy top.	Insufficient tension on canopy fabric; heavy rain.	Ensure canopy fabric is pulled taut and securely fastened to the frame. This canopy is designed for light rain; dismantle during heavy rainfall.
Frame difficult to open or close.	Joints are stiff or dirty; not enough force applied evenly.	Clean joints and apply a silicone-based lubricant if necessary. Ensure two people are opening/closing the frame, applying even pressure.

SPECIFICATIONS

Detailed specifications for your Tangkula Pop Up Canopy:

Feature	Detail
Brand	Tangkula
Model Number	AM6753HM
Material	Oxford Fabric, Silver Coating, Metal, Plastic
Color	White
Item Weight	20 Pounds
Product Dimensions	79.2"L x 79.2"W x 96"H (6.6 ft x 6.6 ft x 6.2-8 ft adjustable height)
Ultraviolet Light Protection	UPF 50+
Frame Material	Metal (Powder-Coated)
Water Resistance Level	Water Resistant
Number of Guylines	4
Stakes Included	8

Feature	Detail
Assembly Required	Yes
Folded Carry Bag Dimensions	34" x 8" x 8"

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Tangkula customer service directly. Refer to the contact information provided with your purchase or visit the official Tangkula website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 Tangkula. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question