

[Manuals.plus](#) /

> [Indesit](#) /

> Indesit Gas Cooker IS67G8CHX/E - Instruction Manual

## Indesit IS67G8CHX/E

# Indesit IS67G8CHX/E Gas Cooker with Electric Oven - Instruction Manual

Model: IS67G8CHX/E | Brand: Indesit

## 1. PRODUCT OVERVIEW

The Indesit IS67G8CHX/E is a freestanding gas cooker featuring a 4-burner gas hob and a 73-liter multifunction electric oven. Designed for ease of use and maintenance, this appliance integrates modern cooking technologies with practical features for everyday culinary needs.



**Figure 1.1:** Front view of the Indesit IS67G8CHX/E Gas Cooker, showcasing the control panel, oven door, and gas hob cover.

## 2. SAFETY INFORMATION

---

Before installation and use, carefully read this instruction manual. It contains important information regarding safety, installation, use, and maintenance. Keep this manual for future reference.

- Ensure the appliance is installed by a qualified technician in accordance with local regulations.
- Do not store flammable materials near the appliance.
- Always supervise cooking, especially when using high heat settings.
- The oven door and surrounding surfaces can become hot during operation. Use oven mitts.
- Disconnect the appliance from the power supply before cleaning or maintenance.

## 3. SETUP AND INSTALLATION

---


This appliance is designed for freestanding installation. Proper ventilation and connection to gas and electrical supplies are crucial for safe operation.

### 3.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage incurred during transit. Report any damage to your retailer immediately.

### 3.2 Positioning

Place the cooker on a flat, stable surface. Ensure there is adequate clearance around the appliance as specified in the installation guide (not provided here, refer to separate installation instructions if available). The dimensions of the product are approximately 60 x 60 x 85 cm.

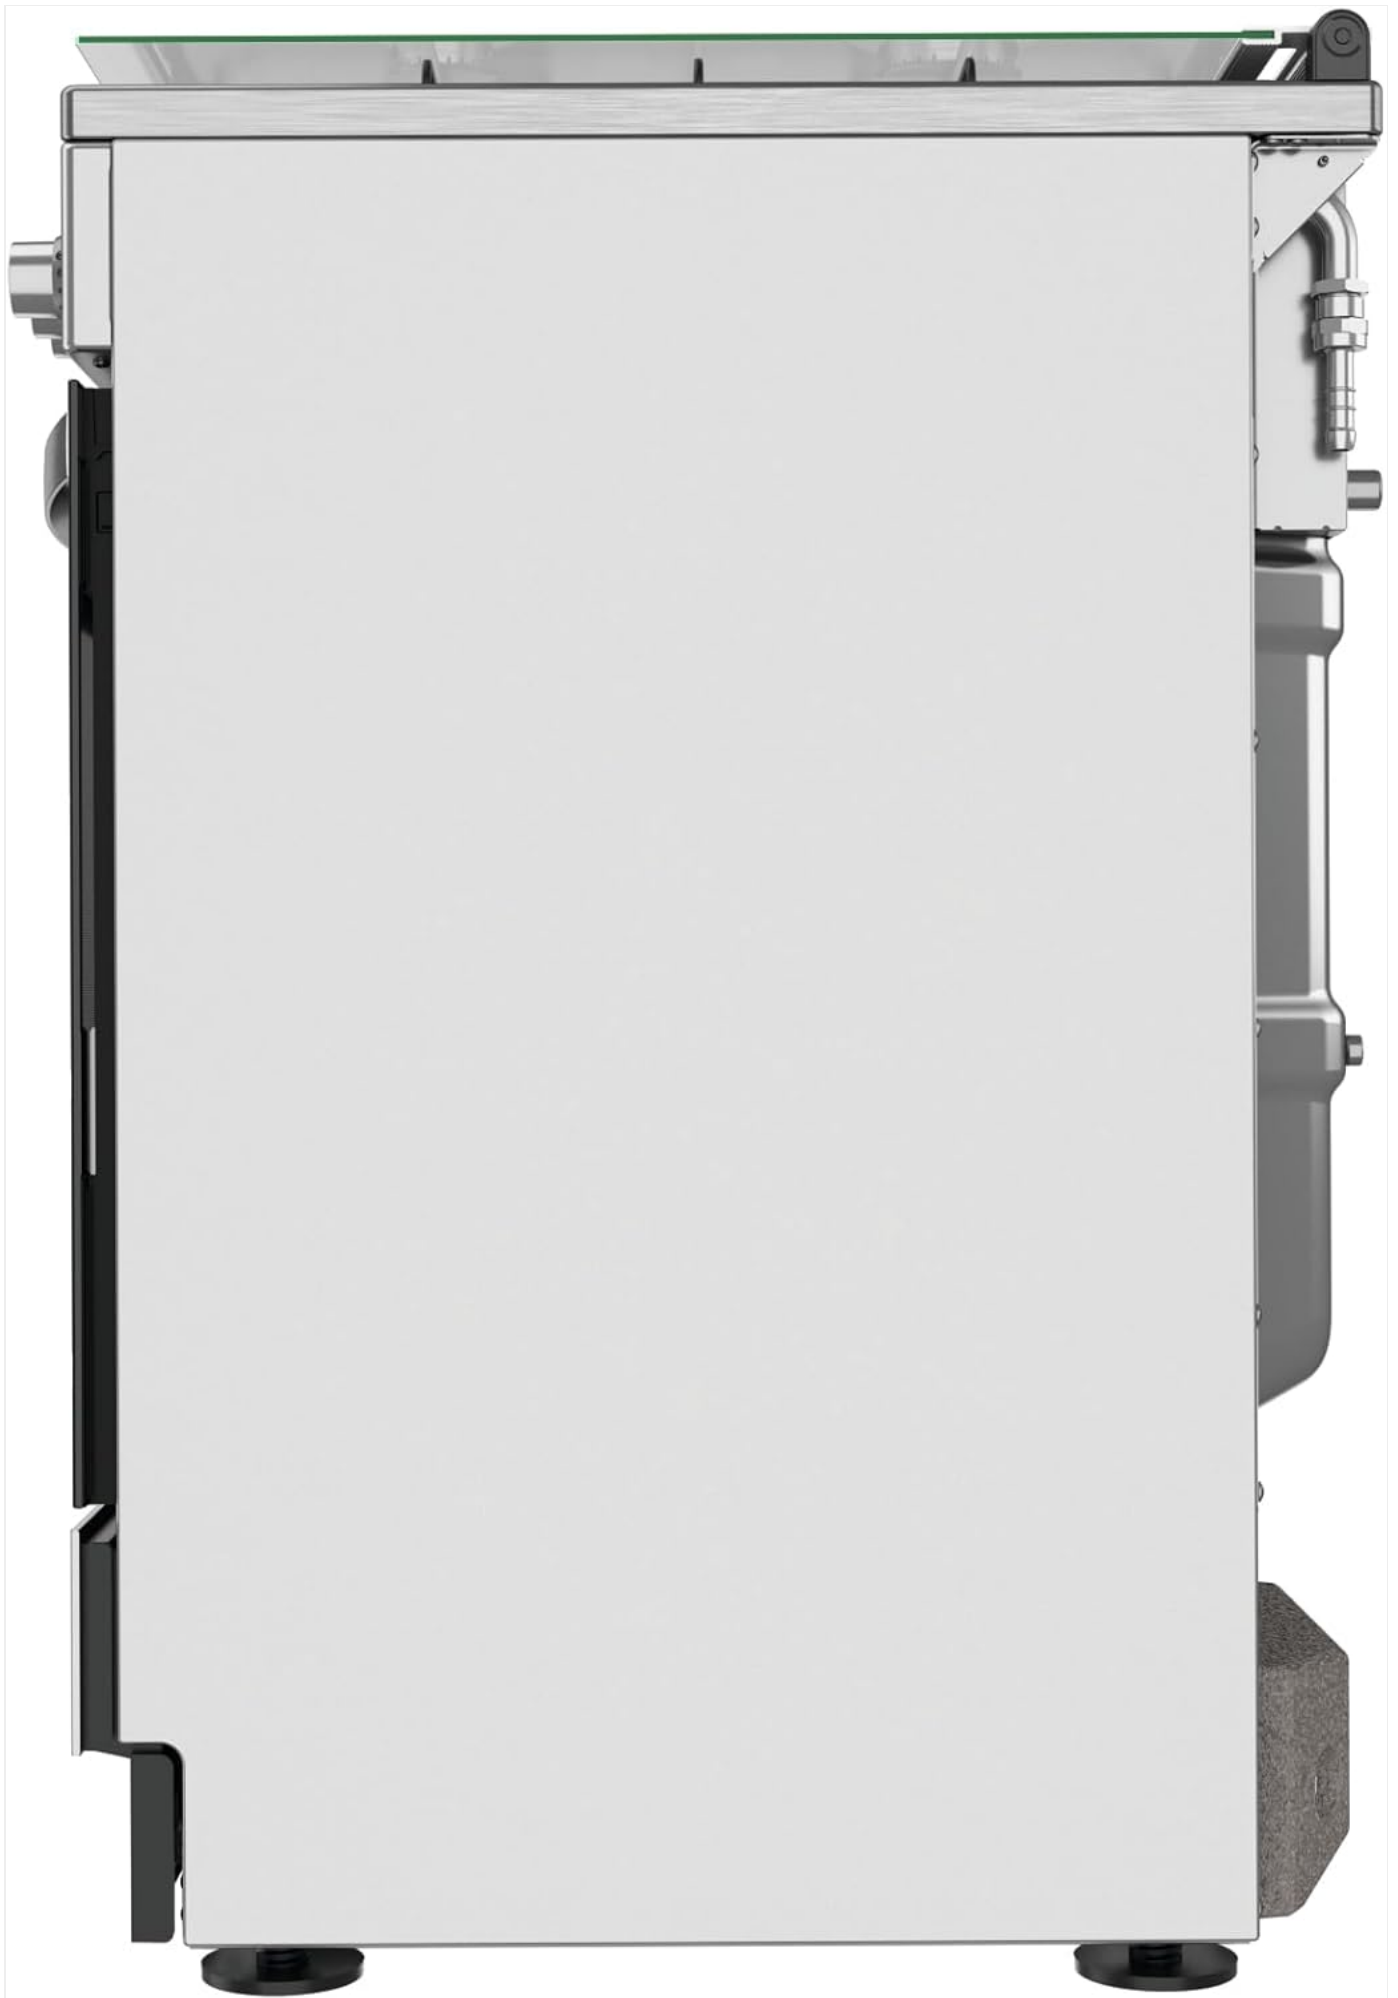

**Figure 3.1:** Side view of the Indesit IS67G8CHX/E Gas Cooker, illustrating its compact design suitable for various kitchen layouts.

### 3.3 Gas and Electrical Connection

Gas and electrical connections must be performed by a qualified and authorized technician. Ensure the gas supply pressure is correct and the electrical connection matches the appliance's requirements (220-240V, 50/60Hz). The appliance comes with a power cable.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Gas Hob Operation

The hob features 4 gas burners with varying power outputs:

- 1 Rapid Burner: 3000 W
- 2 Semi-Rapid Burners: 2000 W each
- 1 Auxiliary Burner: 1000 W

To ignite a burner, press and turn the corresponding knob counter-clockwise to the maximum flame setting. Hold the knob for a few seconds until the flame is stable. Adjust the flame size by turning the knob.



Figure 4.1: Top view of the gas hob, showing the four burners and the enameled cast-iron effect grids.

## 4.2 Electric Oven Operation

The 73-liter electric oven offers multiple cooking modes:

- **Static:** Ideal for traditional baking and roasting.
- **Electric Grill:** For grilling and browning dishes.
- **Multifunction 5 + Turn&Go Steam:** Provides versatile cooking options, including a steam function for enhanced results.

To select a cooking mode and temperature, use the dedicated oven control knobs. The oven cavity is illuminated for better visibility during cooking.



Figure 4.2: The electric oven in operation, demonstrating its capacity and the internal lighting.

### 4.3 Timer Function

The digital clock on the control panel can be used as a timer for cooking. Refer to the specific section in the full manual for detailed instructions on setting and using the timer.

## 5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure the longevity and optimal performance of your cooker.

### 5.1 General Cleaning

Clean the exterior surfaces with a soft cloth and mild detergent. For stainless steel surfaces, use a specialized stainless steel cleaner. Avoid abrasive cleaners or scouring pads.

### 5.2 Click and Clean (Removable Inner Glass Door)

The inner glass door of the oven can be easily removed in two simple steps for thorough cleaning. This feature, known as "Click and Clean," facilitates access to all glass surfaces.



**Figure 5.1:** The oven interior with the door open, highlighting the removable inner glass for easy cleaning and the adjustable oven racks.

### 5.3 Steam Cleaning (Hydrolytic System)

The oven features a hydrolytic cleaning system for effortless dirt removal. Simply pour 200ml of water into the oven cavity to activate the automatic program. In 35 minutes, at a temperature of 90°C, steam will loosen dirt, allowing for easy wiping without the need for harsh detergents.

## 6. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Gas burner does not ignite.	No gas supply, igniter faulty, or burner cap misaligned.	Check gas supply. Ensure burner cap is correctly placed. If issue persists, contact service.
Oven not heating.	Power supply issue, incorrect settings, or heating element failure.	Check power connection and circuit breaker. Verify oven settings. If still not working, contact service.
Timer not working.	Incorrect setting or power interruption.	Reset the timer. Check power supply.

## 7. SPECIFICATIONS

Key technical specifications for the Indesit IS67G8CHX/E Gas Cooker:

**Model Number:** IS67G8CHX/E

**Brand:** Indesit

**Type:** Freestanding Gas Cooker with Electric Oven

**Dimensions (W x D x H):** 60 x 60 x 85 cm

**Weight:** 52.4 kg

**Material:** Stainless Steel

**Hob Type:** Gas, 4 Burners (1 Rapid 3000W, 2 Semi-Rapid 2000W, 1 Auxiliary 1000W)

**Oven Type:** Electric, Multifunction

**Oven Capacity:** 73 Liters

**Cleaning System:** Hydrolytic (Steam Cleaning), Click and Clean (Removable Inner Glass)

**Energy Efficiency Class:** A

**Country of Origin:** Italy

**Included Accessories:** Power cable



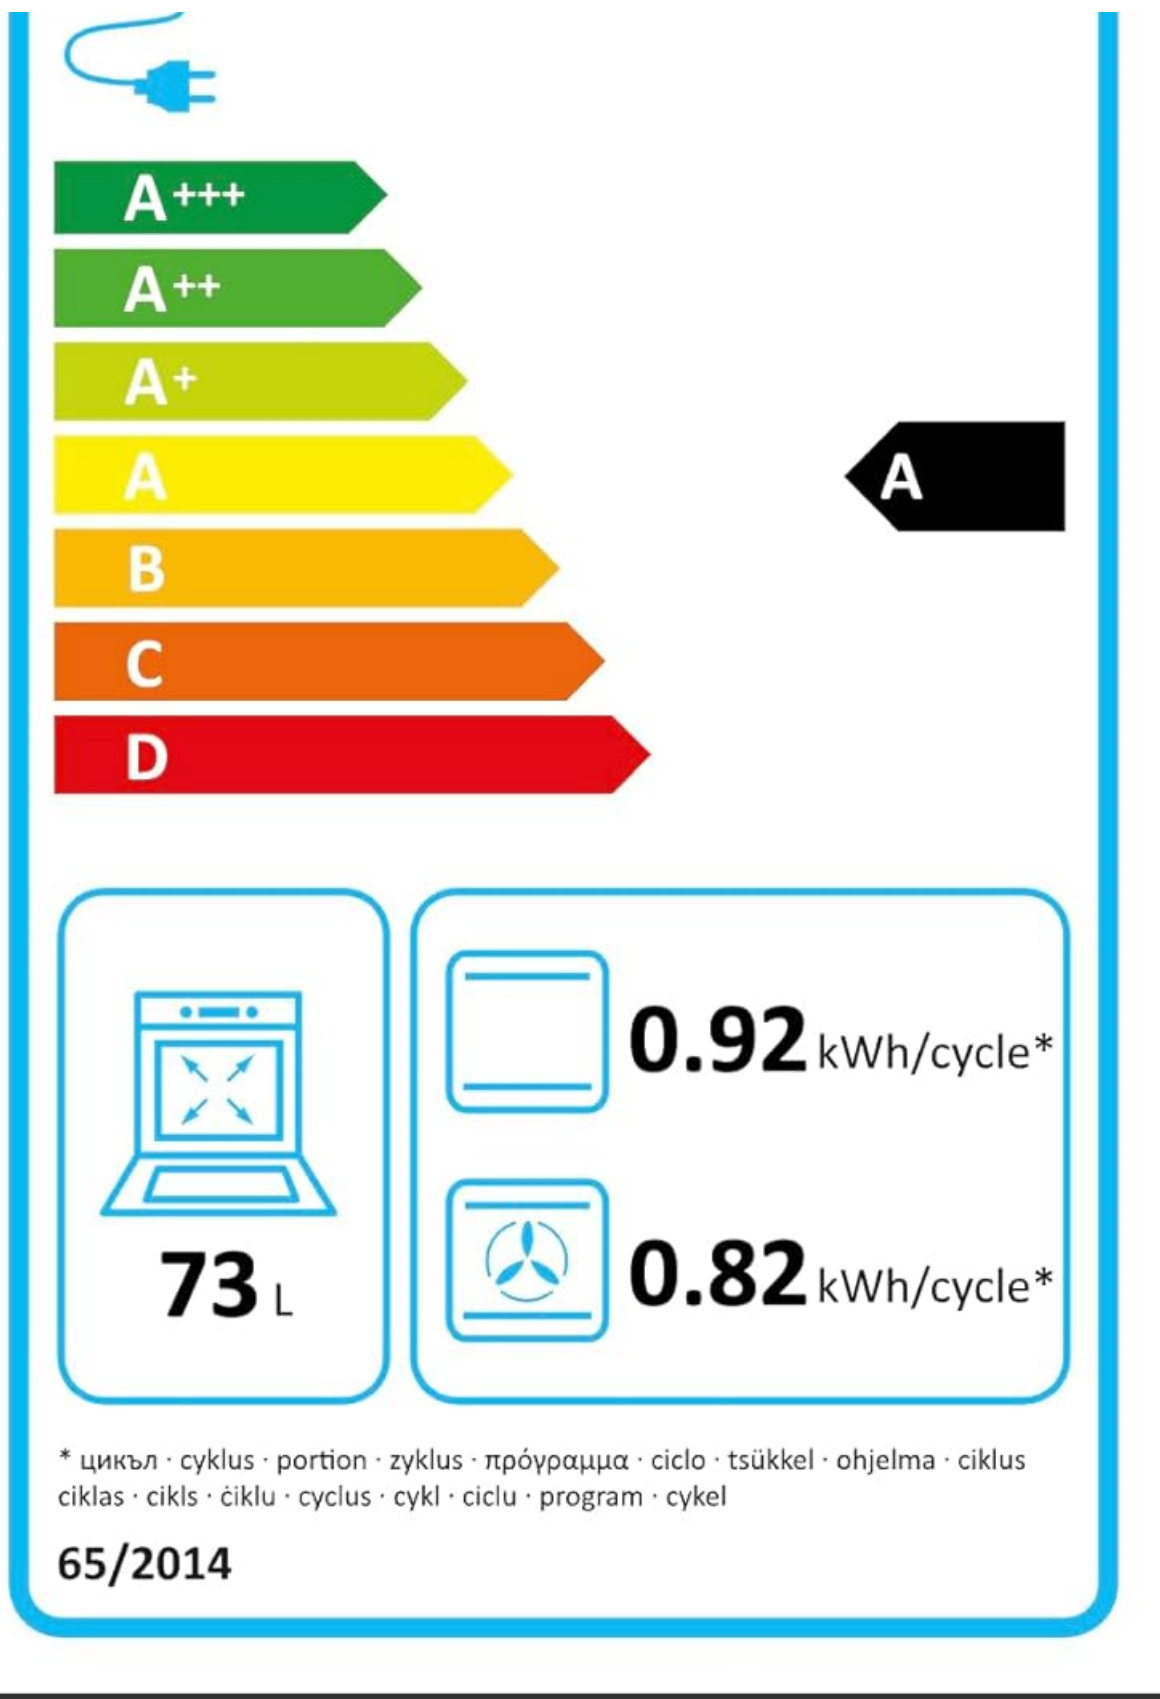


Figure 7.1: Energy efficiency label for the Indesit IS67G8CHX/E, indicating its Class A rating and energy consumption.

## 8. WARRANTY AND SUPPORT

For product support, technical assistance, or warranty claims, please contact Indesit customer service. Refer to the official Indesit website or your purchase documentation for contact details.

**Return Policy:** If you wish to return a product within 30 days of receipt because you changed your mind, please consult the retailer's help page. If you received a defective or damaged product, please consult the retailer's help page for assistance. For specific information on purchases made on a marketplace, please consult their respective help pages.

For more information, visit the [Indesit Store on Amazon](#).

