

[manuals.plus](#) /

› [TIMEX](#) /
› [TIMEX Analog Watch TWEG20018 User Manual](#)

TIMEX TWEG20018

TIMEX Analog Watch TWEG20018 User Manual

Model: TWEG20018

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your TIMEX Analog Watch, model TWEG20018. Please read this manual carefully to ensure proper use and to maximize the lifespan of your timepiece.

2. PRODUCT OVERVIEW

The TIMEX TWEG20018 is a men's analog watch featuring a classic design with modern functionality. It is equipped with a reliable quartz movement and a durable stainless steel band.

Key Features:

- **Movement:** Quartz for precise timekeeping.
- **Case Material:** Brass case with a 43mm diameter.
- **Band Material:** Gold-tone Stainless Steel, 22mm width.
- **Water Resistance:** Up to 30 meters (3 ATM).
- **Dial:** Black dial with analog display.

Watch Components:

1. **Crown:** Used for setting time and date.
2. **Dial:** Displays hours, minutes, and seconds.
3. **Hands:** Hour, Minute, and Second hands.
4. **Case:** Protects the internal movement.
5. **Band:** Secures the watch to your wrist.



Figure 2.1: Front view of the TIMEX Analog Watch TWEG20018. This image shows the watch face with its black dial, hour markers, and hands, encased in a gold-tone brass case with a matching stainless steel band.

3. SETUP

3.1 Initial Time Setting

- 1. Pull out the crown:** Gently pull the crown (the small knob on the side of the watch case) out to the furthest position.
- 2. Set the time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
- 3. Push in the crown:** Once the time is set, push the crown back into its normal operating position. The second hand will begin to move.

Note: If your watch includes a date display, ensure you set the time correctly for AM/PM to avoid the date changing at noon instead of midnight.

3.2 Adjusting the Band

The stainless steel band may require adjustment for a comfortable fit. This typically involves removing or adding links. It is recommended to have this procedure performed by a qualified jeweler or watch technician to prevent damage to the band or clasp.



Figure 3.1: View of the watch's stainless steel band and clasp mechanism. Proper band adjustment ensures comfort and security on the wrist.

4. OPERATING THE WATCH

4.1 Reading the Time

The watch displays time using three hands: the shorter, thicker hand indicates the hour; the longer, thinner hand indicates the minute; and the very thin, sweeping hand indicates the seconds.

4.2 Water Resistance

Your TIMEX TWEG20018 watch is water resistant up to 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, diving, or showering, as prolonged exposure to water pressure or hot water can compromise the seals.



Figure 4.1: Illustration of water resistance. The watch is designed to withstand splashes and brief contact with water, but not submersion for swimming or diving.

5. MAINTENANCE

5.1 Cleaning Your Watch

- Wipe the watch case and band regularly with a soft, dry cloth to remove dust and dirt.
- For the stainless steel band, a slightly damp cloth can be used, followed by immediate drying.
- Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

5.2 Battery Replacement

The watch is powered by a quartz movement, which requires a watch battery. When the second hand begins to skip seconds (e.g., jumping every two or four seconds), it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure the water resistance seal is properly maintained.

5.3 Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. Keeping it in its original box or a watch case can help protect it from dust and scratches.

6. TROUBLESHOOTING

- **Watch is not running:**
 - Check if the crown is fully pushed in.
 - The battery may be depleted. Refer to Section 5.2 for battery replacement.
- **Time is inaccurate:**
 - Ensure the time was set correctly (refer to Section 3.1).
 - Extreme temperatures or strong magnetic fields can affect quartz accuracy. Avoid such environments.
 - A low battery can also affect accuracy.
- **Condensation under the crystal:**
 - This indicates a breach in the water resistance. Avoid further contact with water and seek professional service immediately to prevent internal damage.

7. SPECIFICATIONS

Model Number	TWEG20018
Movement Type	Quartz
Case Diameter	43 Millimetres
Case Material	Brass
Band Material	Stainless Steel
Band Width	22 Millimetres
Water Resistance	30 Meters (3 ATM)
Item Weight	200 Grams

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your TIMEX TWEG20018 watch comes with a **one-year warranty** covering manufacturing defects from the date of purchase. This warranty does not cover normal wear and tear, battery, crystal, watch case, strap, or loss/theft. Damage resulting from improper handling, lack of care, accidents, or unauthorized repairs is also not covered.

To claim warranty service, please retain your proof of purchase.

8.2 Customer Support

For service, repairs, or any inquiries regarding your TIMEX watch, please contact TIMEX customer service or visit an authorized TIMEX service center. Contact details can typically be found on the official TIMEX website or on your warranty card.



Figure 8.1: Example of various strap types. While your watch comes with a stainless steel band, TIMEX offers a range of options for customization or replacement.

Service Centre in India

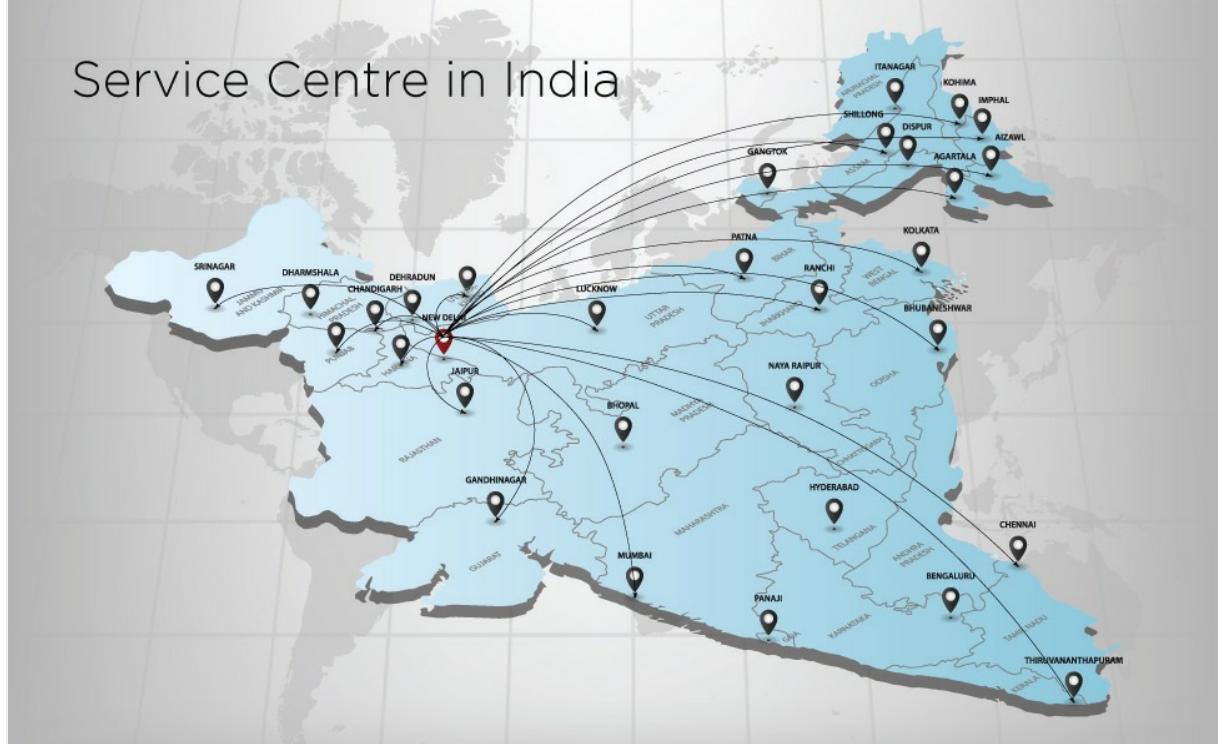


Figure 8.2: Map indicating TIMEX Service Centre locations in India. For specific addresses and contact information, please refer to the official TIMEX website.