

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [PKM](#) /

> [PKM WA6-ES1510 Automatic Washing Machine User Manual](#)

PKM WA6-ES1510

PKM WA6-ES1510 Automatic Washing Machine User Manual

Model: WA6-ES1510 | Brand: PKM

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your PKM WA6-ES1510 automatic washing machine. Please read this manual thoroughly before using the appliance and keep it for future reference.

The PKM WA6-ES1510 is a front-loading washing machine with a 6 kg capacity and 15 wash programs, designed for household use.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the appliance.
- Do not touch the appliance with wet hands.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not wash items that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- The appliance is for indoor use only.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Check the appliance for any damage during transit. Keep packaging materials out of reach of children.

3.2 Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the appliance for ventilation and maintenance. The compact dimensions are approximately 49.5 cm (D) x 60 cm (W) x 84 cm (H).



Image: Front view of the PKM WA6-ES1510 automatic washing machine, showing the control panel, detergent drawer, and front-loading door.

3.3 Leveling

Adjust the adjustable feet at the bottom of the machine to ensure it is perfectly level. A level machine reduces vibration and noise during operation.

3.4 Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.
- Attach the drain hose to a suitable drain pipe or place it over the edge of a sink, ensuring it is securely fastened to prevent displacement during draining. The product includes a drain hose.

3.5 Electrical Connection

Plug the power cord into a grounded 220 Volt electrical outlet. Do not use extension cords or adapters. Ensure the electrical supply matches the requirements specified on the appliance's rating label.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The washing machine features a clear display and push-button controls for easy program selection and monitoring. The intuitive user interface allows for effortless navigation through different programs and settings.

4.2 Loading Laundry

Open the front-loading door and place laundry loosely into the drum. Do not overload the machine; the maximum capacity is 6 kg. Overloading can affect washing performance and cause excessive vibration.



Image: Close-up view of the stainless steel drum interior of the washing machine, showing the textured surface designed for effective washing.

4.3 Adding Detergent

Add the appropriate amount of detergent and fabric softener to the designated compartments in the detergent drawer. Refer to your detergent packaging for recommended dosages.

4.4 Program Selection

Turn the program selector knob or use the push-buttons to choose one of the 15 available wash programs. The display will show the selected program and estimated cycle time. Available programs offer versatility for different textiles and requirements.

Special Features:

- **Steam Function:** This feature can be used to refresh lightly worn clothes or to eliminate allergens such as pollen, dust mites, and parasites from textiles. High-temperature steam sterilizes and disinfects fabrics, making it suitable for allergy sufferers and those with sensitive skin.
- **Drum Cleaning:** A dedicated program for cleaning the washing machine drum, helping to maintain hygiene and prevent odors.
- **Child Safety Lock:** Activates to prevent accidental changes to settings or opening of the door during operation.

4.5 Starting a Wash Cycle

After selecting the program and any desired options, press the Start/Pause button to begin the wash cycle. The machine will automatically proceed through the selected program.

4.6 Ending a Wash Cycle

Once the wash cycle is complete, the machine will signal its completion. Wait for the door lock to release before opening the door and removing your laundry.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine. Always unplug the appliance before performing any cleaning or maintenance tasks.

5.1 Cleaning the Drum

Use the dedicated Drum Cleaning program periodically to remove detergent residues and prevent odor buildup. Follow the instructions for this specific program.

5.2 Cleaning the Detergent Dispenser

Remove the detergent drawer and rinse it under running water to clear any accumulated detergent or softener residues. Clean the housing of the drawer with a brush if necessary.

5.3 Cleaning the Filter

Locate the drain pump filter, usually at the bottom front of the machine. Place a shallow container underneath to catch any residual water. Unscrew the filter, remove any lint or foreign objects, rinse it, and screw it back in securely.

5.4 Exterior Cleaning

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting customer service, review the following common issues and their potential solutions:

- **Machine does not start:** Ensure the power cord is plugged in, the door is closed properly, and the Start/Pause button has been pressed. Check if the child safety lock is active.
- **No water filling:** Check if the water tap is open and the water inlet hose is not kinked or blocked.
- **Water not draining:** Inspect the drain hose for kinks or blockages. Clean the drain pump filter.
- **Excessive vibration/noise:** Ensure the machine is level and all transit bolts have been removed during installation. Distribute laundry evenly in the drum.
- **Poor washing results:** Check detergent dosage, selected program, and water temperature. Do not overload the machine.

If the problem persists after attempting these solutions, please contact qualified service personnel.

7. SPECIFICATIONS

Brand	PKM
Model Number	WA6-ES1510
Capacity	6 Kilograms
Spin Speed	1000 rpm
Noise Level	75 Decibels
Dimensions (D x W x H)	49.5 x 60 x 84 cm
Weight	54 Kilograms

Voltage	220 Volts
Number of Programs	15
Installation Type	Freestanding
Loading Type	Front-load
Special Features	Drum Cleaning, Child Safety, Steam Function
Material	Metal
Color	White
Energy Efficiency Class	E
Energy Consumption (per 100 cycles)	74 kWh
Water Consumption (per cycle)	43 Liters



ENERG ⚡



PKM


WA6-ES1510




74 kWh / (100)



6,0 kg

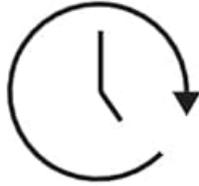

3:18

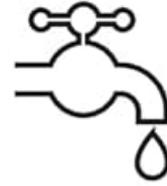

43 L



ABC**D**EFG



AB**C**D

2019/2014

Image: Energy label for the PKM WA6-ES1510 washing machine, indicating an energy efficiency class E, 74 kWh per 100 cycles, 6.0 kg capacity, 43 liters water consumption, and 78 dB noise level.

For more details, refer to the official EPREL database: <https://eprel.ec.europa.eu/qr/1224344>

8. WARRANTY AND SUPPORT

Specific warranty terms and conditions for the PKM WA6-ES1510 washing machine are typically provided in a separate warranty document included with your purchase or available on the manufacturer's official website. Please retain your proof of purchase for warranty claims.

For technical support, service requests, or inquiries regarding spare parts, please contact your retailer or the PKM customer service department. Information regarding spare parts availability is not provided in this document.