

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Beko](#) /
- › [Beko B5WFT59415W 9kg 1400rpm Washing Machine User Manual](#)

Beko B3WFT59415W

Beko B5WFT59415W 9kg 1400rpm Washing Machine User Manual

Model: B3WFT59415W

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Beko B5WFT59415W washing machine. Please read these instructions carefully before installation, first use, and maintenance. Keep this manual for future reference.

2. SAFETY INFORMATION

- Ensure the appliance is unplugged before any cleaning or maintenance.
- Do not allow children to play with the appliance.
- The appliance must be connected to a grounded outlet.
- Do not operate the machine if the power cord or plug is damaged.
- Never force the door open during operation.
- Keep packaging materials away from children.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your washing machine.



Figure 3.1: Front view of the Beko B5WFT59415W washing machine, showing the control panel, detergent drawer, and main drum door.



Figure 3.2: The washing machine with its large, black-rimmed door open, revealing the stainless steel drum inside.



Figure 3.3: Close-up view of the detergent drawer, showing compartments for pre-wash, main wash, and fabric softener, with a 'MAX' indicator.



Figure 3.4: Detailed view of the control panel, featuring a program selection knob, digital display, and touch buttons for various functions like SteamTherapy, temperature, spin speed, and delay start.

4. SETUP AND INSTALLATION

4.1 Unpacking

Remove all packaging materials, including the polystyrene base and any protective films. Inspect the machine for any damage. Keep packaging materials for potential future transport.

4.2 Removing Transit Bolts

Before operating, remove the transit bolts located at the rear of the machine. These bolts secure the drum during transport. Failure to remove them will cause excessive vibration and damage. Use the provided wrench to loosen and remove them, then cover the holes with the plastic caps supplied.

4.3 Leveling the Machine

Adjust the feet at the bottom of the machine until it is perfectly level and stable. Use a spirit level to ensure accuracy. A level machine reduces vibration and noise during operation.

4.4 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connections are tight to prevent leaks. Do not use old hoses; always use the new hoses supplied with the appliance.

4.5 Drain Hose Connection

Securely attach the drain hose to a standpipe or over the edge of a sink, ensuring it is at a height between 60 cm and 100 cm from the floor. The end of the hose must not be submerged in water to prevent siphoning.

4.6 Electrical Connection

Plug the machine into a grounded electrical outlet. Ensure the voltage and frequency specified on the rating plate match your local power supply. Do not use extension cords or multi-plugs.

5. OPERATING INSTRUCTIONS

5.1 Preparing Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Check garment care labels for washing instructions.
- Empty pockets and close zippers and hooks to prevent damage.

5.2 Loading Laundry

Open the loading door and place laundry loosely into the drum. Do not overload the machine; leave enough space for clothes to tumble freely. The maximum capacity for this model is 9 kg.

5.3 Adding Detergent and Additives

Pull out the detergent drawer (refer to Figure 3.3). Add detergent to the main wash compartment (II) and fabric softener to the designated compartment (flower symbol). If using pre-wash, add detergent to compartment (I). Follow detergent manufacturer's recommendations for dosage.

5.4 Selecting a Program

Turn the program selection knob (refer to Figure 3.4) to choose the desired wash program. Available programs include:

- **SteamTherapy:** For refreshing clothes and reducing wrinkles.
- **Cottons/Algodoes:** For durable cotton items.
- **Eco 40-60:** Energy-efficient program for normally soiled cottons.
- **Synthetics:** For synthetic and mixed fabrics.
- **Quick 28'/14':** Fast wash for lightly soiled items.
- **Delicates:** For delicate items requiring gentle care.
- **Bulky Items:** For larger items like blankets or duvets.
- **Rinse & Spin:** For rinsing and spinning items separately.
- **Spin + Drain:** For draining water and spinning laundry.

5.5 Adjusting Program Settings

After selecting a program, you can adjust settings such as temperature, spin speed, and add auxiliary functions (e.g., pre-wash, extra rinse, delay start) using the buttons on the control panel. The digital display will show the selected settings and remaining time.

5.6 Starting the Wash Cycle

Press the Start/Pause button to begin the selected wash program. The door will lock, and the machine will start filling with water.

5.7 Ending the Cycle

Once the program is complete, the machine will signal with an audible alert and/or a message on the display. The door will unlock after a short delay. Remove laundry promptly to prevent wrinkles.

6. MAINTENANCE AND CLEANING

6.1 Cleaning the Detergent Drawer

Periodically remove the detergent drawer and clean it under running water to remove any detergent residue. Use a brush if necessary. Reinsert the drawer once clean and dry.

6.2 Cleaning the Door Seal

Wipe the rubber door seal after each wash to remove lint, dirt, and moisture. This prevents mold growth and unpleasant odors.

6.3 Cleaning the Pump Filter

The pump filter should be cleaned regularly (every few months or if drainage issues occur). Open the small cover at the bottom front of the machine, place a shallow container underneath to catch water, and slowly unscrew the filter. Remove any debris and clean the filter under running water. Reinsert and tighten securely.

6.4 Cleaning the Water Inlet Filters

If water filling is slow, the water inlet filters may be clogged. Close the water tap, disconnect the inlet hose, and clean the filters located at the tap end and the machine end of the hose using a small brush or pliers. Reconnect securely.

6.5 Descaling

In areas with hard water, descaling may be necessary. Use a suitable descaling agent specifically designed for washing machines, following the product's instructions.

6.6 Winter Storage

If the machine is to be stored in an unheated area during winter, drain all remaining water from the machine to prevent freezing and damage. Disconnect water hoses and run a drain cycle if possible.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	No power; door not closed; Start/Pause not pressed.	Check power supply; ensure door is latched; press Start/Pause.
Water not filling	Water tap closed; inlet hose kinked; inlet filter clogged.	Open water tap; straighten hose; clean inlet filters.
Water not draining	Drain hose kinked; pump filter clogged.	Straighten drain hose; clean pump filter.
Excessive vibration/noise	Transit bolts not removed; machine not level; uneven load.	Remove transit bolts; level the machine; redistribute laundry.
Poor wash results	Overloading; incorrect detergent dosage; wrong program.	Reduce load; adjust detergent; select appropriate program.

If problems persist after attempting these solutions, contact authorized service personnel.

8. SPECIFICATIONS

- **Brand:** Beko
- **Model Number:** B3WFT59415W
- **Capacity:** 9 Kilograms
- **Maximum Spin Speed:** 1400 RPM
- **Dimensions (L x W x H):** 50 x 50 x 28 cm
- **Weight:** 50 Kilograms
- **Interface Type:** Buttons
- **Cycle Options:** Normal, Bulky, Delicate Laundry, SteamTherapy, Eco 40-60, Synthetics, Quick 28'/14', Rinse & Spin, Spin + Drain

9. WARRANTY AND SUPPORT

Your Beko washing machine comes with a manufacturer's warranty. Please refer to the warranty card provided with your appliance for specific terms and conditions, including the warranty period and coverage details. For technical assistance, spare parts, or to schedule a service appointment, please contact Beko customer support or an authorized service center. Keep your purchase receipt as proof of purchase for warranty claims. For further information, you may visit the official Beko website or consult your retailer.