

Kärcher WD 1 Classic

Kärcher WD 1 Classic Multi-Purpose Wet-Dry Shop Vacuum Cleaner Instruction Manual

Model: WD 1 Classic (1.098-327.0)

1. INTRODUCTION

Welcome to the Kärcher WD 1 Classic instruction manual. This document provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new wet-dry vacuum cleaner.

1.1 Product Overview

The Kärcher WD 1 Classic is a versatile 4-gallon wet-dry shop vacuum designed for powerful cleaning of both fine and coarse dirt. It features a robust plastic container, a long reach with its power cord and suction hose, and a convenient blower function. Its compact design allows for space-saving storage.

1.2 What's in the Box

- Kärcher WD 1 Classic Wet-Dry Vacuum Cleaner Unit
- 5.9 ft. Suction Hose
- 2 x Extension Tubes (1.65 ft. each)
- Crevice Nozzle
- Wet/Dry Floor Nozzle
- Cloth Filter
- Foam Filter
- Fleece Filter Bag
- 16.4 ft. Power Cord

WD 1 CLASSIC FEATURES



Figure 1.1: Diagram illustrating the key features and components of the Kärcher WD 1 Classic.

2. SAFETY INFORMATION

Read all safety warnings and instructions before using the appliance. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

2.1 General Safety Guidelines

- Always ensure the power supply matches the voltage specified on the vacuum cleaner.
- Do not use the vacuum cleaner to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Always unplug the vacuum cleaner from the electrical outlet before making any adjustments, changing accessories, or storing the appliance.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.

- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.

2.2 California Proposition 65 Warning

WARNING: This product can expose you to chemicals including lead and Diisononyl phthalate, which are known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.

3. SETUP

3.1 Assembly

1. Unpack all components and ensure all parts listed in "What's in the Box" are present.
2. Attach the four wheels to the base of the vacuum cleaner for mobility.
3. Secure the suction hose to the inlet port on the front of the vacuum.
4. Connect the two extension tubes together, then attach them to the suction hose.
5. Attach the desired nozzle (floor nozzle or crevice nozzle) to the end of the extension tubes.



Figure 3.1: The Kärcher WD 1 Classic wet-dry vacuum cleaner with its main components assembled.

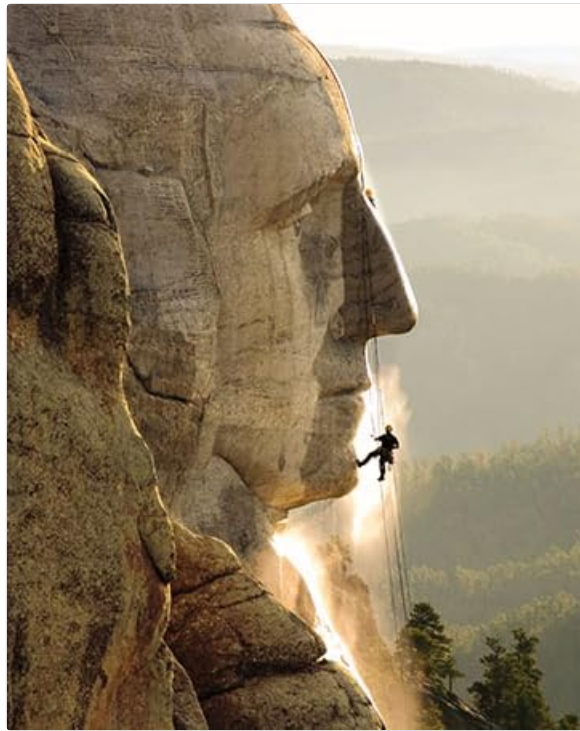


Figure 3.2: The vacuum cleaner features integrated storage for tubes and nozzles on its lid.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

To turn the vacuum cleaner on or off, locate the power switch on the top of the unit.

4.2 Wet and Dry Vacuuming

The Kärcher WD 1 Classic is designed for both wet and dry applications.

4.2.1 Dry Vacuuming

For dry dirt, ensure the fleece filter bag and cloth filter are correctly installed. The powerful 900W motor effectively picks up fine and coarse dry debris.



The wet and dry vacuum removes both fine particles and coarse dirt.

Figure 4.1: The wet and dry vacuum effectively removes both fine particles and coarse dirt from various surfaces.

4.2.2 Wet Vacuuming

For wet spills, remove the fleece filter bag and ensure only the foam filter is in place. The vacuum can handle liquids efficiently.



Even liquids and wet dirt are no problem for the compact vacuum cleaner.

Figure 4.2: Even liquids and wet dirt are no problem for the compact vacuum cleaner.

4.3 Blower Function

The integrated blower function is useful for clearing debris from hard-to-reach areas where vacuuming is not feasible. To activate the blower function, detach the suction hose from the inlet port and connect it to the blower port, typically located on the rear or side of the unit.



Figure 4.3: The blower function allows for clearing debris from inaccessible areas.

4.4 Versatile Application

The Kärcher WD 1 Classic is robust and functional, suitable for various cleaning tasks including household use, garage and workshop cleaning, small renovations, and car interior detailing.



The Kärcher WD 1 Classic is a practical helper for cleaning the inside of cars.

Figure 4.4: The Kärcher WD 1 Classic is a practical helper for cleaning the inside of cars.

5. MAINTENANCE

5.1 Filter Exchange and Cleaning

Regular cleaning and replacement of filters are crucial for maintaining optimal suction power and extending the life of your vacuum cleaner.

The cloth filter and foam filter can be easily accessed and exchanged by releasing the clips on top of the device and lifting the motor head.



The included cloth and foam filters can be easily exchanged and accessed through the clips on top of the device.

Figure 5.1: The included cloth and foam filters can be easily exchanged and accessed through the clips on top of the device.

5.1.1 Cleaning the Container

After wet vacuuming, empty and clean the 4-gallon plastic container to prevent mold and odors. Ensure the container is dry before storing or using for dry vacuuming again.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Low Suction Power	Clogged filter or full dust bag/container.	Check and clean/replace filters. Empty the container.

Problem	Possible Cause	Solution
Vacuum not turning on	No power supply or damaged cord/plug.	Check power outlet and cord. Ensure plug is fully inserted.
Unusual Noise	Obstruction in hose or nozzle.	Turn off and unplug. Check hose and nozzles for blockages.
Dust escaping from unit	Filter not properly installed or damaged.	Ensure filters are correctly seated. Replace damaged filters.

7. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Kärcher
Model Name	WD 1 Classic
Item Model Number	1.098-327.0
Capacity	4 Gallons
Wattage	900 watts
Motor Horsepower	1.34 horsepower
Hose Length	5.9 Feet
Cord Length	16.4 Feet
Product Dimensions (L x W x H)	13" x 13.8" x 18.1"
Item Weight	11.88 pounds
Noise Level	68 dB
Filter Type	Cloth, Foam
Special Feature	Blower Function, Wet/Dry
Color	Yellow
Indoor/Outdoor Usage	Indoor
Number of Wheels	4
Control Method	Touch

Feature	Detail
UPC	886622041306

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Kärcher website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

You can visit the Kärcher Store for more products and information:[Kärcher Official Store](#).

© 2025 Kärcher. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question