

## EXFIT BCS-700 Pro

# EXFIT BCS-700 Pro Bluetooth Neckband Wireless Headphones

Model: BCS-700 Pro

### 1. SAFETY INFORMATION

Please read and follow all safety instructions before using this product to prevent injury or damage.

- Do not expose the headphones to extreme temperatures or humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep away from water and liquids to prevent damage.
- Do not attempt to disassemble or modify the headphones.
- Use only the provided charging cable or a certified equivalent.
- Do not use the headphones at high volume for extended periods to avoid hearing damage.

### 2. PACKAGE CONTENTS

Verify that all items are present in the package:

- EXFIT BCS-700 Pro Bluetooth Neckband Wireless Headphones
- USB-C Charging Cable
- User Manual
- Eartips (various sizes)

### 3. PRODUCT OVERVIEW

The EXFIT BCS-700 Pro features a flexible neckband design with retractable earbuds for convenience and comfort. Key features include:

- **Auto Answer:** Accept calls by pulling the earbud.

- **Audio Transparency:** Hear ambient sounds while listening to audio.
- **Multi-Point Connectivity:** Connect to two Bluetooth devices simultaneously.
- **HD Voice & Vibration Alerts:** Clear calls and incoming call notifications.
- **Long Battery Life:** Up to 23 hours playtime, with fast charging.



Figure 3.1: EXFIT BCS-700 Pro Neckband Wireless Headphones. This image shows the overall design of the headphones, featuring a flexible neckband and retractable earbuds.



Figure 3.2: User-friendly and Intuitive Control Buttons. This image highlights the location of the Power Key, Ambient Mode Key (Audio Transparency), Vol(Seek) Jog Key, and Multi-Function Button (MFB) on the neckband.

## 4. SETUP

### 4.1 Charging the Headphones

Before first use, fully charge your headphones. A full charge takes approximately 2 hours.

1. Locate the USB-C charging port on the neckband.
2. Open the rubber flap covering the port.
3. Connect the provided USB-C cable to the charging port and the other end to a USB power source (5V/1A recommended).
4. The LED indicator will show charging status.
5. Once fully charged, disconnect the cable and close the rubber flap.

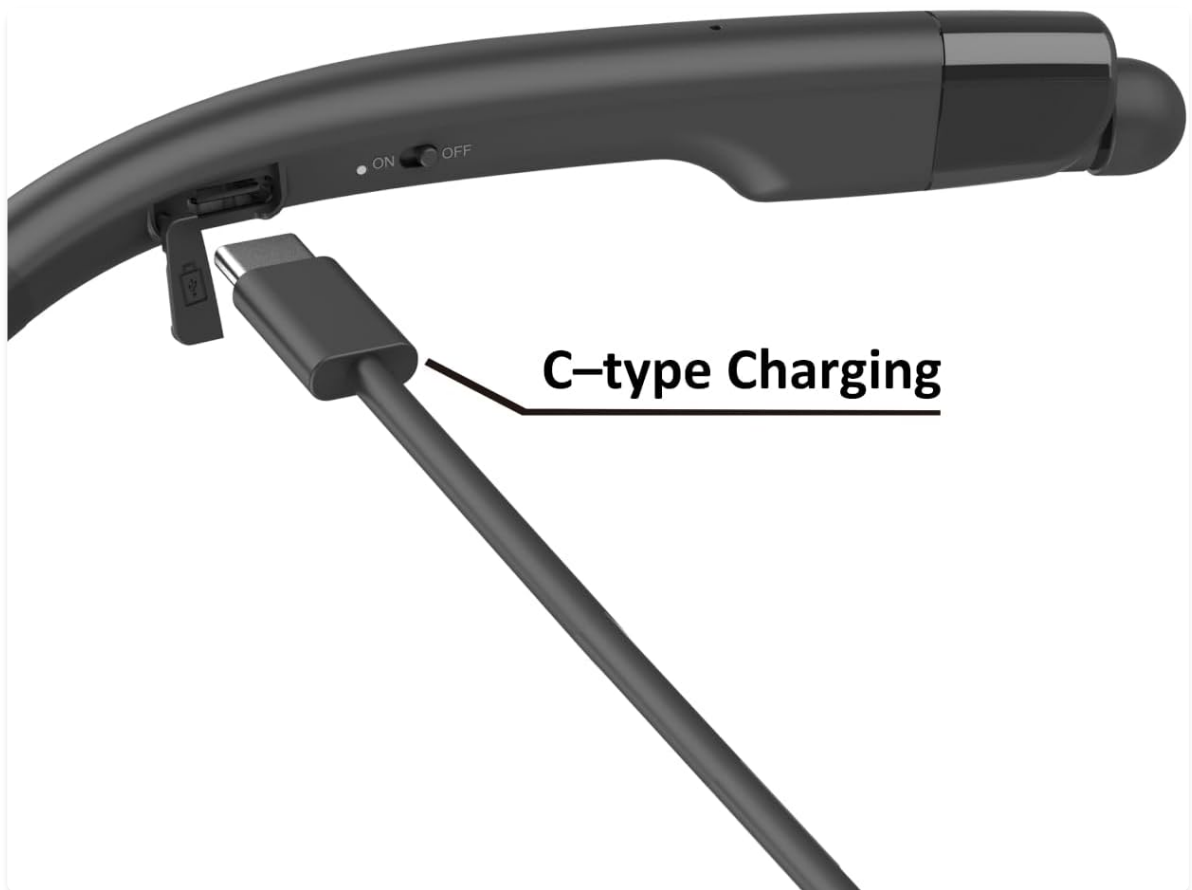


Figure 4.1: USB-C Type Charging. This image illustrates how to connect the USB-C cable to the charging port on the neckband.

## 4.2 Bluetooth Pairing

Pair your headphones with your device for wireless audio.

1. Ensure the headphones are charged and powered off.
2. Slide the Power Key to the 'ON' position. The headphones will enter pairing mode, indicated by flashing red and blue LED lights.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "BCS-700 Pro" from the list of devices.
5. Once connected, the LED indicator will stop flashing and remain solid blue. A voice prompt will confirm the connection.

**Swift Pair:** For compatible devices, the headphones may automatically prompt for connection upon powering on.



## Convenient and fast! Auto pair with the computer with Swift Pairing

Figure 4.2: Swift Pair Functionality. This image shows a laptop screen displaying a prompt to connect to the "New BCS-700 Pro" device, demonstrating the swift pairing feature.

## 5. OPERATING INSTRUCTIONS

### 5.1 Call Functions

- **Auto Answer:** When an incoming call is received, simply pull out an earbud from its housing to automatically answer the call.
- **End Call:** Reinsert the earbud into its housing to automatically end the call.
- **Manual Answer/End:** Press the Multi-Function Button (MFB) once to answer or end a call.
- **Reject Call:** Press and hold the MFB for 2 seconds to reject an incoming call.
- **Redial Last Number:** Double-press the MFB to redial the last dialed number.
- **Multi-Point Connection:** The BCS-700 Pro can connect to two Bluetooth devices simultaneously. If a call comes in on the second device while you're on a call with the first, you can switch between calls using the MFB.

### 5.2 Music Playback

- **Play/Pause:** Press the MFB once to play or pause music.
- **Volume Control:** Use the Vol(Seek) Jog Key to adjust volume. Slide up for volume up, slide down for volume down.
- **Track Skip:** Press and hold the Vol(Seek) Jog Key upwards to skip to the next track. Press and

hold downwards to go to the previous track.

- **EQ Modes:** Double-press the Vol(Seek) Jog Key downwards to cycle through 4 EQ sound modes (Signature, Bass, Treble, Natural).

### 5.3 Special Modes

- **Audio Transparency Mode:** Slide the Ambient Mode Key (Audio Transparency) to activate or deactivate this mode. This allows you to hear your surroundings while listening to audio.
- **Game Mode (Low Latency):** The headphones feature a low latency mode for gaming. Refer to the device's specific instructions for activation, if available.



Figure 5.1: Audio Transparency Switch. This image shows the location of the switch to activate or deactivate the ambient sound feature, allowing users to hear their surroundings.

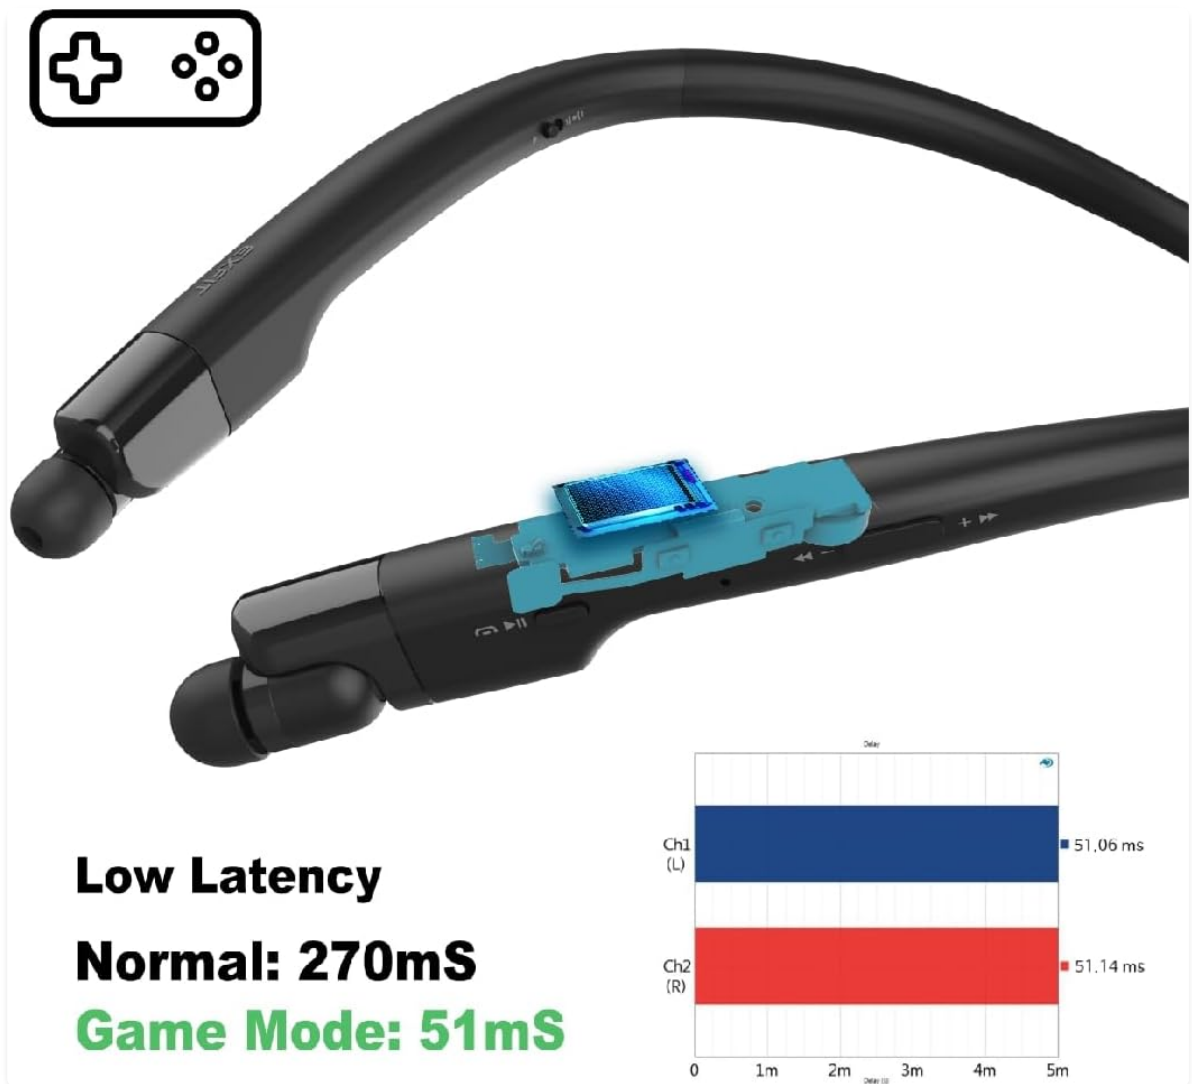


Figure 5.2: Low Latency Game Mode. This image illustrates the low latency performance of the headphones, highlighting the reduced delay in Game Mode compared to Normal mode.

#### 5.4 Retractable Earbuds

The earbuds feature an auto-retractable mechanism for easy storage and tangle-free use.

1. To extend: Gently pull the earbuds out to the desired length.
2. To retract: Press the Retract Button located on the side of the earbud housing. Guide the earbud back into the housing slowly to prevent damage.



Figure 5.3: Auto Retractable Unit. This image shows the detecting sensor and the auto-retractable unit, indicating how pulling the earbud accepts a call and retracting it declines or pauses music.

Your browser does not support the video tag.

Video 5.1: Retractable Wire Module Endurance Test. This video demonstrates the durability and functionality of the retractable earbud mechanism through an endurance test.

## 6. MAINTENANCE

- **Cleaning:** Wipe the headphones with a soft, dry cloth. Do not use abrasive cleaners.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures. When retracting earbuds, ensure they are guided gently to prevent damage to the wire mechanism.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge regularly.



## 7. TROUBLESHOOTING

Problem	Solution
Cannot power on	Ensure the headphones are fully charged.
Cannot pair via Bluetooth	Ensure headphones are in pairing mode (flashing red/blue LED). Turn off and on Bluetooth on your device. Try pairing with another device.
No sound or low volume	Check volume levels on both headphones and connected device. Ensure headphones are properly connected.
Earbuds not retracting smoothly	Gently guide the earbuds back into the housing while pressing the retract button. Avoid forcing them.

## 8. SPECIFICATIONS

- **Model Name:** BCS-700 Pro Black
- **Brand:** EXFIT
- **Connectivity Technology:** Bluetooth 5.2
- **Bluetooth Range:** 10 Meters
- **Battery Life:** Up to 23 Hours (Music Playtime)
- **Charging Time:** 2 Hours
- **Headphones Jack:** USB C Type
- **Audio Driver Size:** 8 Millimeters
- **Noise Control:** Sound Isolation, Noise Cancellation, Ambient Sound Mode
- **Water Resistance Level:** Water Resistant
- **Item Weight:** 3.53 ounces (100 Grams)
- **Manufacturer:** Bluecom
- **UPC:** 810008070802



## Extraordinary Battery Performance

**23 hours** Playback time

**3 hours** of use on a **10 minutes** **FAST Charge**

**\*Note:** It may different depends on the use condition

Figure 8.1: Extraordinary Battery Performance. This image highlights the 23 hours of playback time and the fast charging capability, providing 3 hours of use from a 10-minute charge.

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included in your package or contact the manufacturer directly.

**Manufacturer:** Bluecom

Please retain your proof of purchase for warranty claims.