

N2QAHB000045 / N2QAHB000036 Compatible Remote

Generic Replacement Remote Control User Manual

Compatible with Panasonic N2QAHB000045, N2QAHB000036, SA-AK520, SA-AK523, SA-AK320, SA-AK323 Micro CD Stereo Audio Systems

1. INTRODUCTION

This manual provides instructions for the use and care of your new Generic Replacement Remote Control. This remote is designed to be compatible with various Panasonic Micro CD Stereo Audio Systems, including models N2QAHB000045, N2QAHB000036, SA-AK520, SA-AK523, SA-AK320, and SA-AK323.

The remote control is pre-programmed and requires no additional setup or coding. Simply insert the batteries, and it will be ready for immediate use with your compatible audio system.



Figure 1: Front view of the Generic Replacement Remote Control. This image displays the layout of all buttons, including power, disc, tuner, volume, and navigation controls.

2. SETUP: BATTERY INSTALLATION

The remote control requires two (2) AA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two new AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready for use. No programming is required.



Figure 2: Back view of the remote control with the battery compartment open, showing where to insert the two AA batteries.

3. OPERATING INSTRUCTIONS

This remote control provides full functionality for your compatible Panasonic Micro CD Stereo Audio System. Point the remote directly at the audio system's infrared receiver for optimal performance.

Basic Functions:

- **Power (Red Button, Top Right):** Turns the audio system on or off.
- **DISC (Top Left):** Selects the CD player function.
- **TUNER / BAND:** Selects the radio tuner function and switches between AM/FM bands.
- **CD / IN:** Selects the CD input or other auxiliary input.
- **TAPE:** Selects the tape deck function.
- **AUX:** Selects the auxiliary input.
- **VOL +/- (Volume Up/Down):** Adjusts the master volume level.
- **Muting:** Mutes or unmutes the audio output.
- **Number Buttons (0-9, +10):** Used for direct track selection on CD or direct station tuning on radio.

Playback Controls:

- **PLAY MODE:** Cycles through different playback modes (e.g., normal, repeat, random).
- **REPEAT:** Repeats the current track or entire disc.
- **PROGRAM:** Enters program mode for custom track sequences.
- **DEL (Delete):** Used in program mode to remove tracks.

- **Play/Pause (Triangle/Two Vertical Bars):** Starts or pauses playback.
- **Stop (Square):** Stops playback.
- **Skip (Double Arrows):** Skips to the next or previous track/station.
- **Search (Double Arrows with Line):** Fast forwards or rewinds within a track.

Additional Functions:

- **AUTO OFF / CLOCK / SLEEP:** Controls auto-off timer, clock settings, and sleep timer.
- **CD DISP / DIMER:** Adjusts CD display information or display brightness.
- **S.SOUND EQ / PRESET EQ:** Cycles through sound equalizer presets.
- **INTRO / MARKER:** Plays the beginning of each track or sets markers.
- **ALBUM:** Navigates between albums on compatible discs.
- **CURSOR (Up/Down/Left/Right) / ENTER:** Used for menu navigation and selection.

4. MAINTENANCE

Cleaning:

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface and buttons.

Battery Care:

- If the remote control will not be used for an extended period (e.g., one month or more), remove the batteries to prevent leakage and potential damage to the remote.
- Replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote is not responding:**
 - Ensure new AA batteries are correctly installed with the proper polarity (+/-).
 - Check if the batteries are depleted and replace them if necessary.
 - Verify there are no obstructions between the remote control and the audio system's infrared receiver.
 - Ensure you are within the effective range of the audio system.
- **Remote functions are incorrect:**
 - Confirm that your audio system model is listed as compatible (N2QAHB000045, N2QAHB000036, SA-AK520, SA-AK523, SA-AK320, SA-AK323).
 - This remote is pre-programmed and does not require manual setup. If functions are incorrect, it may indicate an incompatibility or a faulty unit.

6. SPECIFICATIONS

Brand	Generic
-------	---------

Compatible Models	Panasonic N2QAHB000045, N2QAHB000036, SA-AK520, SA-AK523, SA-AK320, SA-AK323
Power Source	2 x AA Batteries (not included)
Connectivity Technology	Infrared (IR)
Special Feature	No Programming Required
Max Number of Supported Devices	1 (one audio system)

7. WARRANTY AND SUPPORT

Specific warranty information and direct manufacturer support details for this generic replacement remote control are not provided in the product documentation. For any issues or inquiries, please refer to the retailer or point of purchase for their return and support policies.

