

[manuals.plus](#) /

› [CrossBeats](#) /

› [CrossBeats Blaze B24 Bluetooth Soundbar User Manual](#)

CrossBeats Blaze B24

CrossBeats Blaze B24 Bluetooth Soundbar User Manual

Model: Blaze B24

1. INTRODUCTION

Thank you for choosing the CrossBeats Blaze B24 Bluetooth Soundbar. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and longevity.



Image 1.1: The CrossBeats Blaze B24 Bluetooth Soundbar, showcasing its sleek design and RGB lighting.

2. WHAT'S IN THE Box

Please verify that all items are present in the package:

- Blaze Soundbar
- User Manual Card
- Aux cable
- Charging Cable
- Warranty Card

3. PRODUCT OVERVIEW

3.1 Controls and Ports

Designed with Sophistication



Image 3.1: Top panel controls of the Blaze B24 Soundbar, including power, volume, and mode buttons.

The soundbar features intuitive controls and multiple connectivity options:

- **Power Button:** Press and hold to turn on/off.
- **Mode Button:** Short press to switch between Bluetooth, AUX, USB, SD Card, and FM modes.
- **Volume Up (+):** Short press for next track, long press to increase volume.
- **Volume Down (-):** Short press for previous track, long press to decrease volume.
- **Play/Pause Button:** Play or pause audio. In FM mode, long press to auto-scan.

Freedom of Control

 Bluetooth

 Aux cable

 USB port

 SD Card

 FM Support



Image 3.2: Rear panel ports of the Blaze B24 Soundbar, showing OFF/ON switch, AUX, USB, TF (SD Card), and DC5V charging input.

Connectivity Ports:

- **OFF/ON Switch:** Main power switch.
- **AUX Input:** For wired connection via 3.5mm audio cable.
- **USB Port:** For USB drive playback.
- **TF (SD Card) Slot:** For SD card playback.
- **DC5V Input:** For charging the soundbar.

4. SETUP

4.1 Charging the Soundbar

1. Connect the provided charging cable to the DC5V input port on the soundbar.
2. Connect the other end of the charging cable to a compatible USB power adapter (not included).
3. The LED indicator will show charging status. A full charge typically takes approximately 2 hours.

4.2 Power On/Off

1. Ensure the OFF/ON switch on the rear panel is in the 'ON' position.
2. Press and hold the Power button on the top panel for 2-3 seconds to turn the soundbar on or off.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Pairing

1. Turn on the soundbar. It will automatically enter Bluetooth pairing mode, indicated by a flashing 'BLUE' on the display.
2. Enable Bluetooth on your device (smartphone, tablet, PC).
3. Search for 'Blaze B24' in the list of available Bluetooth devices and select it to connect.
4. Once connected, the display will show a steady 'BLUE', and you will hear a confirmation tone.

5.2 AUX Mode

1. Connect one end of the 3.5mm AUX cable to the AUX input port on the soundbar.
2. Connect the other end of the AUX cable to the audio output jack of your device.
3. Press the Mode button on the soundbar until 'AUX' is displayed.

5.3 USB Playback

1. Insert a USB flash drive containing audio files into the USB port.
2. The soundbar will automatically switch to USB mode and begin playback. If not, press the Mode button until 'USB' is displayed.

5.4 SD Card Playback

1. Insert an SD card containing audio files into the TF (SD Card) slot.
2. The soundbar will automatically switch to SD card mode and begin playback. If not, press the Mode button until 'SD' is displayed.

5.5 FM Radio

1. Press the Mode button until 'FM' is displayed.
2. Long press the Play/Pause button to initiate an automatic scan for available FM stations. The soundbar will save detected stations.
3. Use the Volume Up (+) and Volume Down (-) buttons to navigate between saved stations.



Blaze Soundbar

Never Let the Beat Drop



Image 5.1: The Blaze B24 Soundbar operating in FM mode, showing the current frequency on its display.

5.6 TWS (True Wireless Stereo) Pairing

To pair two Blaze B24 soundbars for a stereo experience:

1. Ensure both Blaze B24 soundbars are powered on and in Bluetooth mode, but not connected to any device.
2. On one of the soundbars (this will be the primary unit), long press the Mode button until you hear a pairing tone.
3. The two soundbars will automatically connect to each other. Once connected, you will hear a confirmation tone, and the primary unit's display will show 'BLUE' while the secondary unit's display will be off or show a different indicator.
4. Now, connect your device to the primary soundbar via Bluetooth as described in section 5.1. Audio will play through both soundbars in stereo.

Listen Alone or Together

Supports TWS Pairing



Image 5.2: Two Blaze B24 Soundbars demonstrating True Wireless Stereo (TWS) pairing for an enhanced audio experience.

5.7 RGB Lights Control

The soundbar features customizable RGB lights. Use the dedicated light control button (if available, or refer to the specific button on your unit) to cycle through different light modes or turn them off. The control button on the sound bar allows you to turn on and off the LED light.

6. MAINTENANCE

To ensure the longevity and optimal performance of your CrossBeats Blaze B24 Soundbar, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surface of the soundbar. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** Store the soundbar in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Water Resistance:** The soundbar is water-resistant, not waterproof. Avoid submerging it in water or exposing it to heavy rain.
- **Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. Charge it regularly,

even if not in constant use.

7. TROUBLESHOOTING

If you encounter issues with your soundbar, refer to the following common problems and solutions:

- **No Power:**

- Ensure the OFF/ON switch is in the 'ON' position.
- Check if the soundbar is charged. Connect it to a power source using the charging cable.
- Press and hold the Power button for 2-3 seconds.

- **No Sound:**

- Increase the volume on both the soundbar and your connected device.
- Ensure the correct input mode (Bluetooth, AUX, USB, SD, FM) is selected.
- For Bluetooth, ensure the device is properly paired and within range (up to 10 meters).
- For AUX, check the cable connection and ensure it is fully inserted.

- **Bluetooth Disconnection:**

- Move your device closer to the soundbar.
- Turn off and on the soundbar and your device's Bluetooth, then try pairing again.
- Clear the 'Blaze B24' from your device's Bluetooth history and re-pair.

- **Poor FM Reception:**

- Relocate the soundbar to an area with better signal reception.
- Perform an auto-scan again to refresh the station list.

- **Crackling Sound (USB/SD):**

- Ensure the USB drive or SD card is properly inserted.
- Try a different USB drive or SD card.
- Check the audio file format for compatibility.

8. SPECIFICATIONS



Image 8.1: Dimensions of the CrossBeats Blaze B24 Soundbar: 20.1cm (W) x 5.5cm (D) x 6.5cm (H).

Feature	Detail
Model Name	Blaze B24
Speaker Type	Soundbar
Output Power	24 Watts RMS
Connectivity Technology	Bluetooth, AUX, USB, SD Card, FM
Wireless Communication	Bluetooth
Bluetooth Range	10 Metres
Frequency Response	20000 Hz
Signal-to-Noise Ratio	85 dB
Battery Type	Lithium Ion (1 included)

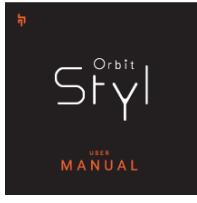
Feature	Detail
Battery Capacity	1200 mAh
Charging Time	2 Hours
Input Voltage	5 Volts (DC)
Product Dimensions	5.5D x 20.1W x 6.5H Centimeters
Item Weight	700 Grams
Material	ABS + PC
Water Resistance Level	Water Resistant
Special Features	Bass Boost, Built-in Microphone, Display, RGB Lights, TWS Support

9. WARRANTY & SUPPORT

The CrossBeats Blaze B24 Soundbar comes with a **1 Year Brand Warranty**. Please refer to the included Warranty Card for detailed terms and conditions.

For technical support, service, or warranty claims, please contact CrossBeats customer service through their official website or the contact information provided on your Warranty Card.

Related Documents - Blaze B24

	<p>Crossbeats Slice Quick Start Guide - User Manual</p> <p>Get started with your Crossbeats Slice wireless earbuds. This quick start guide provides essential information on overview, power on/off, pairing, mono mode, charging, reset, and controls for the CB-SLIDE model.</p>
	<p>CROSSBEATS LUMEX VISTA User Manual - Setup, Features, and Settings</p> <p>Comprehensive user manual for the CROSSBEATS LUMEX VISTA projector. Learn about setup, safety instructions, product overview, remote control, settings, screen mirroring, app usage, connectivity options, and troubleshooting.</p>
	<p>Orbit Styl User Manual - Crossbeats</p> <p>User manual for the Crossbeats Orbit Styl smartwatch, detailing its features, setup, and usage, including health monitoring, sports modes, and connectivity.</p>

	<p><u>Crossbeats Orbit APEX Smartwatch User Manual</u></p> <p>Comprehensive user manual for the Crossbeats Orbit APEX smartwatch, detailing its overview, special features, installation, charging, connectivity, various functionalities like health monitoring, sports tracking, notifications, and other features. Includes setup instructions and a disclaimer.</p>
	<p><u>CROSSBEATS LUMEX Projector User Manual: Setup, Features, and Settings</u></p> <p>Comprehensive user manual for the CROSSBEATS LUMEX projector, covering setup, safety instructions, remote control, settings, connectivity options, media playback, screen mirroring, and troubleshooting.</p>
	<p><u>CrossBeats ATOM User Manual: Features, Pairing, and Controls</u></p> <p>Comprehensive user manual for the CrossBeats ATOM true wireless earbuds. Learn about features, power management, Bluetooth pairing, LED indicators, charging, reset procedures, and touch controls.</p>