

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KNACKTOYZ](#) /
- › [KNACKTOYZ 11 Channel RC Forklift Instruction Manual](#)

KNACKTOYZ QH207-1D

KNACKTOYZ 11 Channel RC Forklift Instruction Manual

Model: QH207-1D

INTRODUCTION

Thank you for choosing the KNACKTOYZ 11 Channel RC Forklift. This highly simulated 1:24 scale construction truck toy offers a realistic and engaging play experience with its multi-directional movement, lifting capabilities, sound effects, lights, and unique spray function. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance and enjoyment of your RC forklift.

WHAT'S IN THE BOX

Please verify that all components are present before beginning setup:

- RC Forklift Truck
- Remote Control
- 2 x 3.7V/500mAh Rechargeable Lithium Polymer Batteries
- USB Charging Cable
- 2 x Wooden Boxes (simulated cargo)
- 1 x Pallet
- Water Dropper (for spray function)



Image: All components included in the KNACKTOYZ 11 Channel RC Forklift package.

SETUP

1. Battery Installation

- Forklift Battery:** Locate the battery compartment on the underside of the forklift. Open the cover, connect one of the 3.7V/500mAh rechargeable batteries, and securely close the compartment.

2. **Remote Control Batteries:** Open the battery compartment on the back of the remote control. Insert 2 x AA batteries (not included), ensuring correct polarity (+/-). Close the compartment.

2. Charging the Forklift Battery

- Connect the USB charging cable to the forklift battery.
- Plug the USB end into a standard USB power adapter (5V/1A recommended) or a computer USB port.
- The indicator light on the USB cable will show charging status (e.g., red for charging, off when fully charged).
- Charging typically takes approximately 60-90 minutes. Do not overcharge.
- Each fully charged battery provides approximately 20 minutes of playtime.

3. Filling Water for Spray Function

- Locate the water inlet on the top of the forklift, usually near the rear.
- Use the provided water dropper to carefully fill the water tank with clean tap water. Do not overfill.
- Securely close the water inlet cover after filling.



Image: Water inlet for the spray function, located on the top of the forklift.

OPERATING INSTRUCTIONS

Familiarize yourself with the remote control functions for optimal operation.

Remote Control Instructions



Image: Remote Control Layout and Functions.

Remote Control Functions:

Control	Function
Start/Off Button	Powers the forklift on or off.
Whistle Button	Activates the one-key whistle sound.
Auto Demo Button	Initiates an automatic demonstration sequence of the forklift's functions.
Sounds Button	Toggles various simulation sounds (e.g., engine, horn).
Spray Button	Activates the water spray function.
Left Joystick	Controls Fork Up (push up) and Fork Down (pull down).
Right Joystick	Controls Forward/Backward (push up/pull down) and Turn Left/Right (push left/right).
Switch	Main power switch for the remote control.

Basic Operation:

- Power On:** Turn on the remote control using its switch, then press the "Start/Off" button on the remote to power on the

forklift.

2. **Driving:** Use the **Right Joystick** to move the forklift forward, backward, left, and right.
3. **Forklift Arm Control:** Use the **Left Joystick** to raise or lower the forklift pallet.
4. **Sound and Light Effects:** Press the "Sounds" button to activate various realistic sound effects. The forklift also features cool lights that illuminate during operation.
5. **Spray Function:** Ensure the water tank is filled. Press the "Spray" button to activate the mist spray, simulating exhaust.
6. **One-Key Whistle:** Press the "Whistle" button for a quick horn sound.
7. **Auto Demo:** Press the "Auto Demo" button to see the forklift perform a pre-programmed sequence of movements and functions.



Image: Forklift lifting and lowering mechanism.



Image: Spray function and simulated sounds/lights in action.

MAINTENANCE

- **Cleaning:** Wipe the forklift and remote control with a soft, dry cloth. Do not use water or chemical cleaners, as this may damage electronic components.
- **Battery Care:**
 - Always remove batteries from the forklift and remote control when not in use for extended periods.
 - Store batteries in a cool, dry place.
 - Do not expose batteries to extreme temperatures or direct sunlight.
- **Storage:** Store the toy in a dry, cool place away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Forklift does not respond to remote.	Low batteries in forklift or remote; not powered on; not paired.	Charge/replace batteries. Ensure both forklift and remote are powered on. Re-pair by turning both off and then on again.
Weak movement or lifting.	Low forklift battery.	Recharge the forklift battery.
Spray function not working.	Water tank empty; nozzle clogged.	Refill water tank. Gently clear any obstruction from the spray nozzle.
Short playtime.	Battery not fully charged; old battery.	Ensure battery is fully charged. Consider replacing the battery if it's old and capacity has diminished.

SPECIFICATIONS

Feature	Detail
Product Dimensions	3.9 x 6.3 x 10 inches
Item Weight	1.72 pounds
Model Number	QH207-1D
Recommended Age	36 months - 12 years
Batteries	1 Lithium Polymer battery required (included), 2 x AA for remote (not included)
Channels	11 Channel
Scale	1:24 Scale
Material	ABS (100% non-toxic, no odor, BPA free)

WARRANTY AND SUPPORT

KNACKTOYZ is committed to providing high-quality products. If you encounter any issues or have questions regarding your 11 Channel RC Forklift, please contact our customer support team. Refer to your purchase documentation for specific warranty details and contact information.

For further assistance, visit the official KNACKTOYZ store on Amazon: [KNACKTOYZ Store](#)