

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bright Starts](#) /

› [Bright Starts Playful Paradise Portable Baby Swing Model 13069 Instruction Manual](#)

Bright Starts 13069

Bright Starts Playful Paradise Portable Compact Automatic Baby Swing Instruction Manual

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembling and using this product. Failure to follow these instructions could result in serious injury or death.

- Never leave child unattended.
- Always use the restraint system.
- Do not use this product once your child can sit up unaided or attempts to climb out.
- This product is not intended for prolonged periods of sleep.
- Maximum weight capacity: 20 lbs (9 kg).
- Ensure the swing is placed on a flat, level surface.
- Keep away from open flames, heaters, and other heat sources.
- Do not use accessories or replacement parts other than those approved by the manufacturer.

WHAT'S INCLUDED

Verify all components are present before assembly.

- Swing Frame (pre-assembled sections)
- Seat Pad
- Toy Bar with 2 Toys
- Instruction Manual

*Note: 4 C batteries are required for operation and are not included.

ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Bright Starts Playful Paradise Portable Swing.

Step 1: Unfold the Frame

Carefully unfold the swing frame until it locks into the open position. Ensure all legs are securely extended and

stable on a flat surface.



Image: The Bright Starts Playful Paradise Portable Swing shown fully assembled, highlighting its compact design and colorful seat pad with animal motifs.

Step 2: Attach the Seat Pad

Align the seat pad with the frame and secure it according to the fabric loops and attachments. Ensure the 5-point harness is correctly positioned.



Image: A detailed view of the swing's seat, showing the removable toy bar, WhisperQuiet motor, 10 melodies, and adjustable 5-point harness.

Step 3: Install Batteries

Locate the battery compartment, typically on the control unit. Insert 4 C batteries, ensuring correct polarity. Close the compartment securely.

Step 4: Attach the Toy Bar

Insert the toy bar into the designated slots on the swing frame until it clicks into place. The toy bar is designed to be easily removable for child access.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel for optimal use.

Control Panel Overview



Image: A diagram illustrating the swing's control panel, labeling the speed indicator, speed control buttons (+/-), sound control, time indicator, and timer control.

Power On/Off

Press the power button (usually indicated by a circle with a vertical line) to turn the swing on or off.

Adjusting Swing Speed

The swing features TrueSpeed technology with 6 speed settings. Use the '+' and '-' buttons on the control panel to increase or decrease the swing speed. The speed indicator lights will show the current setting.



TrueSpeed™ Technology maintains 6 speeds as baby grows

Image: A close-up of a hand pressing the power button on the control panel, with green lights indicating the TrueSpeed technology settings.

Music and Sounds

Press the music note button to cycle through 10 cheerful melodies. Use the volume buttons (often integrated with speed controls or separate) to adjust the sound level. The WhisperQuiet technology ensures minimal motor noise.

Timer Function

Activate the timer function by pressing the clock icon button. This allows you to set the swing to operate for a predetermined duration.

Recline Positions

The seat offers 2 recline positions for your baby's comfort. Adjust the recline by locating the recline mechanism, usually on the sides or underneath the seat, and following the instructions for adjustment.



**2-position recline
for baby's comfort**

Image: A baby in the swing, demonstrating the 2-position recline feature for enhanced comfort.

CARE AND MAINTENANCE

Proper care ensures the longevity and safety of your swing.

- **Seat Pad:** The seat pad is machine washable. Use cold water, gentle cycle. Do not bleach. Tumble dry low.
- **Frame:** Wipe the metal and plastic parts of the swing frame with a soft, clean cloth and mild soap. Air dry.
- **Toys:** Wipe clean with a damp cloth and mild soap.
- **Storage:** For compact storage or travel, the swing features an ultra-lightweight and foldable design. Fold the swing as instructed in the assembly section to minimize space.



Lightweight & compact design for on-the-go

Image: A person demonstrating how to fold the swing, emphasizing its lightweight and compact design for easy storage or transport.

TROUBLESHOOTING

Problem	Solution
Swing does not turn on.	Ensure batteries are inserted correctly with proper polarity. Replace old batteries with new 4 C batteries. Check if the power button is fully pressed.
Swing motion is weak or inconsistent.	Replace batteries. Ensure the swing is on a flat, level surface. Verify child's weight is within the specified limit (6-20 lbs / 3-9 kg).
Music/sounds are not working.	Check battery power. Adjust volume settings using the control panel.

Problem	Solution
Toy bar detaches easily.	Ensure the toy bar is fully inserted into its slots until it clicks.

SPECIFICATIONS

Feature	Detail
Brand	Bright Starts
Model Number	13069
Product Dimensions (Assembled)	28.74"D x 22.64"W x 26.77"H (73cm D x 57.51cm W x 68cm H)
Weight Range	6-20 lbs (3-9 kg)
Maximum Age	9 months
Frame Material	Plastic, Metal
Power Source	Battery Powered (4 C batteries, not included)
Swing Speeds	6 (TrueSpeed Technology)
Melodies	10
Recline Positions	2
Portability	Foldable, Lightweight



Max Age:

9 mos.

Weight Range:

6-20 lb / 3-9 kg

Image: The swing displayed with key dimensions (height, width, depth) and maximum age/weight range for user reference.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt for proof of purchase.

Manufacturer: Kids2, Inc.

Online resources may be available at www.brightstarts.com.

© 2023 Bright Starts. All rights reserved. This manual is for informational purposes only.

Related Documents - 13069


 <p>Playful Paradise™ Portable Swing Portable Swing - Colchoneta Portátil - Balancín Portátil Tragette Schaukel - Портативная Подушка - Andén Paradise</p> <p>brightstarts.com</p>	<p>Bright Starts Playful Paradise Portable Swing - User Manual and Safety Guide Comprehensive guide for the Bright Starts Playful Paradise Portable Swing, including safety warnings, assembly instructions, battery information, care, and usage details. This manual covers multiple languages for user convenience.</p>
 <p>Playful Paradise™ Vibrating Bouncer Bouncer - Asiento Vibrante - Balancín Vibrante - Шезлонг-Вибратор</p> <p>brightstarts.com</p>	<p>Bright Starts Playful Paradise Vibrating Bouncer User Manual and Safety Guide Comprehensive user manual for the Bright Starts Playful Paradise Vibrating Bouncer, including assembly instructions, safety warnings, care guidelines, and battery information.</p>
 <p>Playful Paradise™ Vibrating Bouncer Bouncer - Asiento Vibrante - Balancín Vibrante - Шезлонг-Вибратор</p> <p>brightstarts.com</p>	<p>Bright Starts Playful Paradise Vibrating Bouncer - Safety, Care, and Assembly Instructions Comprehensive guide for the Bright Starts Playful Paradise Vibrating Bouncer, covering safety warnings, assembly instructions, care and cleaning, battery information, and parts list. Ensure safe use for infants.</p>
 <p>Playful Paradise™ "Learn-to-Sit" "Purple Paradise™" "Learn-to-Sit"</p> <p>2 Position Floor Seat - 2 Asientos con Ruedas de Banda 2 Position Sit as a Sit - 2 Position Bodenstuhl 2 Asiento de Piso con Ruedas de Banda</p> <p>brightstarts.com</p>	<p>Bright Starts Playful Paradise Learn-to-Sit Floor Seat User Manual Comprehensive user manual for the Bright Starts Playful Paradise Learn-to-Sit 2-Position Floor Seat, including safety warnings, assembly instructions, care guidelines, and parts list.</p>
 <p>Rainforest Vibes Portable Swing™ Portable Swing - Colchoneta Portátil - Balancín Portátil Tragette Schaukel - Портативная Подушка - Andén Paradise</p> <p>brightstarts.com</p>	<p>Bright Starts Rainforest Vibes Portable Swing - User Manual and Safety Guide Comprehensive user manual and safety guide for the Bright Starts Rainforest Vibes Portable Swing (Model 12426-MEES), including assembly, care, battery information, and safety warnings.</p>



[Bright Starts SuperSeat Playful Paradise 3-in-1 Seat User Manual](#)

This document provides instructions and safety information for the Bright Starts SuperSeat Playful Paradise 3-in-1 Seat. It covers usage as a booster seat, floor seat, and activity floor seat, along with assembly, care, and cleaning guidelines. Safety warnings include risks of falls, strangulation, and burns.

Documents - Bright Starts – 13069

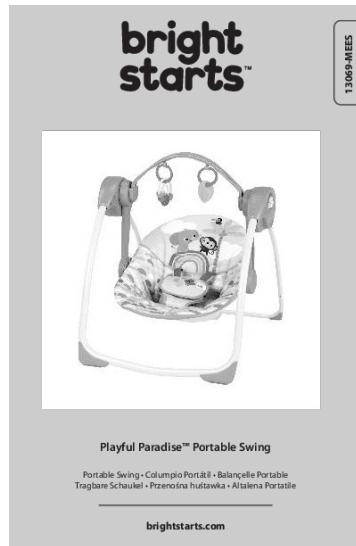

[Bright Starts Playful Paradise Portable Swing - User Manual and Safety Guide](#)

Comprehensive guide for the Bright Starts Playful Paradise Portable Swing, including safety warnings, assembly instructions, battery information, care, and usage details. This manual covers multiple languages for user convenience.

lang:en score:23 filesize: 2 M page_count: 32 document date: 2022-09-20