

INJUSA 327

INJUSA City Max Evolving Tricycle Instruction Manual

Model: 327

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your INJUSA City Max Evolving Tricycle, Model 327. Please read these instructions carefully before use and retain them for future reference. The INJUSA City Max Evolving Tricycle is designed to accompany children from 6 months to 3 years old. It features an aluminum frame, ergonomic footrests (removable), a storage basket with a lid, two bottle holders (bottles not included), and an adjustable parental steering handle. Key safety features include a brake, a safety harness, and a sun canopy. The tricycle also has an adjustable backrest and seat, non-slip pedals, rubber tread wheels, and a freewheel function.

Important Safety Warnings:

- To be used under adult supervision only.
- Do not use on public roads or near motor vehicles.
- Ensure all components are securely fastened before each use.
- Maximum supported weight: 25 kg.
- Recommended age range: 6 months to 3 years.

COMPONENTS OVERVIEW

Before assembly, ensure all parts listed below are present. If any parts are missing or damaged, please contact customer support.

- Tricycle Frame (Aluminum)
- Front Wheel with Pedals and Freewheel mechanism
- Rear Wheels (2)
- Seat with adjustable backrest and 5-point safety harness
- Parental Steering Handle (adjustable height)
- Sun Canopy
- Ergonomic Footrests (removable)
- Storage Basket with lid
- Bottle Holders (2)

- Assembly Hardware (screws, bolts, etc.)



Image: The INJUSA City Max Evolving Tricycle in white and black, shown with a baby seated and an adult supervising. This image provides an overall view of the tricycle's main components including the sun canopy, parental handle, and safety bar.

ASSEMBLY INSTRUCTIONS

Assembly is required. Please follow these steps carefully. It is recommended to have a second adult assist during certain steps.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the components list.
2. **Attach Rear Wheels:** Securely attach the two rear wheels to the tricycle frame using the provided hardware. Ensure they are firmly in place and rotate freely.
3. **Install Front Wheel and Pedals:** Insert the front wheel assembly into the designated slot on the frame. Attach the

- pedals. Ensure the freewheel mechanism is functional (allows pedals to remain stationary while the tricycle moves).
4. **Mount Seat and Backrest:** Position the seat onto the frame and secure it. Adjust the backrest to the desired recline level.
 5. **Attach Parental Steering Handle:** Insert the parental handle into the rear of the tricycle frame. Adjust its height for comfortable steering. Ensure the steering control mechanism is engaged.
 6. **Install Sun Canopy:** Attach the sun canopy to the designated points above the seat. Adjust its angle for optimal sun protection.
 7. **Attach Footrests:** If needed for younger children, attach the ergonomic footrests to the sides of the front wheel assembly. These can be removed later as the child grows.
 8. **Secure Storage Basket and Bottle Holders:** Attach the storage basket to the rear and the bottle holders to the handlebar or parental handle.
 9. **Final Check:** Before first use, double-check all screws, bolts, and connections to ensure they are tight and secure.



Image: A close-up view of the ergonomic footrest on the tricycle, designed for younger children. This component can be attached or removed during assembly based on the child's age and development stage.

OPERATING INSTRUCTIONS

For Younger Children (6 months - approx. 18 months):

- Ensure footrests are attached and the child's feet are comfortably placed on them.
- Secure the child using the 5-point safety harness.
- Use the parental steering handle to control direction and movement.
- Engage the freewheel function so pedals do not rotate with the wheel, preventing injury to the child's feet.
- Adjust the sun canopy to protect the child from direct sunlight.



Image: The adjustable sun canopy of the tricycle, shown in various positions to illustrate its flexibility in providing shade. This feature is crucial for protecting younger children from sun exposure.

For Older Children (approx. 18 months - 3 years):

- Remove the footrests if the child can reach the pedals comfortably.
- Disengage the freewheel function to allow the child to pedal independently.
- The parental handle can be removed once the child is confident in steering and pedaling on their own.
- Always ensure the safety harness is used until the child is fully capable of maintaining balance and control.



Image: A young child riding the INJUSA City Max Tricycle independently, demonstrating the tricycle's use for older children. The parental handle and footrests are likely removed in this configuration.

Braking:

The tricycle is equipped with a brake mechanism, typically located near the rear wheels or controlled via the parental handle. Engage the brake to stop the tricycle or to keep it stationary when parked.



Image: A detailed view of the tricycle's pedals and a rear wheel with rubber tread. This image highlights the non-slip design of the pedals and the durable construction of the wheels.

MAINTENANCE

Cleaning:

Clean the tricycle regularly with a damp cloth and mild soap. Avoid abrasive cleaners or solvents that could damage the materials. Rinse thoroughly and dry completely before storage.

Storage:

Store the tricycle in a dry, cool place, away from direct sunlight and extreme temperatures. Prolonged exposure to harsh weather conditions can degrade materials and components.

Inspections:

Periodically inspect all parts for wear, damage, or loose connections. Pay close attention to the wheels, pedals, steering mechanism, and safety harness. Replace any worn or damaged parts immediately. Ensure the freewheel mechanism is operating correctly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tricycle does not steer correctly with parental handle.	Steering mechanism disengaged or loose connection.	Check the connection between the parental handle and the front wheel steering rod. Ensure it is securely engaged.

Problem	Possible Cause	Solution
Pedals are not turning the front wheel.	Freewheel function is engaged.	Disengage the freewheel function (refer to assembly instructions for specific mechanism).
Tricycle feels unstable.	Loose assembly bolts or damaged frame.	Inspect all bolts and connections for tightness. Tighten as necessary. If the frame is damaged, discontinue use and contact support.
Wheels are squeaking.	Lack of lubrication or dirt in axle.	Clean the wheel axles and apply a small amount of silicone-based lubricant if necessary.

SPECIFICATIONS

Brand: INJUSA
Model Number: 327
Material: Metal, Plastic
Recommended Age: 6 months to 3 years
Item Weight: 9 kg
Product Dimensions (L x W x H): 118.5 cm x 49.5 cm x 110 cm
Handlebar Height: 61 cm
Seat Height (from ground): 40 cm
Maximum Weight Capacity: 25 kg
Assembly Required: Yes
Country of Origin: Spain

WARRANTY INFORMATION

This INJUSA product comes with a **3-year warranty** against manufacturing defects from the date of purchase. Please retain your proof of purchase for warranty claims.

INJUSA also offers spare parts availability for up to **10 years** after purchase. This ensures the longevity and continued enjoyment of your product.

The warranty does not cover damage resulting from misuse, neglect, accidents, unauthorized modifications, or normal wear and tear.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your INJUSA City Max Evolving Tricycle, please contact our customer support team:

Email: info@injusa.com / service@injusa.com
Phone: +34 96 555 08 62
Address: Industrial Juguetera S.A., Avenida Azorín 20, 03440 Ibi, Alicante, España



Image: INJUSA company logo and contact details, including address, phone, and email for customer inquiries.

© 2024 INJUSA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question