

Coby COBY-CD193BK

Coby Portable CD Player with MP3 Playback & FM Radio

MODEL: COBY-CD193BK USER MANUAL

Introduction

Thank you for purchasing the Coby Portable CD Player with MP3 Playback and FM Radio. This device is designed for on-the-go audio entertainment, offering clear sound and versatile playback options. Please read this manual thoroughly before using the product to ensure proper operation and to maximize your listening experience.

What's in the Box:

- Coby Portable CD Player (Model COBY-CD193BK)
- Foldable Headphones
- USB Power Cable



Image: The Coby Portable CD Player shown with its included foldable headphones and USB power cable.

Safety Information

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the unit to strong impacts.
- Do not disassemble the unit. Refer all servicing to qualified personnel.
- Keep the unit away from water and other liquids.
- Use only the specified power source (2 AA batteries or compatible power adapter, sold separately).
- Listening at high volume levels for extended periods can cause hearing damage.

Product Overview

Familiarize yourself with the components and controls of your Coby Portable CD Player.



Image: Top view of the Coby Portable CD Player, highlighting the control buttons and display.

Key Features:

- **60-Second Anti-Skip Protection:** Ensures uninterrupted playback during movement.
- **MP3 Playback:** Supports MP3 audio files on CD-R/RW discs.
- **FM Radio:** Built-in FM tuner for listening to radio stations.
- **Foldable Headphones:** Compact and adjustable for convenience.
- **Clear Sound and Super Bass:** Enhanced audio quality for an immersive experience.
- **User-Friendly Interface:** Simple controls for easy operation.

COBY



PORTABLE ANTI-SKIP

CD PLAYER WITH FOLDABLE HEADPHONES

BIG COMFORTABLE EAR CUSHIONS
TO GET INTO THE RHYTHM ON YOUR
COMMUTE OR TRAVELS.

Setup

Follow these steps to set up your CD player for first use.

1. Power Source Installation

The CD player operates on two (2) AA batteries (not included) or via a compatible power adapter (sold separately) connected to the USB port.

1. Open the battery compartment cover located on the bottom of the unit.
2. Insert two new AA batteries, ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.
4. Alternatively, connect a compatible USB power adapter (sold separately) to the unit's USB port for continuous power.



Image: Diagram illustrating the correct insertion of two AA batteries into the Coby Portable CD Player.

2. Connecting Headphones

1. Unfold the included headphones.
2. Insert the 3.5mm audio jack of the headphones into the "PHONE" jack on the side of the CD player.



Image: The foldable headphones included with the Coby Portable CD Player, shown in their compact form.

Operating Instructions

1. Playing a CD

1. Gently press the "OPEN" button or slide the latch to open the CD compartment lid.
2. Place a CD (audio CD or MP3 CD) onto the spindle with the label side facing up.
3. Close the CD compartment lid firmly until it clicks.
4. Press the **PLAY/PAUSE** button (▶) to start playback.
5. The display will show the track number and elapsed time.
6. To pause, press **PLAY/PAUSE** again. Press again to resume.
7. To skip to the next track, press the **NEXT** button (⏭).
8. To go back to the beginning of the current track or previous track, press the **PREVIOUS** button (⏮).
9. To fast forward or rewind within a track, press and hold the **NEXT** or **PREVIOUS** button.
10. To stop playback, press the **STOP** button (⏹).



Image: The Coby Portable CD Player with its lid open, revealing the CD spindle for disc insertion. The player supports standard audio CDs, CD-R, CD-RW, and MP3 CDs. The 60-second anti-skip protection helps prevent interruptions during active use.



Image: Graphic indicating the Coby Portable CD Player's compatibility with WAV, CDDA, MP3, and WMA CD formats.

2. Adjusting Volume

1. Use the **VOLUME +** and **VOLUME -** buttons (or rotary dial, if present) on the side of the unit to adjust the listening volume.

3. Using FM Radio

1. With the unit powered on, press the **MODE** button to switch to FM Radio mode.
2. The display will show the FM frequency.

- 3. Use the **NEXT** and **PREVIOUS** buttons to tune to different radio stations.
- 4. For automatic scanning and saving of stations, refer to the specific instructions for the **PROG** button (if available) in the quick start guide.

4. Connecting to External Speakers (Optional)

You can connect your CD player to external speakers using a 3.5mm AUX cable (not included).

- 1. Connect one end of the 3.5mm AUX cable to the "LINE OUT" or "AUX OUT" jack on the CD player (if available, otherwise use the headphone jack).
- 2. Connect the other end to the "AUX IN" or "LINE IN" jack on your external speakers.
- 3. Ensure the external speakers are powered on and set to the correct input.



Image: Illustration showing the Coby Portable CD Player connecting to external speakers using a 3.5mm AUX cable.

Maintenance

Proper care will extend the life of your CD player.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents. For the lens, use a specialized CD lens cleaner.
- **Disc Care:** Handle CDs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage. Store the unit in a cool, dry place away from dust.

Troubleshooting

If you encounter issues with your CD player, refer to the following common problems and solutions.

| Problem | Possible Cause | Solution |
|-------------------------|--|---|
| Unit does not power on. | Batteries are dead or incorrectly inserted. Power adapter not connected or faulty. | Replace batteries, ensuring correct polarity. Check power adapter connection. |

| Problem | Possible Cause | Solution |
|-----------------------------|---|---|
| No sound from headphones. | Headphones not properly connected. Volume too low. Faulty headphones. | Ensure headphones are fully plugged in. Increase volume. Test with another pair of headphones. |
| CD skips or stops playing. | CD is dirty or scratched. Unit is subjected to strong vibrations. | Clean the CD with a soft cloth. Ensure the unit is on a stable surface or minimize movement. |
| Cannot play MP3 files. | Disc is not an MP3 CD. MP3 files are corrupted or not properly formatted. | Ensure the disc contains valid MP3 files. Try another MP3 CD. |
| FM radio reception is poor. | Weak signal. Interference. | Adjust the unit's position. Extend the headphone cable (which acts as an antenna). Move away from other electronic devices. |

Specifications







| | |
|-------------------------|--|
| Model Name | COBY-CD193BK |
| Product Dimensions | 3.15 x 7.48 x 7.48 inches |
| Item Weight | 5.9 ounces |
| Power Source | 2 AA batteries (not included) or USB power adapter (sold separately) |
| Connectivity Technology | Wired (for headphones/AUX out) |
| Special Feature | Portable, 60-Sec Anti-Skip Protection, MP3 Playback, FM Radio |
| Manufacturer | Summit Electronics, LLC |

Warranty and Support

This product is covered by a manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or visit the official Coby website. For technical support or customer service inquiries, please contact Coby customer support through their official channels.

Online Resources:

- Visit the [Coby Store on Amazon](#) for more products and information.

| | |
|--|---|
|  <p>COBY. MP201</p> | <p>Coby MP201 USB MP3 Player Instruction Manual</p> <p>Comprehensive instruction manual for the Coby MP201 USB MP3 Player, covering setup, features, controls, music playback, software installation, and troubleshooting.</p> |
|  <p>COBY® CD201 Wireless Anti-Skip CD Player Reproducteur de CD sans fil Manual de usuario / User Manual</p> | <p>Coby CD201 Wireless Anti-Skip CD Player User Manual</p> <p>User manual for the Coby CD201 Wireless Anti-Skip CD Player, covering features, operation, charging, Bluetooth audio-out, FM radio, specifications, safety precautions, and warranty information.</p> |
|  <p>iFIXIT Coby DVD209 The bottom portion of the DVD player Replacement This guide will show you how to safely remove screws, disconnect cables, and access internal components. Warning: High Voltage</p> | <p>Coby DVD209 DVD Player Bottom Portion Replacement Guide</p> <p>A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p> |
|  <p>COBY. MP-610 MP3 & Video Player with FM Radio QUICK SETUP GUIDE</p> | <p>Coby MP-610 MP3 & Video Player Quick Setup Guide</p> <p>Quick setup guide for the Coby MP-610 MP3 & Video Player with FM Radio, covering music, video, and photo file transfer using Windows Media Player and conversion software.</p> |
|  <p>COBY WIRELESS HEADPHONES Instruction Manual CHBT590 MODEL#: CHBT590</p> | <p>Coby CHBT590 Wireless Headphones Instruction Manual</p> <p>Instruction manual for the Coby CHBT590 Wireless Headphones, covering setup, operation, music controls, and warranty information.</p> |
|  <p>COBY CHBT835 Manual de usuario / User Manual Bluetooth</p> | <p>COBY CHBT835 Wireless Bluetooth Headphones User Manual</p> <p>Comprehensive user manual for the COBY CHBT835 wireless Bluetooth headphones, covering setup, controls, charging, specifications, safety, and warranty information.</p> |