

[manuals.plus](#) /

› [CXK](#) /

› [CXK T12 Pro Wireless Bluetooth Earbuds User Manual](#)

CXK T12 pro

CXK T12 Pro Wireless Bluetooth Earbuds User Manual

Model: T12 pro | Brand: CXK

INTRODUCTION

Thank you for choosing the CXK T12 Pro Wireless Bluetooth Earbuds. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.



Image: The CXK T12 Pro Wireless Bluetooth Earbuds, black in color, resting inside their sleek charging case. The case features an LED power display showing battery levels for both earbuds and the case itself.

WHAT'S IN THE BOX

- CXK T12 Pro Wireless Bluetooth Earbuds (Left and Right)
- Wireless Charging Case
- USB-C Charging Cable
- User Manual (this document)

KEY FEATURES

- **Bluetooth 5.3:** Ensures stable and efficient wireless connectivity.
- **Extended Playtime:** Up to 8 hours on a single charge for earbuds, with a total of 36 hours playtime including the charging case.
- **LED Power Display:** Digital display on the charging case shows battery percentage for the case and individual

earbuds.

- **Wireless Charging Case:** Conveniently charge your earbuds and case wirelessly.
- **13mm Drivers:** Deliver a wide soundstage with clear mids, detailed trebles, and powerful bass.
- **IPX6 Waterproof:** Designed to withstand splashes and sweat, suitable for workouts and outdoor activities.
- **Comfortable Fit:** Ergonomically designed for secure and comfortable wear.
- **Single & Dual Ear Mode:** Use either earbud independently or both together for stereo sound.
- **Clear Call Quality:** Built-in microphone provides clear audio for phone calls.



Image: A graphic highlighting the key features of the CXK T12 Pro Wireless Earbuds, including stable connection, stereo sound quality, LED power display, IPX6 waterproof rating, comfortable fit, and 36 hours of playing time.



Image: An exploded view diagram illustrating the internal components of the earbud, emphasizing the 13mm drivers responsible for delivering rich audio with clear mids, detailed trebles, and powerful bass.

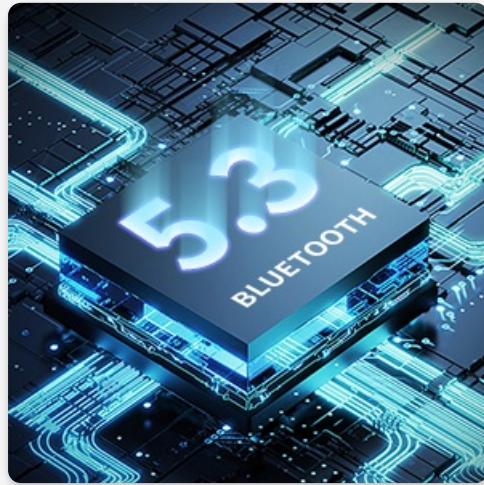


Image: A detailed view of a microchip, visually representing the advanced Bluetooth 5.3 technology integrated into the earbuds for superior connectivity.

SETUP GUIDE

Initial Use and Charging

- Remove Protective Film:** Before first use, open the charging case and remove the protective film from the charging contacts on both earbuds. This ensures proper charging.

Easy Button Controls

 Play/Pause Click either earbud once	 Voice Assistant Double click either earbud (Only iOS)
 Answer Call Click either earbud once	 Previous Song Click earbud (L) and hold for 2s
 Hang up Click either earbud once	 Next Track Click earbud (R) and hold for 2s



Notice

Remove the Film

When using for the first time, please remove the protective film of the charging column of the earbuds, let the earbuds charge properly.



Image: A visual guide demonstrating the removal of the protective film from the earbud charging contacts and an overview of the touch control functions.

- Charge Fully:** Place the earbuds back into the charging case and close the lid. Connect the charging case to a power source using the provided USB-C cable or place it on a wireless charging pad. The LED display will show the charging progress. Ensure both earbuds and the case are fully charged before first use.

Pairing with Your Device

- Activate Bluetooth:** Turn on Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
- Open Case:** Open the lid of the charging case. The earbuds will automatically enter pairing mode.
- Select "T12 pro":** On your device's Bluetooth settings, search for available devices and select "T12 pro" from the list.
- Confirm Connection:** Once connected, you will hear an audible confirmation from the earbuds. The LED display on the case will indicate successful pairing.

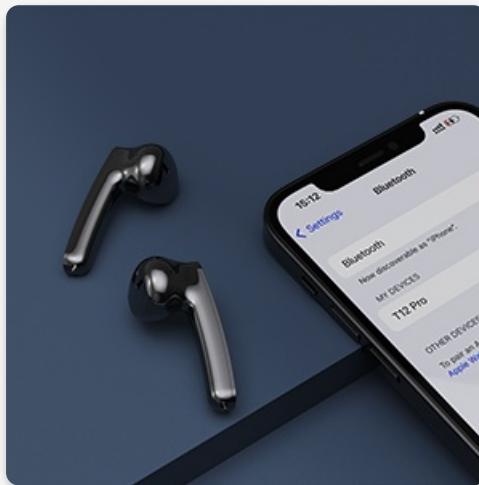


Image: The CXK T12 Pro earbuds positioned next to a smartphone displaying its Bluetooth settings, illustrating the pairing process.



Image: An assortment of compatible devices, including smartphones, tablets, and a desktop computer, demonstrating the broad compatibility of the CXK T12 Pro earbuds.

OPERATING INSTRUCTIONS

Touch Controls

The CXK T12 Pro earbuds feature intuitive touch controls on each earbud. Refer to the diagram below for specific functions:

Easy Button Controls

**Play/Pause**

Click either earbud once

**Voice Assistant**

Double click either earbud
(Only iOS)

**Answer Call**

Click either earbud once

**Previous Song**

Click earbud (L) and hold
for 2s

**Hang up**

Click either earbud once

**Next Track**

Click earbud (R) and hold
for 2s



Notice

Remove the Film

When using for the first time, please remove the protective film of the charging column of the earbuds, let the earbuds charge properly.



Image: A detailed diagram illustrating the touch control functions of the earbuds, including play/pause, voice assistant activation, answering/hanging up calls, and navigating music tracks.

Play/Pause: Click either earbud once.

Voice Assistant: Double click either earbud (iOS only).

Answer Call: Click either earbud once.

Hang up: Click either earbud once.

Previous Song: Click earbud (L) and hold for 2 seconds.

Next Track: Click earbud (R) and hold for 2 seconds.

Single & Dual Ear Mode

The earbuds support both single and dual ear modes, allowing for flexible usage:

- **Dual Ear Mode:** For stereo sound, simply take both earbuds out of the charging case. They will automatically connect to each other and your paired device.
- **Single Ear Mode:** To use only one earbud, take either the left or right earbud out of the case. It will connect independently. Place the other earbud back in the case.



Single & Dual Ear Switch freely

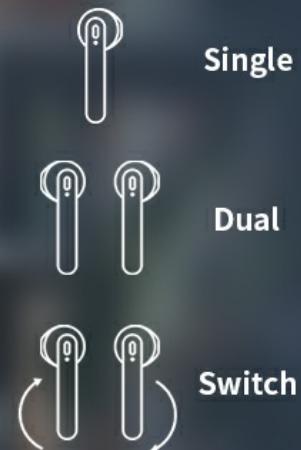


Image: A diagram visually explaining the flexibility of using the earbuds in either single or dual ear mode, allowing users to switch freely between them.

Usage Scenarios

CXK T12 Pro Always be with you

Enjoy your music anytime, anywhere



Image: A collage depicting individuals utilizing the CXK T12 Pro earbuds in diverse settings, including during workouts, while working, during leisure time, and while traveling, emphasizing their versatility.

CHARGING THE EARBUDS AND CASE

- **Earbud Charging:** Place the earbuds into the charging case. They will automatically begin charging. The LED display on the case will show the individual earbud battery levels.
- **Case Charging (Wired):** Connect the provided USB-C cable to the charging port on the case and the other end to a USB power adapter (not included). The LED display will show the case's battery percentage.
- **Case Charging (Wireless):** Place the charging case on a compatible wireless charging pad. Ensure the case is properly aligned for efficient charging. The LED display will show the charging status.



Image: The CXK T12 Pro charging case resting on a wireless charging pad, demonstrating its wireless charging capability.

- **Charging Time:** A full charge for the case and earbuds typically takes approximately 1.5 hours.

MAINTENANCE AND CARE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Charging Contacts:** Ensure the charging contacts on both the earbuds and inside the case are clean and free of debris to maintain proper charging.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Water Resistance:** While IPX6 waterproof, avoid submerging the earbuds in water. Dry them thoroughly if they get wet from sweat or splashes.

TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing/connecting.	<ul style="list-style-type: none">• Ensure earbuds are charged and out of the case.• Turn off and on Bluetooth on your device.• Forget "T12 pro" from your device's Bluetooth list and re-pair.• Ensure no other devices are connected to the earbuds.
Only one earbud playing sound.	<ul style="list-style-type: none">• Place both earbuds back into the charging case, close the lid, wait a few seconds, then take them out together.• Ensure both earbuds are charged.

Problem	Possible Solution
Low volume or poor sound quality.	<ul style="list-style-type: none"> Adjust volume on both your device and the earbuds. Clean any debris from the earbud speaker mesh. Ensure earbuds are properly seated in your ears.
Charging case not charging.	<ul style="list-style-type: none"> Check USB-C cable and power adapter. Ensure proper alignment on wireless charging pad. Clean the charging port on the case.

SPECIFICATIONS


Feature	Detail
Model Name	T12 pro
Brand	CXK
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth 5.3
Ear Placement	In Ear
Form Factor	In Ear
Control Type	Touch Control, Media Control
Battery Life (Earbuds)	Up to 8 hours (approx.)
Battery Life (Total with Case)	Up to 36 hours
Charging Time	Approx. 1.5 hours
Included Components	Wireless Charging Case
Product Dimensions	2.32 x 1.95 x 0.99 inches
Item Weight	2.08 ounces
Manufacturer	Shenzhen Ocen Technology Co.Ltd
Specific Uses For Product	Calling, Music
Water Resistance	IPX6 (from A+ content)
Driver Size	13mm (from video)

WARRANTY AND SUPPORT

CXK products are manufactured to the highest quality standards. For any issues or inquiries regarding your CXK T12 Pro Wireless Bluetooth Earbuds, please refer to your purchase documentation for warranty details and contact customer support through the retailer where the product was purchased.

Please retain your proof of purchase for warranty claims.

Related Documents - T12 pro

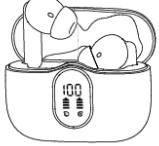	<p>T12 Pro Wireless Earbuds User Manual</p> <p>Comprehensive user manual for the T12 Pro wireless earbuds, covering setup, features, usage instructions, product specifications, and safety information. Learn how to pair, charge, and operate your T12 Pro earbuds effectively.</p>
	<p>T12 Wireless Earbuds User Manual</p> <p>Official user manual for T12 Wireless Earbuds. Find detailed instructions on setup, pairing, music playback, call handling, charging, troubleshooting, and safety guidelines for your wireless audio experience.</p>
 User Guide for A90 Pro	<p>User Guide for A90 Pro Wireless Earbuds</p> <p>Comprehensive user guide for the A90 Pro wireless earbuds, covering setup, functions, charging, maintenance, and troubleshooting.</p>
	<p>T12 True Wireless Stereo Earbuds User Manual</p> <p>Official user manual for the T12 True Wireless Stereo Earbuds, covering setup, operation, charging, troubleshooting, and safety guidelines.</p>
	<p>TOZO T12 Pro Earbuds: Quick Start Guide & Pairing Instructions</p> <p>Get started with your TOZO T12 Pro Hi-Fi stereo sound quality earbuds. This guide covers wearing, pairing, and basic controls for a seamless audio experience.</p>
	<p>TOZO T12 Pro Hi-Fi Stereo Earbuds Quick Start Guide</p> <p>This quick start guide provides instructions for wearing, pairing, and controlling the TOZO T12 Pro Hi-Fi stereo earbuds, including power management, call handling, music playback, volume adjustment, and voice assistant activation.</p>