

TOSHIBA AW-10GM3

TOSHIBA Fully Automatic Washing Machine 10kg AW-10GM3 Instruction Manual

Model: AW-10GM3

1. INTRODUCTION

Thank you for purchasing the TOSHIBA AW-10GM3 Fully Automatic Washing Machine. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before operation and keep it for future reference.

This washing machine features a large 10kg capacity for bulk washing and large items like blankets. It offers powerful washing action with a large wash tub and circulating water flow for thorough cleaning. The easy-to-use detergent case for powder detergent and softener is removable for simple cleaning. The glass top design is flat for easy wiping and uses scratch-resistant tempered glass.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the power cord is securely plugged into a grounded outlet.
- Do not operate the washing machine if it is damaged or malfunctioning.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are flammable or contain flammable substances.
- Always turn off and unplug the appliance before cleaning or performing maintenance.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. Please ensure adequate space and correct connections.

3.1 Space Requirements

Ensure sufficient space around the washing machine for ventilation and access. An additional 10cm width is recommended for various entry points like doorways, stairs, and elevators during transport and installation.

商品寸法+10cm以上の幅が必要です。

《搬入における確認項目》

 
※段差やコーナー箇所があり、直線ではない場合、+10cm以上の幅が必要となります。
※手すり・照明・装飾物などがある場合、そこから+10cmの幅が必要となります。

《商品の寸法》




《玄関の高さ》

商品寸法+10cm

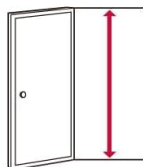


《玄関の幅》

 商品寸法+10cm

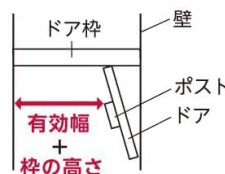

《廊下の幅》

 商品寸法+10cm

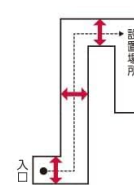


《エレベータの幅》

商品寸法+10cm




《階段の幅》

 商品寸法+10cm

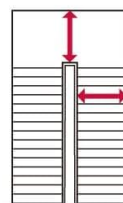


《設置における確認項目》

 ・必要なスペースは商品によって異なるため、詳細はメーカーページなどをご確認ください。
・洗濯機の設置時にはドアを開閉するため上部のスペース確保が必要となります。

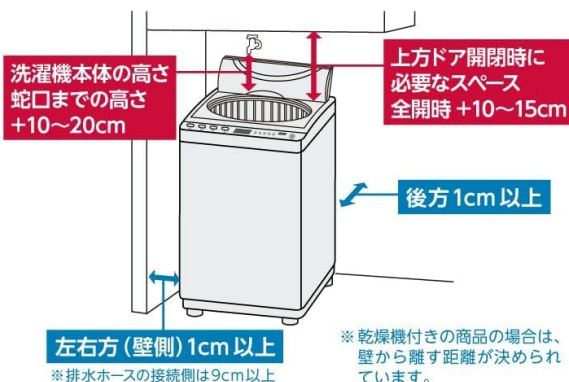

防水パンの有無と内側サイズをチェック

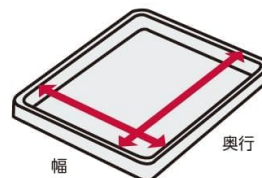 

※排水エルボ・足台の有無と排水口位置によって、追加費用がかかることがあります。

Image: Diagram illustrating the required installation space, indicating that an additional 10cm width is needed for various entry points like doorways, stairs, and elevator.

3.2 Water Supply and Drain Connections

Connect the water supply hose to a cold water tap and the washing machine's water inlet. Ensure all connections are tight to prevent leaks. The drain hose should be securely placed into a drain pipe or laundry tub, ensuring it is not kinked or blocked.

3.3 Protective Cover

A protective cover is included with the product. This cover is useful when installing the washing machine on a raised waterproof pan, helping to prevent hands or feet from accidentally entering the space beneath the machine.

保護カバー

保護カバーを同梱

かさ上げタイプの防水パンに設置するなどで、洗濯機の底部から手や足が入る隙間が生じる場合もありますのでご注意ください。

(商品には保護カバーを同梱しています。)

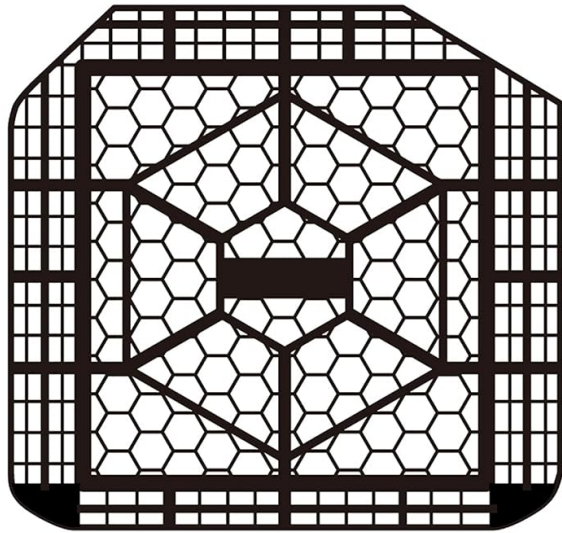 


Image: Diagram showing the protective cover for the washing machine, useful when installing on a raised waterproof pan.

4. OPERATING INSTRUCTIONS

4.1 Loading Laundry

The AW-10GM3 has a large 10kg capacity, allowing you to wash a significant amount of laundry at once. For best results, do not overload the machine. Distribute clothes evenly in the tub.

まとめ洗いや大物洗いにオススメ!

大容量10kg

ゆとりの大容量なので、一度にたっぷり洗えます。
まとめ洗いや毛布などの大物洗いにもオススメです。



洗濯物5kg×2カゴ

〈イメージ図〉

Image: Two laundry baskets filled with clothes, illustrating the large 10kg capacity of the washing machine, suitable for bulk washing.

4.2 Adding Detergent and Softener

The washing machine features an easy-to-use dispenser for both powder detergent and fabric softener. Add the appropriate amounts to their designated compartments before starting a wash cycle.

4.3 Control Panel Overview

The control panel features push-buttons for selecting various functions and cycles. The flat glass top design is not only aesthetically pleasing but also easy to wipe clean.

ガラストップデザイン



汚れがついてもサッと拭き取れる
フラットデザイン。
傷がつきにくい強化ガラス採用です。

Image: Close-up view of the washing machine's control panel and glass top design.

4.4 Wash Cycles

The available cycle options include:

- **Normal:** For everyday laundry.
- **Rinse:** An additional rinse cycle.
- **Tub Wash:** For cleaning the washing machine tub.
- **Spin:** For draining water and spinning clothes.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your washing machine.

5.1 Cleaning the Lint Filter

The cassette-type lint filter is designed for easy removal and cleaning. Regularly remove accumulated lint to maintain washing efficiency and prevent blockages.

清潔

カセット式 糸くずフィルター

NEW

糸くずが捨てやすく、
お手入れが簡単です。



さらに！

槽洗浄・槽乾燥で清潔をキープ

清潔なステンレス槽を使用。

Image: Cassette-type lint filter, designed for easy removal and cleaning.

5.2 Tub Cleaning

Utilize the dedicated 'Tub Wash' cycle to clean the stainless steel tub and prevent mold and odor buildup. It is recommended to perform this cycle periodically.

5.3 Detergent Dispenser

The detergent and softener dispenser is removable for easy cleaning. Rinse it regularly to prevent residue buildup.

5.4 Exterior Cleaning

Wipe the exterior, especially the glass top, with a soft, damp cloth. The tempered glass is scratch-resistant and easy to clean.

6. TROUBLESHOOTING

If you encounter any issues with your washing machine, please refer to the following common solutions before contacting customer support.

- **Machine does not start:** Check if the power cord is properly plugged in and if the water supply is turned on. Ensure the lid is closed securely.
- **Water leakage:** Verify that the water supply and drain hoses are correctly connected and tightened. Check for any kinks in the hoses.
- **Unusual noise/vibration:** Ensure the machine is level and stable. Check if laundry is evenly distributed in the tub. Remove any foreign objects from the tub or filter.
- **Poor washing results:** Do not overload the machine. Use the correct amount of detergent for the load size and water hardness. Clean the lint filter.

If the problem persists, please contact customer support.

7. PRODUCT SPECIFICATIONS

Detailed specifications for the TOSHIBA AW-10GM3 washing machine:

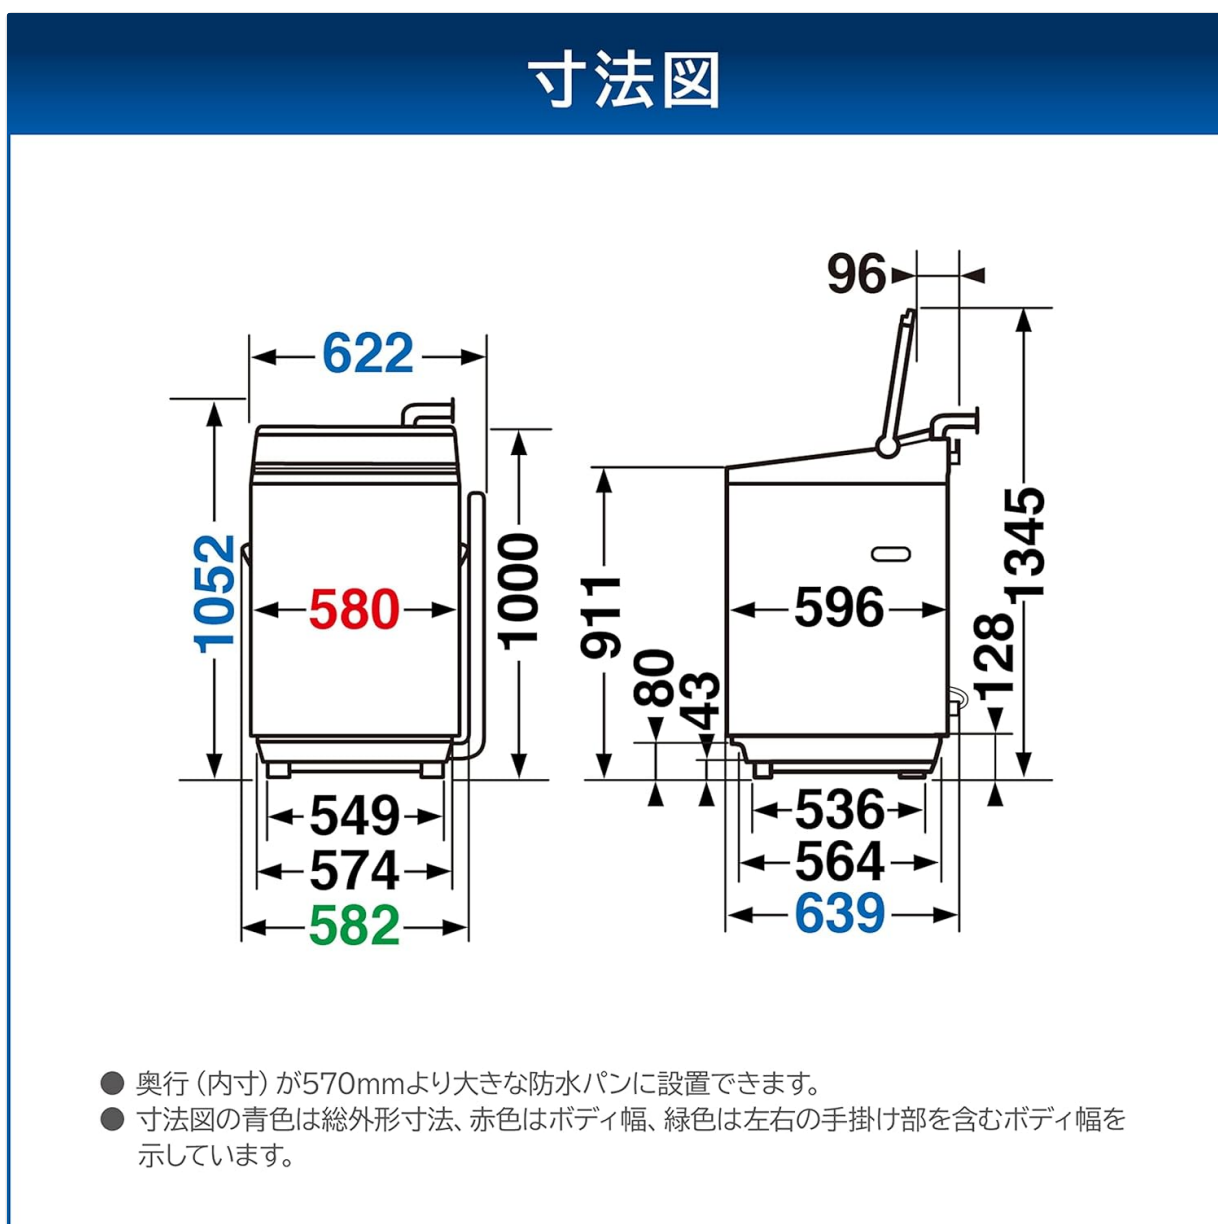 


Image: Detailed dimension diagram of the washing machine.

Feature	Specification
Brand	TOSHIBA

Model Number	AW-10GM3(W)
Product Type	Fully Automatic Washing Machine
Capacity	10 kg
Color	Pure White
Product Dimensions (D x W x H)	63.9 cm x 62.2 cm x 105.2 cm
Item Weight	42 kg
Material	Steel
Washing Machine Drum Material	Steel
Access Location	Top
Opening Position	Top
Finish	Stainless Steel
Control Type	Push Button
Operation Mode	Fully Automatic
Voltage	100 Volts (AC)
Cycle Options	Normal, Rinse, Tub Wash, Spin
Detergent Dispenser Options	Powder Detergent and Softener
Included Components	Drain Hose, Water Supply Hose, Power Cord
Estimated Washing Time	Approx. 53 minutes
Standard Water Level	72-48L / 28L (Manual)
Standard Water Consumption	Approx. 138L (at 15L/min water supply)
Power Consumption (50/60Hz)	Washing: 390W / 460W

8. WARRANTY INFORMATION

This product comes with a **1-year warranty** from the date of delivery. The delivery receipt is required for warranty claims. The warranty is valid only for use within Japan.

9. CUSTOMER SUPPORT

For technical assistance, service, or inquiries regarding your TOSHIBA washing machine, please contact your local TOSHIBA customer service center or authorized dealer.

Please have your model number (AW-10GM3) and purchase information ready when contacting support.

