

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Vacmaster](#) /

› [Vacmaster VK1323PFR 3-in-1 Wet/Dry/Shampoo Vacuum Cleaner User Manual](#)

Vacmaster VK1323PFR-FR

Vacmaster VK1323PFR 3-in-1 Wet/Dry/Shampoo Vacuum Cleaner User Manual

Model: VK1323PFR-FR | Brand: Vacmaster

INTRODUCTION

The Vacmaster VK1323PFR is a versatile 3-in-1 multi-purpose vacuum cleaner designed for wet, dry, and shampoo cleaning tasks. With its powerful 1300W motor and 23-liter capacity, it is ideal for deep cleaning carpets, upholstery, car interiors, and for general wet and dry vacuuming around the home or workshop. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Vacmaster VK1323PFR.



Image: The Vacmaster VK1323PFR vacuum cleaner shown with its main unit and various attachments, highlighting its comprehensive cleaning capabilities.

PRODUCT COMPONENTS

Familiarize yourself with all components included with your Vacmaster VK1323PFR before initial use.



Image: A detailed diagram illustrating the various parts and accessories of the Vacmaster VK1323PFR, each clearly numbered and labeled for easy identification.

1. **Hose and Remote-Control Handle:** Main hose with integrated controls for vacuum and detergent modes.
2. **Crevice Tool:** For narrow spaces and corners.
3. **Round Brush:** For dusting and delicate surfaces.
4. **Multi-surface Floor Nozzle:** For general dry vacuuming on various floor types.
5. **Floor Brush/Squeegee Nozzle:** For wet pick-up and hard floor cleaning.
6. **Extension Wand:** Extends reach for floor cleaning.
7. **Foam Wet Filter:** Used for wet vacuuming and shampooing.
8. **Carpet Shampoo Nozzle:** Wide nozzle for cleaning carpets and large fabric areas.
9. **Handheld Shampoo Nozzle:** Smaller nozzle for upholstery, car seats, and stairs.
10. **Carpet Cleaning Solution:** Detergent for shampooing.
11. **Collection Bag:** For dry debris collection.
12. **Exhaust Filter:** Filters air expelled from the vacuum.
13. **Washable Cartridge Filter:** Main filter for dry vacuuming.

SETUP

Follow these steps for initial setup of your vacuum cleaner.

1. Assembly

- Unpack all components and ensure nothing is missing.
- Attach the large rear wheels and front swivel casters to the main unit.
- Connect the hose to the suction inlet on the main unit.
- For floor cleaning, connect the extension wands to the hose, then attach the desired floor nozzle (Multi-surface or Floor Brush/Squeegee).

2. Filter Installation

- **For Dry Vacuuming:** Ensure the washable cartridge filter (13) is securely installed over the motor cage inside the tank. A collection bag (11) can also be used for easier disposal of dry debris.
- **For Wet Vacuuming/Shampooing:** Remove the cartridge filter and collection bag. Install the foam wet filter (7) over the motor cage.

3. Filling the Detergent Tank (for Shampooing)

- Locate the external detergent tank.
- Unscrew the cap and fill with the recommended carpet cleaning solution (10) mixed with water according to the solution's instructions. Do not overfill.
- Securely replace the cap.



Image: A user demonstrating the carpet cleaning function of the Vacmaster VK1323PFR, showing the machine in operation on a carpeted floor.

OPERATING INSTRUCTIONS

1. General Operation

- Ensure the power cord is securely plugged into a grounded outlet.
- Turn on the main power switch on the unit.
- Use the remote-control handle (1) to switch between modes.



Image: A close-up view of the remote control handle, highlighting the buttons for "Vacuum Mode" and "Detergent Mode," along with an indicator light.

2. Wet Cleaning (Shampooing)

- Ensure the foam wet filter (7) is installed and the detergent tank is filled.
- Attach either the carpet shampoo nozzle (8) or handheld shampoo nozzle (9) to the hose or extension wand.
- Turn on the vacuum.
- Press the "Detergent Mode" button on the remote-control handle to spray cleaning solution.
- Move the nozzle slowly over the area to be cleaned, spraying solution and then vacuuming it up. Overlap passes slightly.
- For heavily soiled areas, you may need to make multiple passes or allow the solution to soak briefly before vacuuming.
- After cleaning, make several passes with only the vacuum mode activated to extract as much moisture as possible.
- Allow the cleaned area to dry completely before walking on it.



3-IN-1 WET/DRY /UPHOLSTERY SHAMPOO VACUUM CLEANER



Floor Nozzle



Multi-Surface Nozzle



Carpet Shampoo Nozzle



**Hand Held
Shampoo Nozzle**

Image: The Vacmaster VK1323PFR in action, illustrating its capability for wet, dry, and upholstery shampoo cleaning with different nozzles.

3. Dry Vacuuming

- Ensure the washable cartridge filter (13) is installed. A collection bag (11) is recommended for dry debris.
- Attach the multi-surface floor nozzle (4), crevice tool (2), or round brush (3) as needed.
- Turn on the vacuum and ensure "Vacuum Mode" is selected on the remote handle.
- Proceed with vacuuming as normal.

4. Wet Vacuuming (Liquid Pick-up)

- Ensure the foam wet filter (7) is installed and the cartridge filter/collection bag are removed.
- Attach the floor brush/squeegee nozzle (5) or other appropriate wet pick-up tool.
- Turn on the vacuum and ensure "Vacuum Mode" is selected.
- Vacuum up liquids. The float mechanism will automatically shut off suction when the tank is full.
- Immediately empty the tank after wet vacuuming.



CAR DETAILING

WET OR DRY DEBRIS PICK-UP



CARPET & UPHOLSTERY CLEANING

Image: A collage demonstrating the diverse applications of the Vacmaster VK1323PFR, including car detailing, picking up wet or dry debris, and cleaning carpets and upholstery.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

1. Emptying and Cleaning the Tank

- Always unplug the vacuum cleaner before emptying or cleaning.
- For dry debris, remove the power head and lift out the collection bag (11) or empty the tank directly.
- For wet debris or dirty solution, detach the hose and use the drain port at the bottom of the tank to empty liquids.
- Rinse the inside of the tank thoroughly with water after each wet use.
- Allow the tank to air dry completely before storing or switching to dry vacuuming.



Image: The Vacmaster VK1323PFR demonstrating its easy drainage feature, with water flowing out from the bottom of the tank into a floor drain.

2. Filter Care

- **Washable Cartridge Filter (13):** For dry use, tap off loose dirt. If heavily soiled, rinse under running water. Allow to air dry completely (24-48 hours) before reinstallation. Do not use a dryer.
- **Foam Wet Filter (7):** After wet use, rinse thoroughly with water and allow to air dry completely.
- **Exhaust Filter (12):** Check periodically and replace if visibly dirty or if suction power decreases significantly.

3. Accessory Cleaning

- Rinse all nozzles, wands, and the hose with clean water after wet cleaning.
- Ensure all accessories are dry before storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No suction or low suction	<ul style="list-style-type: none"> Hose or nozzle clogged Tank full (wet vacuuming) Filter dirty or incorrectly installed Lid not sealed properly 	<ul style="list-style-type: none"> Check and clear any blockages in hose or attachments. Empty the tank. Clean or correctly install the appropriate filter. Ensure power head is securely latched.
Detergent not spraying	<ul style="list-style-type: none"> Detergent tank empty Spray nozzle clogged Pump malfunction 	<ul style="list-style-type: none"> Refill detergent tank. Clean the spray nozzle. Contact customer support if pump is not working.
Motor not starting	<ul style="list-style-type: none"> Not plugged in Power switch off Circuit breaker tripped 	<ul style="list-style-type: none"> Check power connection. Ensure power switch is ON. Reset circuit breaker.

SPECIFICATIONS

Feature	Detail
Brand	Vacmaster
Model Number	VK1323PFR-FR
Power	1300 W
Collection Tank Capacity	23 Liters
Detergent Tank Capacity	6 Liters
Filtration	Washable Cartridge Filter, HEPA Exhaust Filter, Foam Wet Filter
Operation Modes	Wet, Dry, Shampoo
Special Features	Portable, Wheels, Remote Control Handle, 2-stage Motor (for noise reduction)
Item Weight	13.5 Kilograms
Dimensions (Packaging)	59.44 x 52.22 x 38.4 cm

WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts and accessories, please refer to the official Vacmaster website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

Note: The product comes with a user manual (possibly not in German), which contains detailed warranty terms and contact information.

IMPORTANT SAFETY INFORMATION

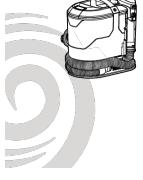
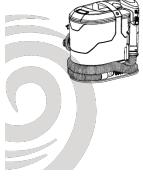
Always read and understand all safety warnings and instructions before using this appliance. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without filters in place.
- Do not use outdoors or on wet surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

© 2024 Vacmaster. All rights reserved.

Related Documents - VK1323PFR-FR

 CE	<p><u>Vacmaster Carpet Spot Cleaner Manual and Operation Guide</u></p> <p>Comprehensive guide for the Vacmaster Carpet Spot Cleaner (Model SCA0801), covering safety instructions, assembly, operation, maintenance, and troubleshooting.</p>
 CE	<p><u>Vacmaster Carpet Spot Cleaner Manual: Operation, Maintenance, and Troubleshooting</u></p> <p>Comprehensive guide for the Vacmaster carpet spot cleaner, covering unpacking, assembly, operation, maintenance, and troubleshooting. Learn how to effectively clean carpets, upholstery, and stairs with your Vacmaster appliance.</p>

 CE	<p><u>Vacmaster SCA0801 Carpet Spot Cleaner User Manual</u></p> <p>Comprehensive user manual for the Vacmaster SCA0801 carpet spot cleaner, detailing setup, operation, maintenance, and troubleshooting for effective carpet cleaning.</p>
 UK CE	<p><u>Vacmaster SCA0801 Carpet Spot Cleaner User Manual</u></p> <p>Comprehensive user manual for the Vacmaster SCA0801 carpet spot cleaner. Includes safety instructions, operation guides, maintenance tips, and troubleshooting advice for effective carpet, upholstery, and stair cleaning.</p>
 EasyClean Thermo How to Remove a Blockage from the Hose Inlet 	<p><u>Vacmaster EasyClean Thermo SCC1201H-01: How to Remove Hose Inlet Blockage</u></p> <p>A step-by-step guide from Vacmaster for removing blockages from the hose inlet of the EasyClean Thermo spot cleaner (model SCC1201H-01). Includes safety warnings and detailed instructions.</p>
	<p><u>Vacmaster VQ1530SFDC Wet and Dry Vacuum Cleaner Operator's Manual</u></p> <p>Comprehensive operator's manual for the Vacmaster VQ1530SFDC 1500W 30L wet and dry vacuum cleaner, including safety instructions, specifications, assembly, operation (dry, wet, blowing), maintenance, and troubleshooting.</p>