

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [TJD](#) /

> [TJD Android 12 Tablet 10.1 Inch User Manual](#)

TJD MT-1011

TJD Android 12 Tablet 10.1 Inch User Manual

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your TJD Android 12 Tablet 10.1 Inch. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.



Image 1.1: TJD Android 12 Tablet 10.1 Inch. This image displays the tablet from a front-facing angle, highlighting its screen and overall design.

2. PRODUCT OVERVIEW

The TJD Android 12 Tablet 10.1 Inch is designed for versatile use, featuring a high-performance processor and a vibrant display. Key features include:

- **Operating System:** Android 12 for enhanced performance and user experience.
- **Memory & Storage:** 8GB RAM and 128GB ROM, expandable up to 512GB via MicroSD.
- **Display:** 10.1-inch IPS HD screen with 1280x800 resolution.
- **Cameras:** 8MP rear camera and 2MP front camera.
- **Battery:** 6000mAh for extended usage.
- **Connectivity:** 2.4G/5G WiFi6 and Bluetooth.
- **Design:** Integrated metal back stand for hands-free viewing.

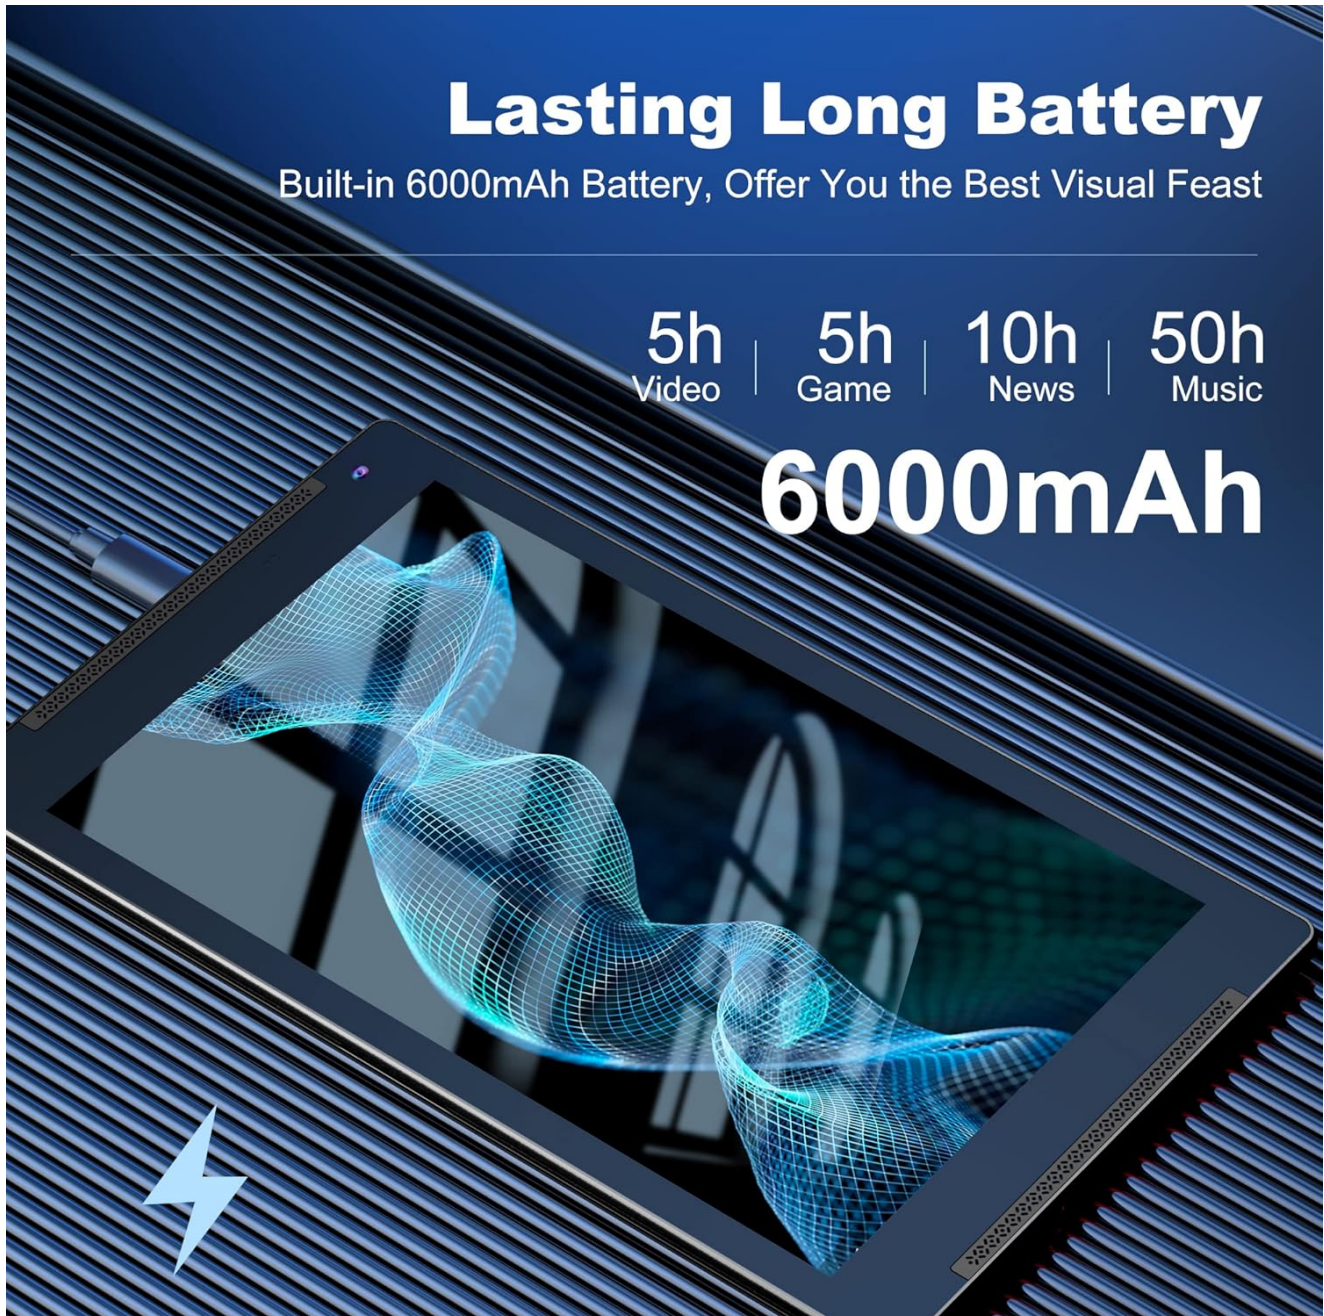


Image 2.1: Diagram of Tablet Features. This image illustrates the various ports and buttons on the TJD Android 12 Tablet, including the headphone jack, MicroSD card slot, Type-C port, volume controls, power button, and camera locations.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the tablet using the provided USB Type-C cable and charging plug. The charging port

is located on the side of the device. A full charge typically takes several hours.

3.2 Power On/Off

- **To Power On:** Press and hold the Power On/Off button (located on the side) until the screen illuminates.
- **To Power Off:** Press and hold the Power On/Off button, then select 'Power off' from the options that appear on the screen.
- **To Restart:** Press and hold the Power On/Off button, then select 'Restart' from the options.

3.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. This includes selecting your language, connecting to a Wi-Fi network, and signing in with your Google account. Follow the on-screen prompts to complete the setup.

3.4 Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle **Wi-Fi On**.
3. Select your desired Wi-Fi network from the list.
4. Enter the network password if prompted, then tap **Connect**.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

- **Tap:** To select an item or open an application.
- **Tap & Hold:** To access contextual menus or move icons.
- **Swipe:** To scroll through screens or lists.
- **Pinch:** To zoom in or out on images and web pages.

4.2 Installing and Uninstalling Applications

- **Install:** Open the **Google Play Store** app, search for the desired application, and tap **Install**.
- **Uninstall:** Tap and hold the app icon on the home screen or app drawer, then drag it to the **Uninstall** option, or go to **Settings > Apps > select the app > Uninstall**.

4.3 Using the Built-in Stand

The tablet features a unique patented metal back stand. Gently pull out the stand from the back of the tablet to prop it up for hands-free viewing, typing, or video calls. Adjust the angle as needed for optimal comfort.



Image 4.1: Tablet with Built-in Stand. This image shows the TJD Android 12 Tablet being used with its integrated metal stand, demonstrating its versatility for various activities like watching videos or working.

4.4 Camera Usage

The tablet is equipped with an 8MP rear camera and a 2MP front camera. Open the **Camera** app to capture photos and videos. Tap the screen to focus and press the shutter button to take a picture.

4.5 Connecting Bluetooth Devices

1. Go to **Settings > Connected devices > Connection preferences > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth device is in pairing mode.
4. Select your device from the list of available devices and follow any on-screen pairing instructions.

4.6 Expandable Storage

The tablet supports MicroSD cards up to 512GB. Insert the MicroSD card into the designated slot on the side of the tablet to expand your storage capacity for photos, videos, and applications.

5. MAINTENANCE

5.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials, which can damage the device. For stubborn smudges, a screen cleaner specifically designed for electronics can be used sparingly.

5.2 Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Do not allow the battery to fully discharge frequently.
- Use only the original charger or a certified compatible charger.

5.3 Software Updates

Periodically check for software updates to ensure your tablet has the latest features and security enhancements. Go to **Settings > System > System update** to check for and install available updates.

6. TROUBLESHOOTING

6.1 Device Not Turning On

Ensure the tablet is sufficiently charged. Connect it to the charger and wait a few minutes before attempting to power it on again. If the issue persists, try holding the power button for 10-15 seconds to force a restart.

6.2 Wi-Fi Connection Issues

- Verify that Wi-Fi is enabled in **Settings**.
- Restart your Wi-Fi router.
- Forget the network in tablet settings and reconnect.
- Ensure you are within range of the Wi-Fi signal.

6.3 Applications Crashing or Freezing

- Close and reopen the application.
- Clear the app's cache and data in **Settings > Apps > select the app > Storage & cache**.
- Ensure the app is updated to its latest version via the Google Play Store.
- Restart the tablet.

6.4 Factory Reset

If persistent issues occur, a factory reset may resolve them. **Warning:** This will erase all data on your tablet. Back up important data before proceeding. Go to **Settings > System > Reset options > Erase all data (factory reset)**.

7. SPECIFICATIONS

| Feature | Specification |
|------------|---------------|
| Model Name | MT-1011 |

| | |
|------------------------|----------------------------|
| Operating System | Android 12 |
| Screen Size | 10.1 Inches |
| Screen Resolution | 1280 x 800 Pixels (IPS HD) |
| Processor | 1.8 GHz ARM |
| RAM | 8GB |
| Internal Storage (ROM) | 128GB |
| Expandable Storage | Up to 512GB (MicroSD) |
| Rear Camera | 8 MP |
| Front Camera | 2 MP |
| Battery Capacity | 6000mAh Lithium Ion |
| Connectivity | 2.4G/5G WiFi6, Bluetooth |
| Dimensions (LxWxH) | 10.5 x 6.2 x 0.3 inches |
| Item Weight | 2.4 pounds |

8. WARRANTY INFORMATION

Your TJD Android 12 Tablet is covered by a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

9. SUPPORT INFORMATION

For technical assistance, troubleshooting, or further inquiries, please contact TJD customer support. Contact details can typically be found on the official TJD website or within the product packaging.