

hosote VM8011

hosote VM8011 White Nightstand with Charging Station User Manual

Model: VM8011

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your hosote VM8011 White Nightstand with Charging Station. Please read these instructions carefully before assembly and use to ensure proper function and longevity of your product.

For assistance, please refer to the troubleshooting section or contact customer support.

PRODUCT COMPONENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact hosote customer service.

- Nightstand panels (MDF particleboard)
- Drawer components (panels, slides, handles)
- Charging station unit (2 AC outlets, 2 USB ports)
- Assembly hardware (screws, dowels, cam locks, etc.)
- Installation tool (e.g., Allen wrench)



Image: Two hosote VM8011 White Nightstands. One nightstand displays a vase and phone on top, books in the open shelf, and two drawers. The other shows a clock and decorative items on top, books and bottles in the open shelf, and two drawers.

SETUP AND ASSEMBLY

Assembly typically takes approximately 20 minutes. It is recommended to assemble the nightstand on a soft, clean surface to prevent scratches.

- 1. Unpack Components:** Carefully remove all parts from the packaging and lay them out. Identify each part using the provided assembly guide.
- 2. Assemble Frame:** Follow the step-by-step diagrams in the included assembly guide to connect the main panels of the nightstand. Ensure all connections are secure.
- 3. Install Drawer Slides:** Attach the drawer slides to the side panels of the nightstand and to the drawer boxes as indicated in the instructions. Ensure they are aligned correctly for smooth operation.
- 4. Assemble Drawers:** Construct the drawer boxes and attach the drawer handles. Insert the assembled drawers into the nightstand frame.

5. **Install Charging Station:** Carefully place the charging station unit into its designated slot on the top surface of the nightstand. Ensure it is flush and secure. Connect the power cord.

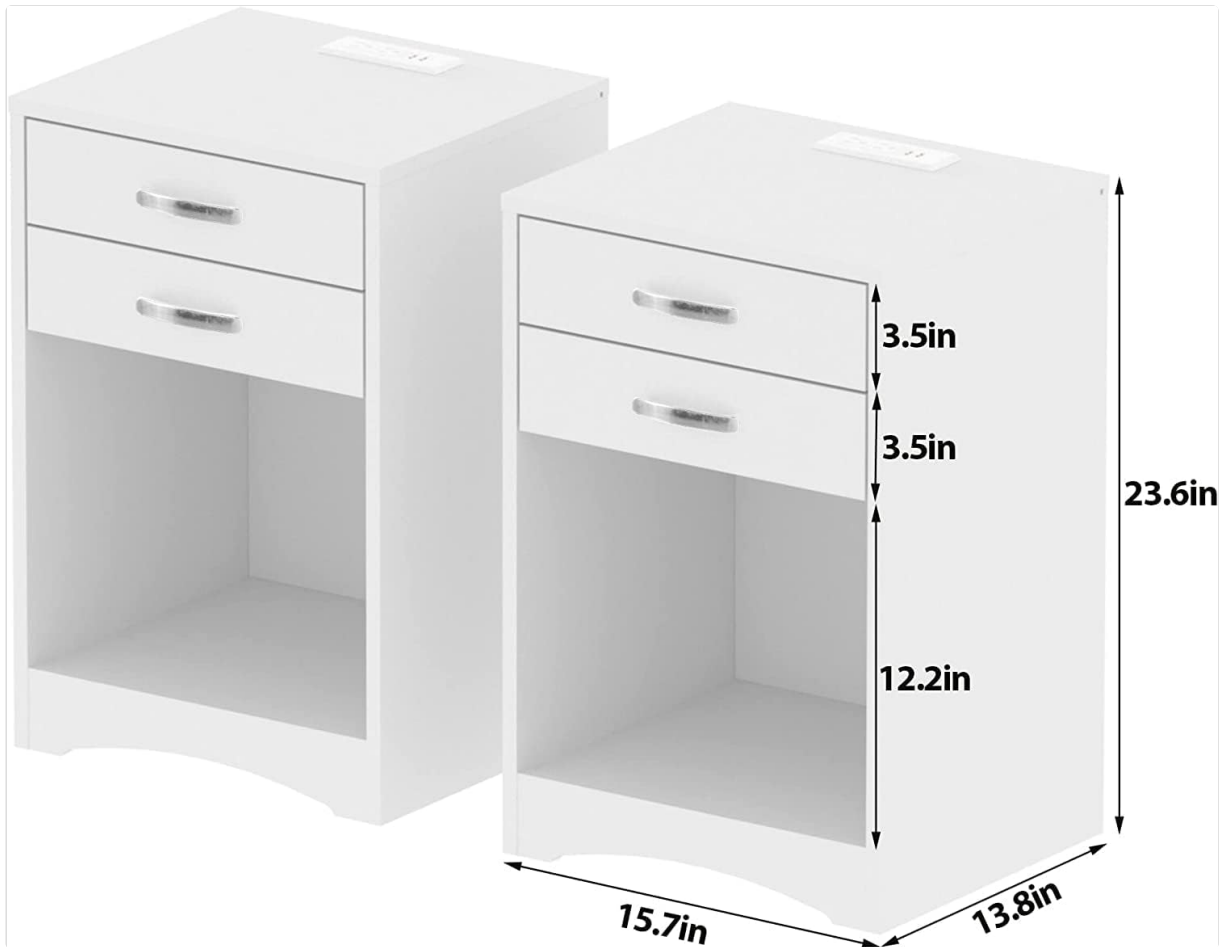


Image: Dimensions of the hosote VM8011 Nightstand. The image highlights the overall height (23.6 inches), width (15.7 inches), and depth (13.8 inches), along with individual drawer heights (3.5 inches) and the open storage area height (12.2 inches).

OPERATING INSTRUCTIONS

Charging Station Usage

The integrated charging station provides convenient power access for your electronic devices.

- **AC Outlets:** Plug standard electrical devices into the two 125V/12A AC outlets.
- **USB Ports:** Connect USB-powered devices (e.g., smartphones, tablets) to the two 5V/2A USB ports for charging.

Safety Note:

- Do not overload the charging station.
- Ensure the power cord is fully inserted into a wall outlet.
- Keep liquids away from the charging station to prevent electrical hazards.



125V/12A
[2 AC Outlets]



5V/2A
[2 USB Ports]



5.9 Feet
[Power Cord]

Image: Close-up of the integrated charging station. It features two AC outlets (125V/12A) and two USB ports (5V/2A). A smartphone is shown connected to a USB port, indicating active charging. The power cord length is 5.9 feet.

Storage Drawers and Open Shelf

The nightstand features two smooth-gliding drawers and an open storage shelf for organizing various items.

- **Drawers:** Utilize the drawers for storing smaller personal items, such as remote controls, glasses, or other bedside essentials.
- **Open Shelf:** The bottom open space is suitable for larger items like books, decorative baskets, or a small lamp.

MAINTENANCE

- **Cleaning:** Wipe the nightstand surfaces with a dry, soft cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the finish.
- **Spills:** In case of spills, wipe immediately with a dry cloth to prevent moisture absorption.
- **Hardware:** Periodically check all assembly hardware (screws, bolts) and tighten if necessary to maintain stability.
- **Drawer Slides:** If drawers do not slide smoothly, a small amount of silicone lubricant can be applied to

the drawer slides.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Charging Station Not Working	Power cord not fully plugged in; Wall outlet not active; Device cable faulty; Charging station malfunction.	Ensure power cord is securely plugged into both the nightstand and a working wall outlet. Test the wall outlet with another device. Try a different device cable. If issues persist, contact customer support.
Drawers Stick or Don't Close Smoothly	Drawer slides misaligned; Obstruction in drawer path; Loose hardware.	Check for any objects blocking the drawer path. Verify that drawer slides are correctly installed and aligned. Tighten any loose screws on the drawer slides or drawer box.
Nightstand is Wobbly	Loose assembly hardware; Uneven floor.	Tighten all assembly screws and bolts. Ensure the nightstand is placed on a level surface. Use furniture pads if necessary to stabilize.

SPECIFICATIONS

- **Brand:** hosote
- **Model Name:** VM8011
- **Color:** White
- **Material:** Engineered Wood (MDF particleboard), Aluminum (drawer handles)
- **Product Dimensions (D x W x H):** 13.8" x 15.7" x 23.6"
- **Item Weight:** 40.5 Pounds
- **Charging Station:** 2 AC Outlets (125V/12A), 2 USB Ports (5V/2A)
- **Power Cord Length:** 5.9 Feet
- **Included Components:** Assembly Guide, Installation Tool

WARRANTY AND SUPPORT

For warranty information or technical support, please contact hosote customer service. Refer to your purchase documentation for specific warranty terms and contact details.

Customer Service: Please refer to the contact information provided with your product packaging or visit the official hosote website.