

AEG AS52CB21DB

AEG ULTIMATE 5000 CLEAN AS52CB21DB Cordless Vacuum Cleaner User Manual

Model: AS52CB21DB

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your AEG ULTIMATE 5000 CLEAN AS52CB21DB Cordless Vacuum Cleaner. Please read these instructions carefully before using the appliance and retain them for future reference.

2. SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle the charger or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bin and/or filters in place.
- Exercise extra care when cleaning on stairs.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing the appliance.

3. PACKAGE CONTENTS

Verify that all components are present in the packaging:

- 1 x AEG ULTIMATE 5000 CLEAN Cordless Vacuum Cleaner
- 1 x Hygiene Filter
- 1 x Furniture Brush
- 1 x Telescopic Crevice Nozzle
- 1 x Charging Station
- User Manual (this document)



Image 3.1: The AEG ULTIMATE 5000 CLEAN Cordless Vacuum Cleaner with its included accessories, including the main unit, crevice tool, brush, and charging stand.

ACCESORIOS INCLUIDOS EN ESTE MODELO



CEPILLO ULTIMATEPOWER MULTI-SURFACE

Diseñado para una succión óptima en todo tipo de suelos



TUBO TELESCÓPICO DE ALCANCE

Herramienta extensible que te proporciona un alcance adicional para limpiar lugares de difícil acceso



CEPILLO PARA POLVO

Para una limpieza rápida y fácil de encimeras y estanterías



BASE DE CARGA

Carga cómodamente en el soporte con un estilo elegante en cualquier habitación

Image 3.2: A detailed view of the included accessories: the UltimatePower multi-surface brush for optimal suction on all floor types, an extendable telescopic crevice tool for hard-to-reach areas, a dust brush for quick cleaning of surfaces, and the convenient freestanding charging base.

4. SETUP

4.1 Assembly

1. Unpack all components from the box.
2. Attach the main vacuum body to the floor nozzle by aligning the connectors and pushing firmly until it clicks into place.
3. Place the charging station in a convenient location near a power outlet. The vacuum cleaner is designed to be freestanding.

4.2 Initial Charging

Before first use, fully charge the vacuum cleaner's battery.

1. Place the assembled vacuum cleaner onto the charging station.

2. Connect the charging station to a power outlet.
3. The battery indicator lights on the vacuum cleaner will illuminate to show charging status. A full charge takes approximately 4.5 hours.
4. Once fully charged, the indicator lights will show a steady full charge.



UNA SOLA CARGA. LIMPIEZA TOTAL

Ahora puedes limpiar hasta 50 minutos seguidos con una sola carga*

*Pruebas internas realizadas con la unidad de mano a potencia mínima, según la norma IEC 62885-4. La unidad de mano se extrae para efectuar las mediciones

Image 4.1: The AEG ULTIMATE 5000 CLEAN vacuum cleaner charging on its freestanding base. The battery indicator lights are visible, showing the charging progress. A single charge provides up to 50 minutes of cleaning time.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the power button located on the handle to turn the vacuum cleaner on or off.

5.2 Using as a Stick Vacuum

For general floor cleaning, use the vacuum in its upright stick configuration. The UltimatePower multi-floor nozzle is designed for optimal suction on various surfaces.



LIMPIA TODO TIPO DE SUELOS

Pasa del suelo duro a las alfombras sin cambiar de accesorio con el cepillo multisuperficie

Image 5.1: The AEG ULTIMATE 5000 CLEAN vacuum cleaner effectively cleaning a carpeted floor. The multi-surface brush allows seamless transition from hard floors to carpets without changing accessories.

5.3 Using as a Handheld Vacuum (2-in-1 Function)

The vacuum features a detachable handheld unit for versatile cleaning tasks.

1. Press the release button on the main body to detach the handheld unit.
2. Attach the desired accessory (furniture brush or telescopic crevice nozzle) to the handheld unit.
3. Use the handheld unit for cleaning upholstery, car interiors, shelves, or other hard-to-reach areas.
4. To reattach, align the handheld unit with the main body and push until it clicks securely into place.



UNIDAD DE MANO PARA UNA LIMPIEZA MÁS RÁPIDA

La limpieza rápida en un punto concreto es más fácil con la unidad de mano 2 en 1 extraíble

Image 5.2: A user detaching the handheld unit from the main vacuum body. This 2-in-1 design allows for quick and easy spot cleaning or detailed work.

5.4 Automatic Suction Power Adjustment

The vacuum cleaner automatically adjusts its suction power based on the surface being cleaned, optimizing performance and battery life.

5.5 LED Front Light

The floor nozzle is equipped with an LED front light to illuminate dark areas, making dust and debris more visible for thorough cleaning.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dust Bin

Empty the dust bin regularly, especially when it reaches the 'MAX' fill line, to maintain strong suction.

1. Ensure the vacuum cleaner is turned off.
2. Press the dust bin release button and remove the dust bin.
3. Open the dust bin lid and empty contents into a waste bin.
4. Reattach the dust bin until it clicks into place.



RENDIMIENTO DURADERO*

Limpia durante más tiempo sin obstrucciones a medida que el depósito de polvo se llena

* Mantiene el 99 % del rendimiento de succión inicial con el depósito de polvo lleno según la norma IEC 62885-2 edición 1.0; 5.1, 5.7 y 5.9, a máxima potencia

Image 6.1: A view of the transparent dustbin and the internal cyclone technology of the AEG ULTIMATE 5000 CLEAN. This design ensures consistent performance even as the dustbin fills, maintaining 99% of initial suction power according to IEC 62885-2 edition 1.0, 5.1, 5.7, and 5.9 at maximum power.

6.2 Cleaning the Filters

The hygiene filter should be cleaned periodically to prevent clogging and maintain suction power.

1. Remove the dust bin as described above.
2. Carefully remove the filter assembly from the dust bin.
3. Tap the filter gently over a waste bin to remove loose dust. If heavily soiled, rinse the filter under cold running water.
4. Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use a dryer or other heating methods.

6.3 BrushRollClean Function

The UltimatePower multi-floor nozzle features a BrushRollClean function to easily remove tangled hair and fibers from the brush roll.

1. Ensure the vacuum cleaner is turned off.
2. Press the BrushRollClean pedal (usually located on the top of the floor nozzle) for 5-10 seconds while the vacuum is running.
3. The internal blade will cut and remove tangled hair, which is then vacuumed into the dust bin.

6.4 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Store the vacuum cleaner in a cool, dry place when not in use.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is discharged	Charge the battery fully.
Reduced suction power	Dust bin is full	Empty the dust bin.
Reduced suction power	Filter is clogged	Clean or replace the filter.
Reduced suction power	Nozzle or hose is blocked	Check for and remove any blockages.
Brush roll not spinning	Hair or debris tangled in brush roll	Use the BrushRollClean function or manually clear the brush roll.
Brush roll not spinning	Obstruction in nozzle	Turn off the vacuum and remove any obstructions from the nozzle.

If the problem persists after attempting these solutions, please contact AEG customer support.

8. SPECIFICATIONS

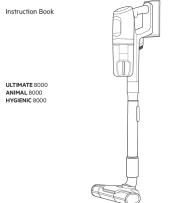
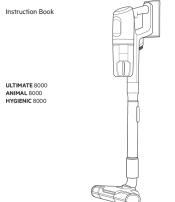
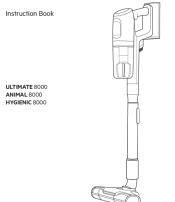
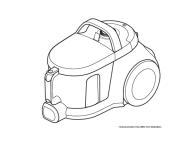
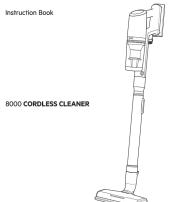
Feature	Specification
Brand	AEG
Model Name	AS52CB21DB

Feature	Specification
Product Dimensions (L x W x H)	10.04" x 5.51" x 43.5"
Item Weight	6.71 pounds
Color	Blue
Form Factor	Handheld (2-in-1)
Is Cordless?	Yes
Battery Type	Lithium HD power battery
Battery Life	Up to 50 minutes (with handheld part)
Charging Time	4.5 Hours
Capacity	0.3 Liters
Wattage	800 watts
Noise Level	79 Decibels
Filter Type	Cartridge
Number of Speeds	2
Recycled Material Content	58% recycled plastic
Special Features	2-in-1 design, Innovative Cyclone technology, Integrated telescopic crevice tool, Furniture brush, UltimatePower multi-floor nozzle with BrushRollClean function and LED front light, Automatic suction adjustment, Freestanding design

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official AEG website. For technical support, spare parts, or service inquiries, please contact AEG customer service directly.

You can typically find contact information on the AEG official website or in your product registration materials.

 <p>AEG Instruction Book Clean 5000 Animal 5000 Hygenic 5000</p>	<p><u>AEG Clean 5000, Animal 5000, Hygenic 5000 Instruction Book</u> Instruction book for AEG Clean 5000, Animal 5000, and Hygenic 5000 vacuum cleaners. Includes assembly, usage, and maintenance instructions.</p>
 <p>AEG Instruction Book ULTIMATE 8000 ANIMAL 8000 HYGIENIC 8000</p>	<p><u>AEG ULTIMATE 8000, ANIMAL 8000, HYGIENIC 8000 Cordless Vacuum Cleaner Instruction Manual</u> Comprehensive instruction manual for AEG ULTIMATE 8000, ANIMAL 8000, and HYGIENIC 8000 cordless vacuum cleaners. Covers assembly, operation, maintenance, safety, and accessory information.</p>
 <p>AEG Instruction Book ULTIMATE 8000 ANIMAL 8000 HYGIENIC 8000</p>	<p><u>AEG Ultimate 8000 Series Cordless Vacuum Cleaner Instruction Manual</u> Comprehensive instruction manual for AEG Ultimate 8000, Animal 8000, and Hygienic 8000 series cordless vacuum cleaners. Includes assembly, usage, maintenance, and accessory information.</p>
 <p>AEG Instruction Book ULTIMATE 8000 ANIMAL 8000 HYGIENIC 8000</p>	<p><u>AEG 8000 Series Cordless Vacuum Cleaner Instruction Manual</u> Comprehensive instruction manual for AEG 8000 series cordless vacuum cleaners, including Ultimate, Animal, and Hygienic models. Covers assembly, usage, maintenance, and accessory information.</p>
 <p>AEG Instruction Book 3000 Bagless cleaner 5000 Bagless cleaner</p>	<p><u>AEG 3000 & 5000 Bagless Cleaner Instruction Book</u> This instruction book provides essential information for operating and maintaining the AEG 3000 and 5000 Bagless Cleaners. Learn about assembly, usage, power settings, and maintenance for optimal performance.</p>
 <p>AEG Instruction Book 8000 CORDLESS CLEANER</p>	<p><u>AEG 8000 Cordless Cleaner User Manual and Accessories</u> Comprehensive guide for the AEG 8000 Cordless Cleaner, covering assembly, operation, maintenance, and available accessories. Learn how to use and care for your AEG vacuum cleaner.</p>

