

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VanSmaGo](#) /

› [VanSmaGo Galaxy Projector \(Model: Star Projector-01\) Instruction Manual](#)

## VanSmaGo Star Projector-01

# VanSmaGo Galaxy Projector (Model: Star Projector-01) Instruction Manual

Your guide to setting up and operating your planetarium star projector.

## 1. INTRODUCTION

---

The VanSmaGo Galaxy Projector is designed to project various celestial scenes onto walls or ceilings. It features 13 different display scenarios, a 360° rotatable projection, and a timer function for automatic shutdown. This manual provides instructions for proper setup, operation, and maintenance to ensure optimal performance and longevity of your device.



Image: The VanSmaGo Galaxy Projector in operation, projecting a detailed starry sky onto a ceiling.

## 2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Galaxy Projector
- 13 x Film Discs (one pre-inserted)
- 1 x Type-C USB Cable
- 1 x User Manual

# PACKING LIST

Galaxy Projector ×1

Film Discs ×12PCS

Type-C USB Cable ×1

User Manual ×1



Image: A visual representation of the package contents, showing the projector, film discs, USB cable, and user manual.

## 3. SETUP

1. **Power Connection:** Connect the provided Type-C USB cable to the projector and a suitable power adapter (not included).
2. **Film Disc Insertion:** The projector comes with 13 film discs, one of which is pre-inserted. To change a disc, gently pull out the disc tray from the side of the projector. Place the desired film disc into the tray, ensuring the flat side of the film faces up. Slide the tray back into the projector until it clicks into place.

Your browser does not support the video tag.

Video: A demonstration of how to change the film disc in the projector. The video shows the disc tray being removed, a new disc being placed, and the tray re-inserted.

## 4. OPERATING INSTRUCTIONS

Once powered on, use the buttons on the projector to control its functions:

- **Power Button:** Press to turn the projector on or off.
- **Timer Button:** Cycle through 1-hour, 2-hour, or 4-hour (default) automatic shutdown settings.
- **Rotation Button:** Activate or deactivate the 360° rotation of the projected image.
- **Focus Adjustment:** Rotate the knob on the top of the projector to adjust the clarity and sharpness of the projected image. This is crucial for optimal viewing, especially at different projection distances.



Image: Detail of the projector's control panel, highlighting the focus adjustment knob and function buttons.

Your browser does not support the video tag.

Video: A general demonstration of the projector's operation, showing the device being turned on and projecting a starry scene.

## 5. FEATURES

---

- **13-in-1 Film Discs:** Explore various celestial bodies and phenomena including the Solar System, Earth, Moon, Virgo Supercluster, Centaurus A, Black Hole, Antennae Galaxies, Wormhole, the Milky Way, Mystic Mountain, Sharpless 2-308, Small Magellanic Cloud, and Laniakea Supercluster.
- **Wide Coverage & 360° Rotation:** The projector can cast images onto walls, floors, and ceilings up to 16.4ft away, covering an area of 135-754 sq ft. The 360° rotation feature creates an immersive experience.
- **High-Precision Lenses:** Equipped with advanced multilevel glass lenses for clear and sharp projections.
- **Quiet Operation:** Designed for noiseless operation, creating a peaceful environment.



Image: A display of the 12 distinct film discs, illustrating the variety of celestial projections available.

# ADVANCED MULTILEVEL GLASS LENSES FOR ULTRA-CLEAR PROJECTION



2 Million  
High Resolution



Relative  
illumination > 75%



3 Microns Visible



Distortion < 0.5%



Image: An exploded view diagram of the projector's lens system, highlighting its high-precision components.

# 360 DEGREE ANGLE ADJUSTMENT

Suitable for any scene, Perfect for bedroom decor



Image: The projector positioned to show its 360-degree rotation capability, projecting an image of Earth and a satellite.

## 6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the projector. Do not use liquid cleaners or abrasive materials.
- **Film Discs:** Handle film discs by their edges to avoid fingerprints or scratches. Store them in their protective cases when not in use. Replace film discs only when the device is turned off.
- **Storage:** Store the projector in a cool, dry place away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Image is blurry	Incorrect focus adjustment; projector too far/close to surface.	Rotate the focus knob on top of the projector until the image is clear. Adjust the distance of the projector from the projection surface (optimal distance is 9.84ft).
Projector does not turn on	No power; loose cable connection.	Ensure the USB cable is securely connected to both the projector and the power source. Try a different power outlet or adapter.
Image does not rotate	Rotation feature is off.	Press the rotation button on the projector to activate the 360° rotation.

## 8. SPECIFICATIONS

- **Brand:** VanSmaGo
- **Model:** Star Projector-01
- **Color:** White
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Power Source:** Corded Electric (USB powered)
- **Voltage:** 5 Volts
- **Wattage:** 5 Watts
- **Item Weight:** 1.2 Pounds
- **Product Dimensions:** 5"L x 4"W x 5"H
- **Light Source Type:** Energy Efficient
- **Projection Distance:** Up to 16.4ft (optimal 9.84ft)
- **Projection Area:** 135-754 sq ft



Image: A diagram illustrating the physical dimensions of the projector.

## 9. WARRANTY AND SUPPORT

The VanSmaGo Galaxy Projector comes with a warranty. For specific warranty details, please refer to the documentation included in your package or contact customer support.

If you have any questions or require assistance with your product, please feel free to contact us through the Amazon platform where you made your purchase.

