

Sweetcrispy SAHJ-5BC-GY

Sweetcrispy 5-Drawer Fabric Dresser Instruction Manual

Brand: Sweetcrispy
Model: SAHJ-5BC-GY

PRODUCT OVERVIEW

The Sweetcrispy 5-Drawer Fabric Dresser is a versatile storage solution designed for various rooms in your home, including bedrooms, living rooms, hallways, and nurseries. It features a robust metal frame, a durable wooden top surface, and five spacious fabric drawers to help organize your belongings efficiently.

Key features include:

- **Five Fabric Drawers:** Three smaller drawers on the upper level and two larger drawers on the lower level provide ample storage. All drawers are removable for convenience.
- **Sturdy Wooden Top:** The top surface is designed to be easy to clean and resistant to scratches and stains, suitable for placing items like books, lamps, or even a small TV (up to 45 inches, recommended weight 66 lbs).
- **Durable Metal Frame:** A high-quality metal frame ensures stability and extends the lifespan of the dresser.
- **Adjustable Feet:** Four height-adjustable feet protect your floors and allow for balancing the dresser on uneven surfaces.
- **Anti-Tipping Device:** For enhanced safety, an anti-tipping device is included to secure the dresser to the wall, preventing accidental tipping, especially in households with children.

SETUP AND ASSEMBLY

Assembly of the Sweetcrispy 5-Drawer Fabric Dresser is designed to be straightforward and can typically be completed within 30 minutes using the provided tools. For detailed step-by-step instructions, please refer to the included Installation Manual (PDF) or watch the official installation video on the product page.

General Assembly Steps:

1. Unpack all components and verify against the parts list in the manual.
2. Assemble the metal frame according to the diagrams.
3. Attach the wooden top surface securely to the frame.

4. Insert the fabric drawers into their designated slots. Ensure the hard cardboard support is placed at the bottom of each drawer for stability.
5. Install the adjustable feet and adjust them to level the dresser.
6. Secure the dresser to the wall using the provided anti-tipping device for safety.



Figure 1: Product dimensions, showing the dresser's compact size (38"L x 11.81"W x 20.87"H).



ADJUSTABLE FEET

Avoid shaking by adjusting the height of four corners.

ANTI-TILT SCREWS

Used to attach the steel frames on the wall to prevent tilting.

Figure 2: Illustration of adjustable feet for leveling and anti-tilt screws for wall attachment, enhancing stability and safety.

OPERATING INSTRUCTIONS

The Sweetcrispy 5-Drawer Fabric Dresser is designed for versatile storage and organization throughout your home.

Drawer Usage:

- Utilize the three upper drawers for frequently accessed items such as socks, underwear, or small accessories.
- The two larger lower drawers are ideal for bulkier items like t-shirts, jeans, or children's toys.
- Each drawer is equipped with an arched handle for easy pulling and smooth operation.



3 medium drawers

hold about 45-50 Socks or
10-12 T-shirts

45-50 Socks



10-12 jeans



2 Large drawers

hold about 16-20 T-shirts or
10-12 jeans



16-20 T-shirts



10-12 jeans



Figure 3: Visual representation of drawer capacity: 3 medium drawers hold approximately 45-50 socks or 10-12 t-shirts; 2 large drawers hold about 16-20 t-shirts or 10-12 jeans.

Top Surface Usage:

- The wooden top surface can support up to 66 lbs, making it suitable for decorative items, books, or a small television.
- It is recommended for TVs up to 45 inches in size.



Figure 4: The dresser functioning as a TV stand, demonstrating its sturdy wooden top surface.

MAINTENANCE

Proper care and maintenance will ensure the longevity and appearance of your Sweetcrispy dresser.

- **Cleaning:** Wipe the wooden top surface and metal frame with a dry cloth to remove dust and spills. Avoid abrasive cleaners.
- **Fabric Drawers:** The fabric drawers can be spot cleaned with a damp cloth and mild detergent if necessary. Allow to air dry completely before reinserting into the frame. Do not machine wash or tumble dry.
- **General Care:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if needed.

TROUBLESHOOTING

If you encounter any issues with your dresser, please refer to the following common solutions:

- **Dresser is Wobbly:** Ensure the adjustable feet are properly installed and adjusted. Rotate each foot

to achieve a stable, level position on your floor.

- **Drawers Do Not Slide Smoothly:** Check that the fabric drawers are correctly inserted into their slots and that the hard cardboard support is flat at the bottom of each drawer. Ensure no items are obstructing the drawer's movement.
- **Dresser Appears Unstable:** Verify that the anti-tipping device is securely attached to both the dresser frame and the wall. This is crucial for preventing accidental tipping.
- **Damage During Shipping:** If any parts are damaged or missing upon arrival, please contact customer support immediately for assistance.

SPECIFICATIONS

Feature	Detail
Brand	Sweetcrispy
Model Name	Drawers Dresser
Model Number	SAHJ-5BC-GY
Product Dimensions	20.87"D x 11.81"W x 20.87"H
Size	20.9"D x 11.8"W x 20.9"H (5 Drawers)
Color	Grey
Mounting Type	Floor Mount
Room Type	Kids Room, Laundry Room, Living Room, Nursery
Special Feature	Removable, Sturdy
Product Care Instructions	Wipe with Dry Cloth
Assembly Required	Yes
Item Weight	16 Pounds
Number of Pieces	1
UPC	701347519483

WARRANTY AND SUPPORT

Sweetcrispy is committed to providing high-quality products. For any questions regarding your dresser, including assembly, missing parts, or operational concerns, please contact Sweetcrispy customer support.

While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims. For further information or to explore other Sweetcrispy products, visit the official [Sweetcrispy Store](#).

