

[manuals.plus](#) /

› [ESOXOFFORE](#) /

› [ESOXOFFORE Instant Print Camera User Manual](#)

ESOXOFFORE ABS-681

ESOXOFFORE Instant Print Camera User Manual

Model: ABS-681

INTRODUCTION

Welcome to the user manual for your new ESOXOFFORE Instant Print Camera. This versatile digital camera is designed for children aged 3-12, offering a fun and interactive way to capture memories. It features instant black and white printing, 1080P video recording, various creative filters, and built-in games, making it an ideal companion for young photographers.



The ESOXOFFORE Instant Print Camera, shown here with its essential accessories including a 32GB SD card, three rolls of thermal paper, a USB-C charging cable, and a lanyard.

WHAT'S INCLUDED

Your ESOXOFFORE Instant Print Camera package contains the following items:

- 1 x Instant Print Camera (Pink)
- 1 x USB Type-C Charging Cable
- 1 x Lanyard
- 1 x 32GB SD Card
- 3 x Print Paper Rolls (one pre-installed, two extra)

Easy to install and use

2.5 Hours continuous usage



Push up the part with lens to open the paper slot



Install the printing paper into the slot




Close two parts of the camera



Print Paper Roll
x 3



Lanyard
x 1

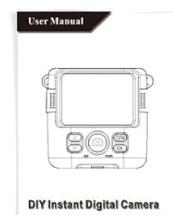

User Manual
x 1



32G SD Card
x 1



Type-C
x 1

All components included in the ESOXOFFORE Instant Print Camera package, ready for setup and use.

SETUP GUIDE

1. Charging the Camera

Before first use, fully charge the camera. Connect the provided USB Type-C cable to the camera's charging port (located at the bottom) and plug the other end into a compatible USB power adapter (not included) or computer USB port. The charging indicator light will show the charging status.

2. Inserting the SD Card

The camera comes with a 32GB SD card for storing color photos and videos. Locate the SD card slot on the side of the camera. Gently insert the SD card with the metal contacts facing down until it clicks into place. To remove, push the card in slightly until it springs out.

3. Loading Print Paper

The camera uses thermal print paper for instant black and white photos. One roll is pre-installed. To load or replace paper:

1. Push up the part with the lens to open the paper slot.
2. Install the printing paper into the slot. Ensure the paper roll is oriented correctly, with the printing side facing the lens (as shown in the diagram). If installed incorrectly, the camera will not print images.
3. Close the two parts of the camera securely.



Ensure the thermal paper is installed with the correct orientation for proper printing. The paper should feed out from the top when the camera is closed.

OPERATING INSTRUCTIONS

Powering On/Off

Press and hold the power button (usually the 'OK' button or a dedicated power button) to turn the camera on or off.

Taking Photos


From the main menu, select the "Photo" icon. Frame your shot using the 2.4-inch screen. Press the shutter button (large central button) to capture a photo. The camera will instantly print a black and white version, while a color version is saved to the SD card.

Instant Photos & Cute sticker

Instant photos that can be drawn, unique postcards



Printing photo(black&white) SD card storage(colour)

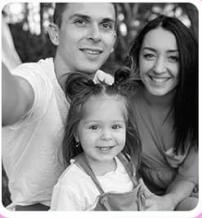


The camera allows for instant black and white prints while simultaneously saving color versions to the SD card.

Video Recording

Select the "Video" icon from the main menu. Press the shutter button to start recording 1080P HD video. Press it again to stop recording. Videos are saved to the SD card.

Ultra HD 1080P Video

Record the wonderful childhood

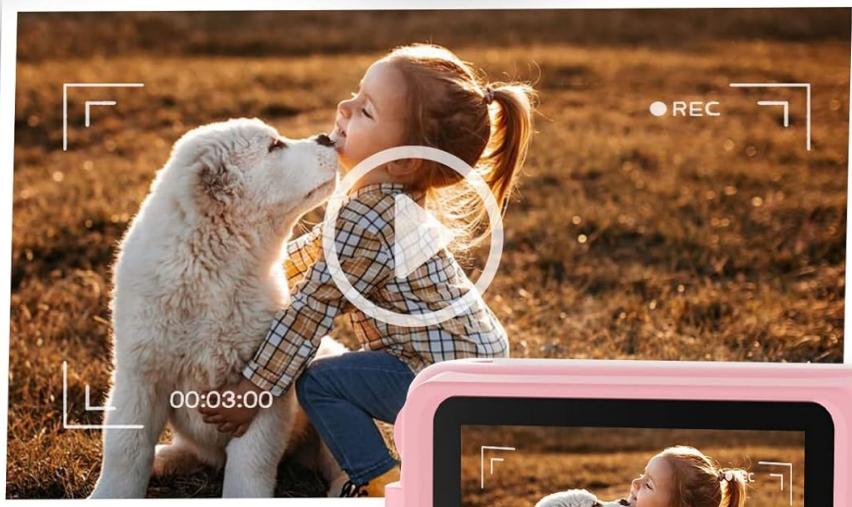

16X Digital Zoom



4X



16X



8X



Record high-definition 1080P videos and utilize the 16X digital zoom to capture details.

Using Filters and Stickers

The camera offers 15 scene filters and 16 types of stickers to enhance your photos. Navigate through the options using the directional buttons and select your desired filter or sticker before taking a picture.



Add fun and creativity to your photos with a variety of built-in stickers and frames.

Playing Games

The camera includes 4 puzzle games for entertainment. Select the "Games" icon from the main menu to access and play them.



Enjoy built-in puzzle games for added entertainment when not taking photos or videos.

MP3 Playback

The camera supports MP3 playback. Load your favorite music files onto the SD card. Select the "MP3" icon from the menu to play music.

Playback/Viewing Media

To review your captured photos and videos, select the "Playback" icon from the main menu. Use the directional buttons to browse through your media.

Digital Zoom

The camera features a 16X digital zoom. Use the zoom controls (usually directional buttons) while in photo or video mode to adjust the magnification.

Time-Lapse and Continuous Shooting

Explore advanced shooting modes like time-lapse and continuous shooting through the camera's settings. These modes allow for creative capture of sequences over time or rapid bursts of photos.



Capture sequences with the time-lapse function, allowing for creative video projects.

MAINTENANCE

Cleaning the Camera

Use a soft, dry cloth to clean the camera body and screen. Avoid using liquid cleaners or abrasive materials, as they may damage the camera's surface or internal components.

Replacing Print Paper

When the print paper runs out, follow the "Loading Print Paper" instructions in the Setup Guide to replace it. Ensure you use compatible thermal paper rolls.

Safe & Cost-Effective printing paper

Take pictures whenever you want, and let the happiness continue

Our

- ✓ \$0.08 per paper
- ✓ 124 papers a roll
- ✓ Friendly material to store
- ✓ Clear pictures

Other

- ✗ \$0.3 per paper
- ✗ Toxic paper and smelly
- ✗ 60 papers a roll
- ✗ Blurry images

Other

- ✗ \$0.9 per paper
- ✗ 20 sheets a pack

The camera uses safe and cost-effective thermal paper, providing many prints per roll.

Battery Care

To prolong battery life, avoid fully discharging the camera frequently. Charge the camera regularly, even if not in constant use. Store the camera in a cool, dry place when not in use for extended periods.

SD Card Management

Regularly transfer photos and videos from the SD card to a computer or other storage device to free up space and prevent data loss. Format the SD card periodically (after backing up data) to maintain optimal

performance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low battery; Power button not pressed correctly.	Charge the camera fully. Press and hold the power button firmly.
Photos are not printing.	Paper installed incorrectly; No paper; Paper jam.	Check paper orientation (refer to Setup Guide). Replace paper roll. Clear any jammed paper.
Poor print quality.	Low battery; Dirty print head; Low light conditions.	Ensure camera is fully charged. Gently clean the print head. Use flash in low light.
SD card error.	SD card not inserted correctly; Corrupted SD card.	Reinsert SD card. Try a different SD card. Format the SD card (backup data first).

SPECIFICATIONS

- **Model Name:** Instant Print Camera
- **Item Model Number:** ABS-681
- **Screen Size:** 2.4 inches
- **Video Resolution:** 1080P HD
- **Digital Zoom:** 16X
- **Battery:** 1 Lithium Ion battery (included, 1000mAh)
- **Charging Type:** USB Type-C
- **Print Type:** Thermal (Black and White)
- **Included Storage:** 32GB SD Card
- **Item Weight:** 13.8 ounces
- **Item Dimensions (L x W x H):** Approximately 3.8 x 3.4 inches (based on image)
- **Manufacturer:** ESOXOFFORE
- **Country of Origin:** China





Compact dimensions make the camera easy for children to handle.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact ESOXOFFORE customer service directly. Refer to the product packaging or the manufacturer's official website for contact details.

Related Documents - ABS-681

	<p><u>MP-7 Electric Gel Ball Blaster: User Guide and Safety Information</u></p> <p>Comprehensive guide for the MP-7 Electric Gel Ball Blaster, covering safety precautions, parameters, installation, gel ball formation, and frequently asked questions. Learn how to safely operate and maintain your blaster.</p>
	<p><u>IKEA LAGAN FRÖSLUNDA Integrated Dishwasher Installation Guide</u></p> <p>Comprehensive installation guide for the IKEA LAGAN FRÖSLUNDA integrated dishwasher, covering all steps from unpacking to final setup. Includes safety information and part identification.</p>
	<p><u>Orcasm Wearable Vibrating Egg Instruction Manual</u></p> <p>Official instruction manual for the Orcasm wearable vibrating egg with remote control by Like a Kitten. Learn about product features, specifications, safety precautions, cleaning, and operational instructions.</p>

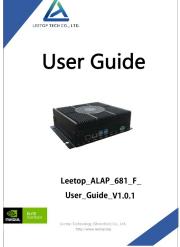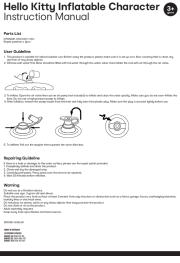 <p>User Guide</p> <p>Leetop ALP-681-F User Guide, V1.0.1</p>	<p><u>Leetop ALP-681-F User Guide: Embedded AI Computer Specifications and Setup</u></p> <p>Comprehensive user guide for the Leetop ALP-681-F embedded artificial intelligence computer, detailing specifications, setup, system configuration, developer tools, and FCC compliance. Features NVIDIA Jetson AGX Orin.</p>
 <p>Hello Kitty Inflatable Character Instruction Manual</p> <p>Product Information Product Description User Guide Maintenance Repairing Guidance Warning Product Specification Product Safety Information</p>	<p><u>Hello Kitty Inflatable Character Instruction Manual - Setup, Use, and Care Guide</u></p> <p>Official instruction manual for the Hello Kitty Inflatable Character. Learn how to set up, inflate, deflate, repair, and safely use your inflatable toy. Includes warnings and customer service information.</p>
 <p>Sex Massager Manual</p> <p>Product Specification Product Safety Information Product Safety Information</p>	<p><u>Sex Massager Manual: Features, Instructions, and Safety Information</u></p> <p>Comprehensive guide for the Sex Massager, detailing product specifications, usage instructions, charging, warnings, maintenance, and FCC compliance. Features 10 vibration modes, wireless remote, and daily waterproof design.</p>