

EVTSCAN Cordless Electric Hand Mixer (Color C)

EVTSCAN Cordless Electric Hand Mixer User Manual

Model: Cordless Electric Hand Mixer (Color C)

1. INTRODUCTION

Thank you for choosing the EVTSCAN Cordless Electric Hand Mixer. This compact and portable mixer is designed for quick and efficient stirring of various liquids, such as coffee, milk, and eggs. Its battery-powered operation provides convenience and versatility for use in homes, hotels, and cafes. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

The EVTSCAN Cordless Electric Hand Mixer is crafted from durable plastic and metal materials, ensuring wear resistance and longevity. Its small and compact design allows for easy storage and does not occupy excessive space.



Figure 1.1: The EVTSCAN Cordless Electric Hand Mixer demonstrating its versatility with various beverages and ingredients.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Keep the mixer out of reach of children.
- Do not immerse the main body (handle) of the mixer in water or other liquids. The whisk attachment is dishwasher safe.
- Ensure batteries are inserted with correct polarity.
- Remove batteries if the mixer will not be used for an extended period.
- Do not attempt to repair or modify the mixer yourself. Contact customer support if issues arise.
- Use only for its intended purpose as described in this manual.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x EVTSCAN Cordless Electric Hand Mixer

*Note: 2 x AA batteries are **not included** and must be purchased separately.*

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your EVTSCAN Cordless Electric Hand Mixer.



Figure 4.1: Front view of the EVTSCAN Cordless Electric Hand Mixer.



Figure 4.2: Detail of the push-button control switch.

- **Handle:** Ergonomically designed for comfortable grip, housing the battery compartment and control switch.
- **Control Switch:** A simple push-button switch to turn the mixer on and off.
- **Whisk Attachment:** The metal whisk at the end of the shaft, designed for efficient mixing and frothing.

5. SETUP

5.1 Battery Installation

The EVTSCAN Cordless Electric Hand Mixer requires 2 x AA batteries (not included) for operation.

1. Locate the battery compartment cover at the bottom end of the mixer handle.
2. Slide the cover open to reveal the battery compartment.
3. Insert 2 x AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 5.1: Opening the battery compartment for battery installation.

6. OPERATING INSTRUCTIONS

Using your EVTSCAN Cordless Electric Hand Mixer is simple and straightforward.

1. Ensure batteries are correctly installed (refer to Section 5.1).
2. Dip the whisk attachment into the liquid you wish to mix or froth (e.g., coffee, milk, eggs). Ensure the whisk is sufficiently submerged to prevent splashing.
3. Press the control switch on the handle to turn the mixer on. The whisk will begin to rotate rapidly.
4. Move the mixer gently within the liquid to achieve desired consistency.
5. Once mixing is complete, release the control switch to turn the mixer off.
6. Carefully remove the whisk from the liquid.



Figure 6.1: Using the mixer to froth coffee.

7. MAINTENANCE

Proper cleaning and maintenance will extend the life of your hand mixer.

7.1 Cleaning

- After each use, immediately clean the whisk attachment.
- The whisk attachment is dishwasher safe. Alternatively, rinse it under running water or wipe it with a damp cloth.
- Do not immerse the main handle unit in water. Wipe the handle with a clean, damp cloth if necessary.
- Ensure the mixer is completely dry before storing.

7.2 Storage

Store the mixer in a cool, dry place, away from direct sunlight and moisture. If storing for an extended period, remove the batteries.

8. TROUBLESHOOTING

If you encounter issues with your EVTSCAN Cordless Electric Hand Mixer, please refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|-----------------------------------|--|---|
| Mixer does not turn on. | Batteries are dead or incorrectly installed. | Replace batteries with new AA batteries, ensuring correct polarity (+/-). |
| Mixer runs slowly or weakly. | Low battery power. | Replace batteries with new AA batteries. |
| Whisk attachment is not spinning. | Obstruction or internal issue. | Check for any obstructions around the whisk. If none, and the mixer still doesn't work, contact customer support. |

9. SPECIFICATIONS

| Feature | Detail |
|-------------------------|---------------------------------|
| Item Type | Cordless Electric Hand Mixer |
| Material | Plastic, Metal |
| Product Sizes (Approx.) | 20.3 x 3.5 cm / 8.0 x 1.4 in |
| Battery Model | 2 x AA Batteries (not included) |
| Weight (Approx.) | 60g / 2.1 oz |
| Controls Type | Push Button |
| Dishwasher Safe | Yes (Whisk attachment only) |
| Manufacturer | EVTSCAN |

10. WARRANTY AND SUPPORT

EVTSCAN products are manufactured to high-quality standards. For any questions, concerns, or warranty inquiries regarding your Cordless Electric Hand Mixer, please contact the retailer or manufacturer directly through their official support channels.

Please retain your proof of purchase for warranty validation.

© 2023 EVTSCAN. All rights reserved.