

[Manuals.plus](#) /

> [BETTER HOMES & GARDENS](#) /

> BETTER HOMES & GARDENS 8-Inch Retro Table Fan (Model SFDR0-200BPT) User Manual

BETTER HOMES & GARDENS SFDR0-200BPT

BETTER HOMES & GARDENS 8-Inch Retro Table Fan (Model SFDR0-200BPT) User Manual

Model: SFDR0-200BPT

IMPORTANT SAFETY INSTRUCTIONS

Please read and save these important safety instructions before using this fan. Failure to follow these instructions may result in electric shock, fire, or injury.

- Always unplug the fan before cleaning or performing any maintenance.
- Do not operate the fan with a damaged cord or plug. If the cord or plug is damaged, contact qualified service personnel.
- Keep the fan away from water or moisture. Do not immerse the fan in water.
- Do not insert fingers or any objects through the grille when the fan is operating.
- Ensure the fan is placed on a stable, flat surface to prevent tipping.
- This fan is for indoor use only. Do not use outdoors.
- Do not use this fan near windows, as rain may create an electrical hazard.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Supervise children when the fan is in use.

PRODUCT OVERVIEW

The BETTER HOMES & GARDENS 8-Inch Retro Table Fan (Model SFDR0-200BPT) is designed to provide efficient air circulation in various indoor settings. It features a durable metal construction, three-speed settings, oscillation, and an adjustable tilting head for optimal airflow direction.



Figure 1: Front view of the BETTER HOMES & GARDENS 8-Inch Retro Table Fan. This image shows the fan's metal grille, blades, and the control knob on the base for speed selection and power.

Key Features:

- Three (3) speed settings for varied airflow.
- Oscillation function for wider air distribution.
- Adjustable tilt head for directional airflow.
- Durable metal construction.
- Compact design suitable for desks, tables, and shelves.

SETUP AND ASSEMBLY

The BETTER HOMES & GARDENS 8-Inch Retro Table Fan is designed for easy assembly without the need for special tools. Follow these steps to set up your fan:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components are present: fan head assembly, base, and power cord.
2. **Place on Stable Surface:** Position the fan base on a firm, level surface where you intend to use the fan.
3. **Connect Power:** Plug the fan's power cord into a standard electrical outlet (refer to specifications for voltage requirements).
4. **Initial Check:** Before operating, ensure the fan grille is securely in place and there are no obstructions around the blades.

OPERATING INSTRUCTIONS

To operate your fan, follow these simple steps:

1. **Power On/Speed Selection:** Locate the control knob on the fan base. Turn the knob clockwise to select your desired speed setting:
 - **0:** Off
 - **1:** Low Speed
 - **2:** Medium Speed

- **3: High Speed**

2. **Adjust Tilt:** To change the vertical angle of airflow, gently tilt the fan head up or down to the desired position. The fan head will hold its position.
3. **Activate Oscillation:** To enable the fan to oscillate (move side-to-side), locate the oscillation pin on the top of the motor housing at the back of the fan head. Push the pin down.
4. **Stop Oscillation:** To stop oscillation, pull the oscillation pin up. The fan will then blow air in a fixed direction.
5. **Power Off:** Turn the control knob counter-clockwise back to the "0" position to turn off the fan.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the life of your fan.

- **Always unplug the fan** from the power outlet before cleaning.
- **Cleaning the Exterior:** Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents, as these may damage the finish.
- **Cleaning the Grille and Blades:**
 - The front grille can typically be removed for cleaning. Refer to the fan's specific design for grille removal instructions (often involves unscrewing clips or a retaining ring).
 - Carefully wipe the fan blades with a soft, damp cloth to remove dust and debris.
 - Ensure all parts are completely dry before reassembling the grille and plugging the fan back in.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging or covered to protect it from dust.

TROUBLESHOOTING

If your fan is not operating correctly, consult the following troubleshooting guide:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in. Power outlet not working. Control knob is in "0" (Off) position. Internal fuse blown (if applicable).	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another appliance. Turn the control knob to speed "1", "2", or "3". Check the fuse in the plug (if accessible and user-serviceable) or contact customer support.
Fan operates but no oscillation.	Oscillation pin is not engaged.	Push the oscillation pin down on top of the motor housing.
Reduced airflow or unusual noise.	Dust buildup on blades or grille. Obstruction near the fan.	Unplug the fan and clean the blades and grille as per maintenance instructions. Ensure the fan is placed in an area free from obstructions.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	BETTER HOMES & GARDENS
Model Name/Number	SFDR0-200BPT
Product Type	Table Fan
Color	Black
Style	Retro
Power Source	Corded Electric
Number of Speeds	3
Special Features	3 speeds, Adjustable Tilt, Fabric cable with built-in fuse, Oscillating
Mounting Type	Tabletop Mount
Material	Metal
Number of Blades	3
Included Components	Cable
GTIN (UPC)	671227023082
ASIN	B0BTMW4CSZ

WARRANTY AND SUPPORT

Specific warranty information for the BETTER HOMES & GARDENS 8-Inch Retro Table Fan (Model SFDR0-200BPT) is not provided in this manual. Please refer to the product packaging or contact the retailer/manufacturer directly for warranty details and customer support.

For further assistance or inquiries, please visit the official BETTER HOMES & GARDENS website or contact their customer service department.

