

Tibuta E100

Tibuta E100 Android Tablet User Manual

Model: E100 | Brand: Tibuta

INTRODUCTION

Welcome to the user manual for your new Tibuta E100 Android Tablet. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your device. Please read this manual thoroughly to ensure optimal performance and longevity of your tablet.

PRODUCT OVERVIEW

Familiarize yourself with the physical components of your Tibuta E100 tablet.



Image: Labeled diagram of the Tibuta E100 tablet's ports and buttons, including the USB-C port, 3.5mm audio jack, volume buttons, power button, built-in microphone, speaker, and camera locations.

Component Identification

- **USB-C (2.0) Port:** For charging and data transfer.
- **3.5mm Stereo Jack:** For connecting headphones or external audio devices.
- **Volume Buttons:** To adjust the audio volume.
- **Power Button:** To turn the tablet on/off or wake/sleep the screen.
- **Built-in Microphone:** For voice input during calls or recordings.
- **Speaker:** For audio output.
- **5MP Front Camera:** For video calls and selfies.
- **8MP Rear Camera:** For capturing photos and videos.

GETTING STARTED

Initial Charging

Before first use, fully charge your tablet using the provided USB-C cable and power adapter. A full charge

ensures optimal battery calibration.

Powering On/Off

To power on, press and hold the **Power button** until the screen lights up. To power off, press and hold the **Power button**, then select "Power off" from the on-screen options.

Connecting to Wi-Fi

Navigate to **Settings > Network & internet > Wi-Fi**. Turn on Wi-Fi, select your desired network from the list, and enter the password if prompted.

Installing a MicroSD Card

The tablet supports external TF (MicroSD) cards up to 128GB for expanded storage. Locate the MicroSD card slot on the side of the tablet and insert the card gently until it clicks into place. Ensure the card is oriented correctly.

BASIC OPERATION

Touchscreen Gestures

Your tablet responds to various touchscreen gestures:

- **Tap:** To select an item or open an app.
- **Double-tap:** To zoom in/out on web pages or images.
- **Swipe:** To scroll through lists or navigate between screens.
- **Pinch-to-zoom:** To zoom in or out on content by placing two fingers on the screen and moving them apart or together.

Camera Usage

Your tablet features a 5MP front camera and an 8MP rear camera, allowing you to capture life's moments.

5MP+8MP Dual Camera

Capture life's moments



Image: The tablet screen displays a dynamic image of a snowboarder, highlighting the dual camera feature (5MP+8MP) for capturing high-quality photos and videos.

Open the **Camera** app from your home screen or app drawer. You can switch between front and rear cameras, adjust settings, and choose between photo or video modes.

Bluetooth Pairing

To connect to Bluetooth devices like headphones or speakers, go to **Settings > Connected devices > Bluetooth**. Turn on Bluetooth, scan for available devices, and select the device you wish to pair with. Follow any on-screen prompts.

App Management

Download new applications from the **Google Play Store**. To uninstall an app, press and hold its icon on the home screen or in the app drawer, then drag it to the "Uninstall" option that appears.

Battery Management

Your tablet is equipped with a 6000mAh battery. To optimize battery life, consider the following:

Large Capacity Battery



8 hours



9 hours



10 hours

Image: The tablet screen shows movie posters and game icons, with estimated battery life for different activities: 8 hours for video, 9 hours for reading, and 10 hours for music, indicating a large capacity battery.

- Adjust screen brightness to a comfortable level.
- Close unused applications running in the background.
- Disable Wi-Fi, Bluetooth, and GPS when not in use.
- Enable battery saver mode when the battery is low.

MAINTENANCE

Cleaning Your Tablet

Use a soft, lint-free cloth to gently clean the screen and body of your tablet. For stubborn smudges, slightly dampen the cloth with water. Avoid using abrasive cleaners, alcohol, or excessive moisture, as these can damage the device.

Software Updates

Regularly check for system updates to ensure your tablet has the latest features, performance improvements, and security patches. You can typically find this option in **Settings > System > System update**.

Storage Optimization

To maintain optimal performance, periodically clear app caches, delete unnecessary files, and uninstall unused applications. Consider moving large media files (photos, videos) to an external MicroSD card to free up internal storage.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Tibuta E100 tablet. If the problem persists, please contact customer support.

Problem	Solution
Tablet won't turn on	Ensure the battery is sufficiently charged. Connect the tablet to the charger for at least 30 minutes, then try pressing and holding the Power button again.
Wi-Fi connection issues	Check if your Wi-Fi router is working correctly. Forget the network on your tablet and reconnect, re-entering the password. Restart both the tablet and the router.
Apps crashing or freezing	Clear the cache for the problematic app in Settings > Apps > [App Name] > Storage > Clear cache. Restart the tablet. If the issue continues, try reinstalling the app.
Slow performance	Close unnecessary background applications. Free up internal storage by deleting old files or moving them to an SD card. Restart the tablet regularly.
Charging issues / Tablet not charging	Ensure you are using the original charger and USB-C cable. Check the charging port for any debris or damage. Try a different power outlet.

Factory Reset

If persistent issues cannot be resolved through other troubleshooting steps, a factory reset may be necessary. This action will erase all data on your tablet, including apps, photos, and settings. **Ensure you back up all important data before proceeding.** To perform a factory reset, go to **Settings > System > Reset options > Erase all data (factory reset)**.

SPECIFICATIONS

Key technical specifications for the Tibuta E100 Android Tablet:

Model Name	E100
------------	------

Operating System	Android 11
Screen Size	10.1 Inches
Display Resolution	1280 x 800 pixels
Processor	Quad-core CPU
RAM	2GB
Internal Storage	32GB
Expandable Storage	Supports TF card up to 128GB
Front Camera	5.0MP
Rear Camera	8.0MP
Battery Capacity	6000mAh
Wireless Standard	802.11n, Bluetooth 4.2
Product Dimensions (L x W x H)	30 x 15 x 4 cm

Safety Information

Please observe the following safety guidelines to ensure safe operation and prevent damage to your tablet or injury to yourself:




- Do not expose the tablet to extreme temperatures (hot or cold), direct sunlight, or high humidity.
- Avoid dropping the tablet or subjecting it to strong impacts.
- Keep the tablet away from water and other liquids. If it gets wet, power it off immediately and allow it to dry completely before attempting to use it again.
- Use only the charger and accessories provided or approved by Tibuta. Using unapproved accessories may void your warranty and pose safety risks.
- Do not attempt to disassemble, repair, or modify the tablet yourself. Refer all servicing to qualified personnel.
- Dispose of the device and its battery responsibly according to local environmental regulations. Do not dispose of it in household waste.

Warranty and Support

Your Tibuta E100 tablet comes with a service guarantee. For any questions, technical support, or warranty claims, please contact Tibuta customer service through the retailer where you purchased the

device or via the official Tibuta support channels. Please refer to your purchase documentation for specific warranty terms and contact information.

Related Documents - E100

<p>90*135mm 风琴折</p>	<p>Tibuta MasterPad E100 Tablet User Manual and Warranty Information</p> <p>This document provides important safety instructions, legal notices, FCC compliance information, package contents, device presentation, and warranty details for the Tibuta MasterPad E100 tablet.</p>
<p>90*135mm 风琴折</p>	<p>Tibuta MasterPad T100 User Manual and Warranty Information</p> <p>Comprehensive user manual and warranty card for the Tibuta MasterPad T100 tablet, including important safety instructions, getting started guide, and product specifications.</p>
	<p>TIBUTA MasterPad W200 Tablet User Manual and Safety Guide</p> <p>Official user manual and safety guide for the TIBUTA MasterPad W200 tablet, covering package contents, getting started, safety instructions, legal notices, and FCC compliance. Includes detailed information on battery safety, general usage precautions, and regulatory compliance.</p>
	<p>Tibuta W120 Quick Start Guide - Setup and Features</p> <p>Get started with your Tibuta W120 tablet PC. This guide provides essential information on setup, device features, ports, safety guidelines, and keyboard usage.</p>
	<p>Navitech Tibuta MasterPad E100 Tablet Case - Safety and Usage Guidelines</p> <p>Comprehensive safety and usage guidelines for the Navitech Tibuta MasterPad E100 tablet case, covering temperature limits, public use, cleaning, and personal safety precautions in multiple languages.</p>