

Roowest Roowest-Bench Plastic-05

Roowest 6-Foot Folding Bench Instruction Manual

Model: Roowest-Bench Plastic-05

INTRODUCTION

Thank you for choosing the Roowest 6-Foot Folding Bench. This portable and versatile bench is designed for various indoor and outdoor activities, including dining, camping, picnics, BBQ, sports, and garden use. Constructed from high-density polyethylene, it offers durability, stability, and ease of transport. This manual provides essential information for the safe and effective use of your new folding bench.

IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings before using the bench. Failure to follow these instructions may result in injury or damage to the product.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 440 pounds (approximately 200 kg). Overloading can cause the bench to collapse, leading to serious injury.
- **Stability:** Ensure the bench is fully unfolded and all legs are locked into place on a flat, stable surface before use. Uneven surfaces can cause instability and tipping.
- **Anchoring:** If using in windy conditions or on uneven terrain, consider anchoring the bench to prevent tipping.
- **Children:** Supervise children around the bench, especially during setup and folding, to prevent pinching or other injuries.
- **Folding Mechanism:** Exercise caution when folding and unfolding the bench to avoid pinching fingers or hands in the hinges.

PACKAGE CONTENTS

Verify that all components are present upon opening the package:

- 1x Roowest 6-Foot Foldable Bench Seat with Carrying Handle

SETUP INSTRUCTIONS

The Roowest folding bench comes fully assembled and is ready for use with minimal setup.

1. **Unfolding the Bench:** Place the folded bench on a flat surface. Release any latches or clips securing the bench in its folded position. Gently unfold the bench until it is fully extended.
2. **Extending the Legs:** Locate the legs on the underside of the bench. Swing each set of legs outwards until they are fully extended and click into their locked position. Ensure all four support points are firmly engaged for maximum stability.
3. **Check Stability:** Before sitting, gently press down on the bench surface to confirm that all legs are securely locked and the bench is stable.



Image: The Roowest 6-foot folding bench shown in both its fully unfolded state and its compact, folded state with carrying handle.

Portable&Lightweight

(Easily transport benches anywhere)



Easily Fit into the Trunk



Easy to Carry with Handle



Image: Illustration demonstrating the importance of ensuring all four leg supports are properly extended and locked for enhanced stability, contrasting with an improperly set up bench.

OPERATING INSTRUCTIONS

The Roowest folding bench is designed for versatile use in various settings.

- **Seating:** The bench provides comfortable seating for multiple individuals. Its sturdy construction ensures reliability even with several people seated simultaneously.
- **Versatile Applications:** Use the bench for outdoor dining, as extra seating for family gatherings, during camping trips, picnics, BBQ events, or as a waiting area for sports activities.
- **Portability:** The integrated carrying handle allows for easy transportation once the bench is folded. It can be conveniently stored in a car trunk for travel.

For Garden Dinner



Image: A family seated around an outdoor dining table, utilizing the Roowest folding bench as comfortable seating for a garden dinner.



Plastic Folding Bench for Outdoor Picnic

Image: Several children in sports uniforms sitting on the Roowest folding bench, indicating its suitability as a waiting area for sports activities.


MAINTENANCE AND CARE

Proper care will extend the life and appearance of your Roowest folding bench.

- **Cleaning:** Wipe the bench surface with a dry cloth after each use. For more thorough cleaning, use a damp cloth with mild soap and water. Avoid abrasive cleaners or harsh chemicals that could damage the high-density polyethylene material.
- **Waterproof Surface:** The bench features a waterproof top surface, making it suitable for outdoor use without concern for mold in rainy conditions. However, it is recommended to wipe off standing water to maintain cleanliness.
- **Storage:** When not in use, fold the bench and store it in a dry, protected area to prevent unnecessary exposure to extreme weather conditions.

Extra Stable and Reliable

Ours

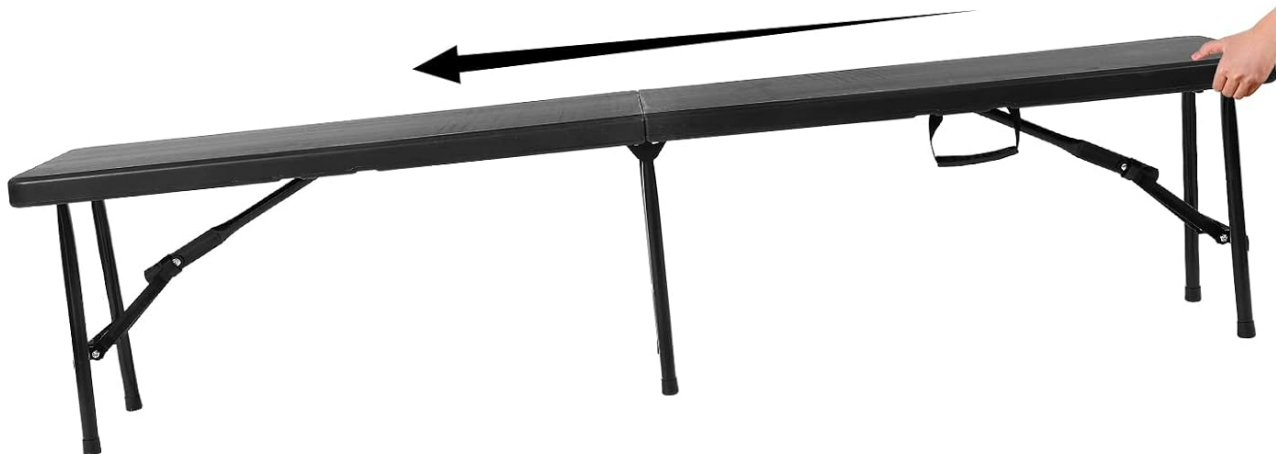

(Four support Keep it unfolded)

Others



Image: A hand wiping the surface of the Roowest folding bench, demonstrating its easy-to-clean waterproof top.

STORAGE

The Roowest folding bench is designed for convenient storage, saving space when not in use.

1. **Folding the Legs:** Ensure the bench is empty. Carefully release the locking mechanisms on each leg and fold them inwards towards the underside of the bench.
2. **Folding the Bench:** Once the legs are folded, gently fold the bench in half at its central hinge. Secure any latches or clips to keep it in the folded position.
3. **Carrying:** Use the integrated carrying handle for easy transport.
4. **Placement:** Store the folded bench in a dry, cool place, such as a garage, shed, or closet. Its compact size allows it to fit easily into small storage spaces or vehicle trunks.

For Children's Sports Waiting Area



Image: The folded Roowest bench easily fitting into a car trunk, and a close-up of the integrated carrying handle, highlighting its portability.

TROUBLESHOOTING

If you encounter issues with your Roowest folding bench, refer to the following common solutions:

- **Bench Wobbles:**
 - Ensure all legs are fully extended and their locking mechanisms are engaged.
 - Verify that the bench is placed on a flat, level surface.
 - Check for any debris or obstructions under the legs.
- **Difficulty Folding/Unfolding:**
 - Ensure no objects are obstructing the hinges or leg mechanisms.
 - Apply gentle, even pressure. Do not force the mechanism.

- Check if any parts are bent or damaged. If so, discontinue use and contact customer support.
- **Bench Does Not Lock When Open:**
 - Ensure the bench is fully extended and the legs are pushed out completely until the locking pins or mechanisms engage. Some models rely on the tension of the extended legs for stability rather than a distinct locking pin at the center hinge.
 - Verify that the bench is not overloaded, which could prevent proper locking.

SPECIFICATIONS

Feature	Detail
Product Dimensions (Unfolded)	71 x 12 x 17 inches (180 x 30 x 43 cm)
Color	Black
Material	High Density Polyethylene (HDPE)
Seat Height	17 Inches
Seating Capacity	2-3 people (depending on size)
Leg Style	Triangular Leg Design
Item Weight	15.7 ounces (approximately 0.44 kg)
Care Instructions	Wipe with Dry Cloth

1 Pcs Plastic Folding Bench with Carrying Handle

(Enhance the pressure and extend service life)



Easy to Carry



Easy to Clean

Image: A diagram illustrating the key dimensions of the Roowest folding bench, including length (183cm/72 inches), width (30cm/11.8 inches), and height (43cm/17 inches).

WARRANTY INFORMATION

Roowest products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the product packaging or contact Roowest customer support directly. Keep your purchase receipt as proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report an issue with your Roowest 6-Foot Folding Bench, please

contact our customer support team. Provide your product model number (Roowest-Bench Plastic-05) and a detailed description of your inquiry for prompt assistance.

For more information about Roowest products, you may visit the official Roowest Store:

[Visit the Roowest Store on Amazon](#)

© 2025 Roowest. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question