

[Manuals.plus](#) /

› [New England Stories](#) /

› New England Stories Powerful Handheld Milk Frother with Stand (Model H1-NORTHLIGHT-STAND) User Manual

New England Stories H1-NORTHLIGHT-STAND

New England Stories Powerful Handheld Milk Frother with Stand

Model: H1-NORTHLIGHT-STAND

INTRODUCTION

Thank you for choosing the New England Stories Powerful Handheld Milk Frother. This device is designed to effortlessly create rich, creamy foam for a variety of beverages, including coffee, cappuccinos, lattes, matcha, and hot chocolate. Its compact design and powerful motor make it a versatile addition to any kitchen. Please read this manual thoroughly before use to ensure proper operation and maintenance.



The New England Stories Handheld Milk Frother with its included stand, ready for use.

SAFETY INFORMATION

- Keep out of reach of children.
- Do not immerse the motor unit in water or any other liquid. The whisk attachment is washable.
- Ensure batteries are inserted correctly according to polarity markings.
- Remove batteries if the frother will not be used for an extended period.
- Do not use abrasive cleaners or scouring pads on the frother.
- Avoid contact with moving parts during operation.
- Use only for its intended purpose as described in this manual.


PACKAGE CONTENTS

Verify that all items are present in your package:

- Handheld Milk Frother (Motor Unit with Whisk)
- Instruction Manual (this document)
- Display Stand

PRODUCT OVERVIEW

Familiarize yourself with the components of your milk frother:

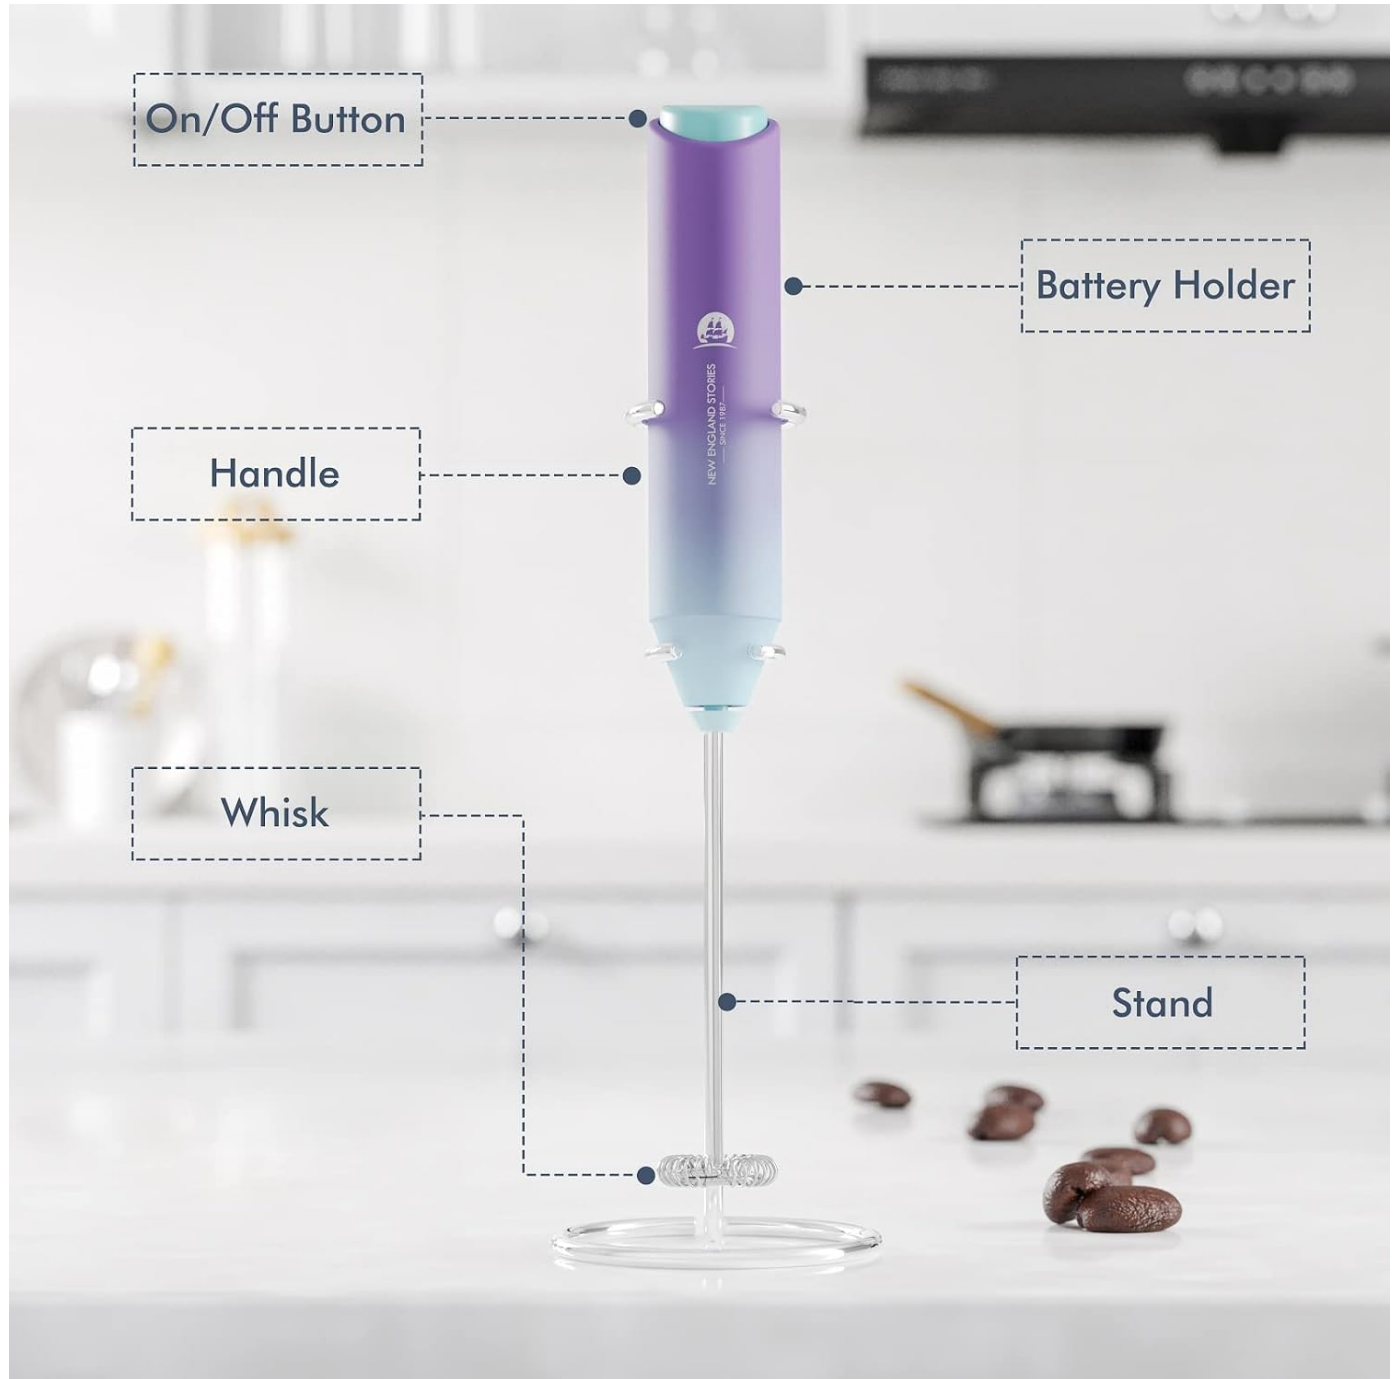

Labeled diagram of the frother's main parts: On/Off Button, Battery Holder, Handle, Whisk, and Stand.

- **On/Off Button:** Press and hold to activate the frother. Release to stop.
- **Battery Holder:** Compartment for AA batteries.
- **Handle:** Ergonomically designed for comfortable grip.
- **Whisk:** Stainless steel coil for frothing and mixing.
- **Stand:** For convenient storage and display.

SETUP

Battery Installation

1. Gently twist and pull the top cap of the frother to reveal the battery compartment.
2. Insert 2 AA batteries (not included) into the compartment, ensuring correct polarity (+/-) as indicated inside.
3. Replace the top cap, twisting it until it is securely closed.

The frother is now ready for use. You can place it on the included stand for easy access and storage.



The frother operates on 2 AA batteries, providing a powerful 19,000 RPM motor for efficient frothing.

OPERATING INSTRUCTIONS

Frothing Milk

1. Pour cold or warm milk into a cup or pitcher. For best results, use a narrow, tall container.

2. Submerge the whisk end of the frother into the milk, ensuring the whisk is fully covered but not touching the bottom of the container.
3. Press and hold the On/Off button to start frothing. Move the frother gently up and down, just below the surface of the milk, to incorporate air.
4. Continue frothing for approximately 15-30 seconds, or until the desired foam consistency is achieved.
5. Release the On/Off button to stop the frother. Carefully remove the whisk from the milk.



The frother quickly creates rich, creamy foam for your favorite beverages.

Mixing Other Beverages

The frother can also be used to mix various powdered drinks:

- **Matcha:** Mix matcha powder with hot water or milk for a smooth, lump-free drink.
- **Protein Shakes:** Blend protein powder into milk or water for a consistent shake.
- **Hot Chocolate:** Stir cocoa powder into hot milk for a rich, creamy hot chocolate.

Work Perfectly



Matcha



Latte



Protein Shakes



The versatile frother is suitable for matcha, lattes, protein shakes, and more.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your frother.

1. After each use, immediately rinse the stainless steel whisk under warm running water.
2. For thorough cleaning, you can briefly activate the frother in a glass of warm soapy water, then rinse under clean water.
3. Wipe the motor unit with a damp cloth. **Do not immerse the motor unit in water.**
4. Dry all parts completely before storing.
5. Store the frother on its stand in a dry place.

Product Care Instructions: Hand Wash Only (for the whisk). Wipe clean for the main body.

Easy Cleaning



Cleaning the stainless steel whisk is quick and easy under running water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Frother does not turn on.	Batteries are dead or incorrectly inserted.	Replace batteries with new AA batteries, ensuring correct polarity.
Weak frothing performance.	Low battery power.	Replace batteries.
Milk does not froth well.	Milk type or temperature is not ideal.	Use fresh, cold milk (dairy or plant-based designed for frothing). Ensure the whisk is just below the surface to incorporate air.
Frother makes unusual noise.	Whisk is bent or obstructed.	Check the whisk for any damage or obstructions. Ensure it is clean.

SPECIFICATIONS

- **Brand:** New England Stories
- **Model Name:** H1-NORTHLIGHT-STAND
- **Color:** North Light
- **Material:** Stainless Steel (whisk)
- **Special Feature:** Ergonomic Handle, Lightweight
- **Power Source:** Battery Powered (2 AA batteries required, not included)
- **Item Weight:** 0.16 Kilograms (approx. 5.6 ounces)
- **Product Care:** Hand Wash Only (whisk)
- **UPC:** 850037281763

WARRANTY AND SUPPORT

New England Stories provides warranty and technical support for this product. If you encounter any issues or have questions regarding your milk frother, please do not hesitate to contact our customer support team. We are committed to

ensuring your satisfaction.

For assistance, please visit the [New England Stories Store on Amazon](#) or refer to the contact information provided on your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question