

[Manuals.plus](#) /

› [CLP](#) /

› CLP Leni Dining Chair User Manual

CLP 321182

CLP Leni Dining Chair User Manual

Model: 321182 | Brand: CLP

INTRODUCTION

Thank you for choosing the CLP Leni Dining Chair. This manual provides important information regarding the assembly, usage, maintenance, and safety of your new chair. Please read this manual thoroughly before assembly and retain it for future reference.



Figure 1: Front view of the CLP Leni Dining Chair in black velvet with natural wooden legs.

SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the chair on a soft, clean surface to prevent scratches.
- Tighten all screws and bolts securely. Periodically check and re-tighten fasteners to ensure stability.
- Do not exceed the maximum weight capacity of **110 kg (242 lbs)**.
- Keep small parts away from children during assembly to prevent choking hazards.
- Do not stand on the chair or use it as a step stool.
- Avoid exposing the chair to direct sunlight or extreme temperatures to prevent material degradation.
- Always lift the chair when moving it; do not drag it across the floor to prevent damage to the legs and floor.



Figure 2: Maximum weight capacity of 110 kg.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present in your package:

- 1 x Chair Seat (Velvet Upholstered)
- 4 x Wooden Legs
- 1 x Metal Frame/Brace (for leg support)
- 1 x Hardware Pack (screws, washers, Allen key)
- 4 x Floor Protectors (pre-attached or separate)



Figure 3: Ensure all parts are present for assembly.

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your CLP Leni Dining Chair:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent damage.
2. **Attach Metal Frame:** Locate the metal frame/brace. Align it with the pre-drilled holes on the underside of the chair seat. Secure it using the provided screws and washers. Do not fully tighten yet.
3. **Attach Wooden Legs:** Insert each wooden leg into its designated slot on the metal frame. Ensure the legs are oriented correctly (the angled side should face outwards).
4. **Secure Legs:** Using the remaining screws and the Allen key, attach the wooden legs to the metal frame and the chair seat.

Once all legs are in place, gradually tighten all screws, ensuring the chair is stable and level.

5. **Final Check:** Gently rock the chair to ensure it is stable. If it wobbles, loosen the screws slightly, adjust the legs until stable, and then re-tighten firmly.



Figure 4: Side view illustrating the leg and frame structure.

USAGE AND OPERATION

The CLP Leni Dining Chair is designed for comfortable seating in dining rooms, kitchens, or home offices. Its generously padded seat and high back provide excellent support.

- **Proper Seating:** Sit centrally on the seat with your back against the backrest for optimal comfort and support.
- **Weight Distribution:** Distribute your weight evenly across the seat. Avoid putting excessive pressure on one side or the edge of the chair.
- **Floor Protection:** The chair is equipped with floor protectors on the bottom of each leg to prevent scratches on your flooring.



Figure 5: Integrated floor protectors for surface safety.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your CLP Leni Dining Chair, follow these maintenance guidelines:

- **Regular Cleaning:** For light tasks and general cleaning, wipe the velvet upholstery with a soft, damp cotton cloth. Avoid abrasive cleaners or harsh chemicals.
- **Vacuuming:** Use a vacuum cleaner with an appropriate upholstery nozzle to remove dust and debris from the velvet fabric.
- **Spills:** In case of spills, blot immediately with a clean, dry cloth. Do not rub, as this can spread the stain. For stubborn stains, consult a professional upholstery cleaner.
- **Leg Care:** Wipe wooden legs with a dry or slightly damp cloth. Avoid excessive moisture.
- **Fastener Check:** Periodically check all screws and bolts and re-tighten them as needed to maintain the chair's stability.



Figure 6: High-quality velvet upholstery for easy maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair wobbles	Loose screws or uneven assembly.	Check and tighten all screws. Ensure the chair is assembled on a flat surface. Loosen screws slightly, press down on the seat to level, then re-tighten.
Squeaking noise	Loose connections or friction between parts.	Tighten all screws. If noise persists, disassemble and reassemble, ensuring all parts are correctly aligned.

Problem	Possible Cause	Solution
Scratches on floor	Missing or damaged floor protectors.	Verify that all floor protectors are securely attached to the bottom of each leg. Replace if damaged.

SPECIFICATIONS

Feature	Detail
Model Number	321182
Color	Black
Overall Height	82 cm (32.3 inches)
Overall Width	46 cm (18.1 inches)
Overall Depth	60 cm (23.6 inches)
Seat Height	46 cm (18.1 inches)
Backrest Height	41 cm (16.1 inches)
Seat Surface (W x D)	46 x 40 cm (18.1 x 15.7 inches)
Max. Load Capacity	110 kg (242 lbs)
Product Weight	5 kg (11 lbs)
Materials	Velvet upholstery, natural wooden legs, metal frame



Figure 7: Detailed dimensions of the CLP Leni Dining Chair.

WARRANTY AND SUPPORT

CLP stands behind the quality of its products. For information regarding warranty coverage, product support, or to purchase replacement parts, please visit the official CLP store on Amazon or contact customer service through the Amazon platform.

Online Support: [Visit the CLP Store on Amazon](#)



Figure 8: CLP Brand Logo.