

Godox Xpro II-N

Godox Xpro II-N Wireless Flash Transmitter User Manual

Model: Xpro II-N

1. PRODUCT OVERVIEW

The Godox Xpro II-N is a professional wireless flash transmitter designed for Nikon cameras. It provides comprehensive control over Godox X system flashes, offering features such as multi-group control, TTL autoflash, manual flash, multi-flash, high-speed sync, and second-curtain sync. With its integrated Bluetooth functionality, it allows for convenient control via a smartphone application.



Figure 1: Godox Xpro II-N Wireless Flash Transmitter. This image shows the top and side view of the black transmitter, highlighting its large LCD screen, control buttons, and hot shoe mount. The screen displays channel and group settings, along with flash power levels.

2. SETUP AND INSTALLATION

2.1 Battery Installation

The Xpro II-N uses two AA batteries. Open the battery compartment cover located on the side or bottom of the unit, insert the batteries according to the polarity indicators, and close the cover securely.

2.2 Mounting on Camera

Slide the hot shoe foot of the Xpro II-N into your Nikon camera's hot shoe. Once fully inserted, rotate the locking ring clockwise to secure the transmitter firmly in place. Ensure it is securely attached to prevent accidental dislodgement during use.

2.3 Powering On/Off

Locate the "OFF ON" switch on the side of the transmitter. Slide the switch to the "ON" position to power on the unit. The LCD screen will illuminate. To power off, slide the switch back to the "OFF" position.

2.4 Bluetooth Pairing

To use the Bluetooth function, download the Godox Light app on your smartphone. Power on the Xpro II-N. Open the app, search for available devices, and select the Xpro II-N to pair. Follow the on-screen instructions in the app to complete the pairing process. The Bluetooth icon on the transmitter's screen will indicate a successful connection.

3. OPERATING INSTRUCTIONS

3.1 Control Panel Overview

The Xpro II-N features a large LCD screen and various buttons for intuitive control:

- **LCD Screen:** Displays channel (CH1 ID), group settings (A, B, C, D, E), flash modes (M for Manual), power levels (e.g., 1/128, 1/64), and other indicators (PROF, ALL, SYNC, ZOOM).
- **Group Buttons (A-E):** Dedicated buttons on the left side to select and adjust individual flash groups.
- **SET Button:** Central button within the dial for confirming selections.
- **Dial:** Rotary dial around the SET button for navigating menus and adjusting values.
- **MODE/LOCK Button:** Toggles between flash modes and locks/unlocks settings.
- **Flash Trigger Button (Lightning Bolt Icon):** Manually fires a test flash.
- **RST Button:** Resets settings.
- **MENU Button:** Accesses the main menu for advanced settings.
- **Zoom Button (Magnifying Glass Icon):** Adjusts the flash zoom coverage.
- **SYNC Button:** Toggles sync modes (High-Speed Sync, Second-Curtain Sync).
- **ALL Button:** Selects all groups for simultaneous adjustment.

3.2 Basic Operation

1. **Setting Channel and Group:** Use the group buttons (A-E) to select a group. Use the dial to change the channel (CH1 ID). Ensure your flashes are set to the same channel and group as the transmitter.
2. **Adjusting Flash Power (Manual Mode):** Select a group (e.g., A), press the SET button, then use the dial to adjust the power level (e.g., from 1/128 to 1/1).
3. **Changing Flash Mode:** Press the MODE/LOCK button to cycle through available flash modes (TTL, Manual, Multi).
4. **High-Speed Sync (HSS):** Press the SYNC button to activate HSS, indicated by a specific icon on the screen.
5. **Zoom Control:** Press the Zoom button and use the dial to adjust the flash zoom coverage to match your lens focal length.

3.3 Advanced Functions via Bluetooth App

Once paired, the Godox Light app provides an intuitive interface for controlling all transmitter functions remotely. This includes adjusting power, changing modes, setting groups, and updating firmware.

4. MAINTENANCE

4.1 Cleaning

Wipe the transmitter with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth with mild detergent, then wipe dry immediately. Do not use solvents or abrasive cleaners. Keep the hot shoe contacts clean and free of debris.

4.2 Storage

When not in use for extended periods, remove the batteries to prevent leakage. Store the unit in a cool, dry place, away from direct sunlight, dust, and excessive humidity.

4.3 Firmware Updates

Periodically check the Godox official website or the Godox Light app for firmware updates. Updating the firmware can improve performance, add new features, and fix bugs. Follow the instructions provided with the firmware update carefully.

5. TROUBLESHOOTING

- **Transmitter not powering on:** Check battery installation and ensure batteries have sufficient charge.
- **Flashes not firing:**
 - Ensure the transmitter is securely mounted on the camera's hot shoe.
 - Verify that the transmitter and flashes are set to the same channel and group.
 - Check the flash units are powered on and ready to fire.
 - Test with fresh batteries in both the transmitter and flashes.
- **Bluetooth connection issues:**
 - Ensure Bluetooth is enabled on your smartphone.
 - Restart both the transmitter and your smartphone.
 - Try re-pairing the device through the Godox Light app.
- **Inconsistent flash output:**
 - Check for obstructions between the transmitter and flashes.
 - Ensure the flash mode and power settings are correct for your shooting conditions.
 - Verify that the camera's shutter speed is within the sync speed limits, or HSS is enabled if shooting above sync speed.

6. SPECIFICATIONS

Feature	Detail
Brand	Godox
Model	Xpro II-N
Item Weight	100 Grams
Package Dimensions	13 x 10.1 x 6.6 centimeters
Included Components	1 product (Transmitter)
ASIN	B0BTPML964

7. WARRANTY AND SUPPORT

7.1 Manufacturer's Warranty

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Godox website for detailed warranty terms and conditions.

7.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or service inquiries, please contact Godox customer support through their official website or authorized service centers. Keep your purchase receipt as proof of purchase for warranty claims.



© 2023 Godox. All rights reserved.