

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Samsung](#) /

› [Samsung Full HD Smart TV UE32T5305CEXXC User Manual](#)

Samsung UE32T5305CEXXC

Samsung Full HD Smart TV User Manual

MODEL: UE32T5305CEXXC

1. Introduction

This manual provides essential information for the safe and efficient use of your Samsung Full HD Smart TV, model UE32T5305CEXXC. Please read this manual thoroughly before operating the device and retain it for future reference.



Front view of the Samsung Full HD Smart TV.

2. Safety Information

To reduce the risk of electric shock, fire, or injury, always follow these basic safety precautions:

- Do not expose this apparatus to rain or moisture.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel.

3. Package Contents

Verify that all items are included in your product box:

- Samsung Full HD Smart TV
- Remote Control

- Batteries (for Remote Control)
- Power Cable
- User Manual (Printed)
- E-manual (Digital)

4. Setup

4.1 Unpacking

Carefully remove the TV and all accessories from the packaging. It is recommended to keep the original packaging for future transport or servicing.

4.2 Stand Assembly

Place the TV screen face down on a soft, flat surface. Align the stand base with the slots on the bottom of the TV and secure it with the provided screws. Ensure the stand is firmly attached before placing the TV upright.



Angled front-right view of the Samsung Full HD Smart TV, showing the attached stand.

4.3 Wall Mounting (Optional)

If you choose to wall-mount your TV, use a VESA-compliant wall mount kit (sold separately). Follow the instructions provided with your wall mount. Ensure proper ventilation around the TV.

4.4 Connecting Peripherals

- **Power:** Connect the power cable to the TV's power input and then to a wall outlet.
- **HDMI:** Use HDMI cables to connect external devices like Blu-ray players, game consoles, or set-top boxes.
- **Antenna/Cable:** Connect an antenna or cable TV source to the ANT IN port.
- **USB:** Connect USB storage devices for media playback.

4.5 Initial Power On & First-Time Setup

After connecting all necessary cables, plug in the TV. Press the power button on the remote control. The TV will guide you through the initial setup process, including language selection, network connection, and channel scanning.


5. Operating the TV

5.1 Remote Control Functions

The remote control allows you to navigate menus, adjust volume, change channels, and access Smart TV features. Refer to the remote control diagram in the E-manual for specific button functions.

5.2 Smart TV Features (Tizen OS)

Your Samsung Smart TV runs on the Tizen operating system, providing access to a wide range of applications and streaming services. Press the Smart Hub button on your remote to access the Smart Hub interface.

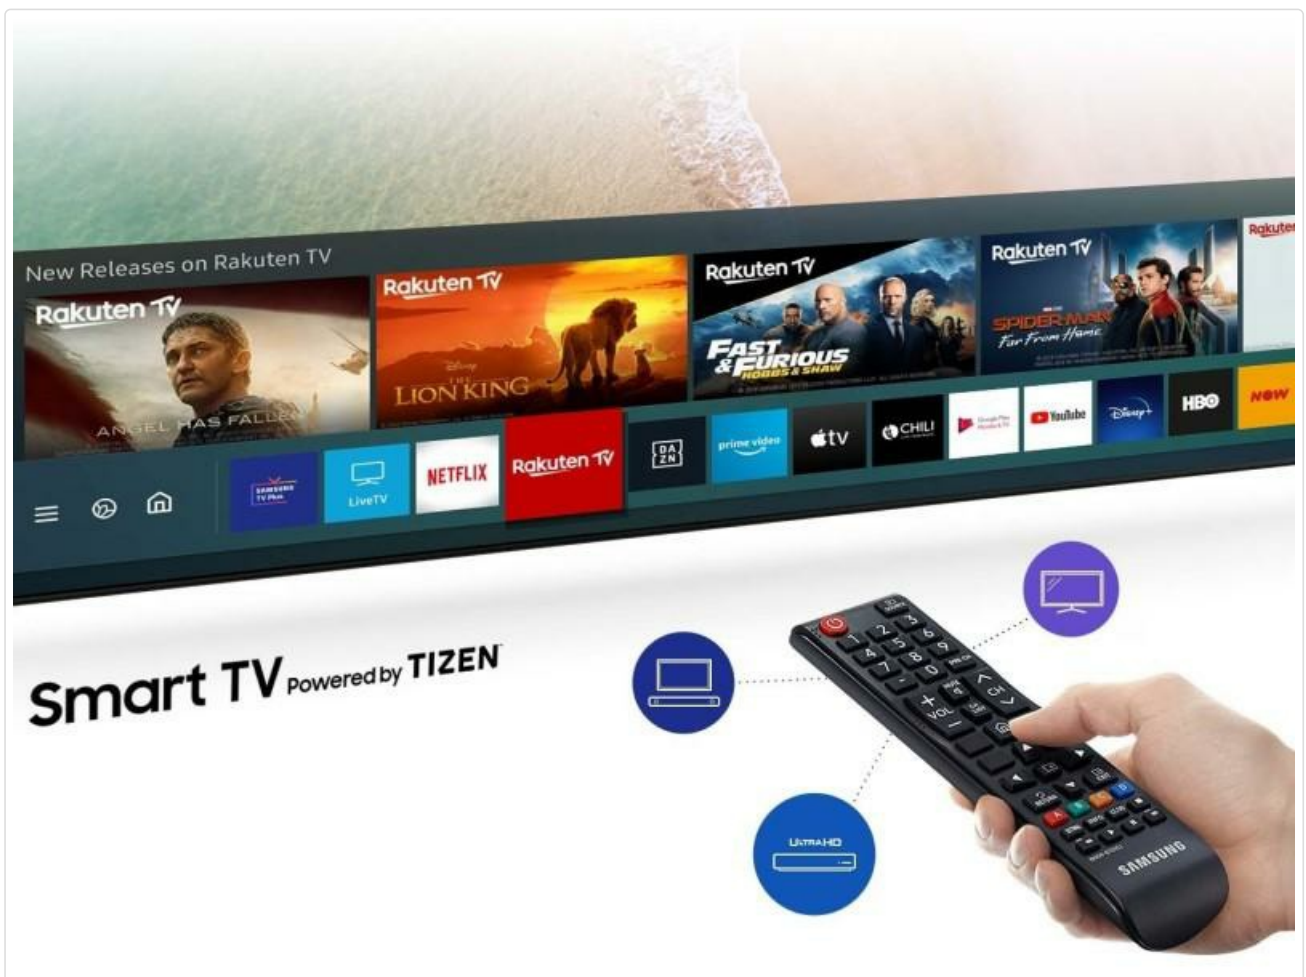

The Samsung Smart TV interface powered by Tizen, with a remote control pointing towards various app icons.

5.3 Picture Settings

Adjust picture settings to optimize your viewing experience:

- **Full HD Resolution:** Enjoy clear and detailed images with twice the resolution of standard HD.



Comparison image showing the difference between HD and Full HD resolution, with Full HD offering greater detail.

- **HDR (High Dynamic Range):** Enhances brightness expression, providing a wider spectrum of colors and visual details, especially in dark scenes.



Visual comparison illustrating the enhanced brightness and detail provided by HDR (High Dynamic Range) compared to SDR (Standard Dynamic Range).

- **PurColor:** Delivers a broad range of colors for an immersive and optimal viewing experience.



Image demonstrating the wider color spectrum achieved with PurColor technology versus conventional color processing.

- **Micro Dimming Pro:** Optimizes contrast by analyzing and adjusting small sections of the screen.
- **Ultra Clean View:** Reduces distortion and enhances detail by analyzing original content with an advanced algorithm.



Comparison showing how Ultra Clean View reduces distortion and enhances image clarity compared to a conventional view.

- **Contrast Enhancer:** Brings flat images to life by adjusting contrast for improved depth and picture quality.



Example of Contrast Enhancer in action, improving depth and quality of flat images.

5.4 Sound Settings

Access the sound menu to adjust volume, select sound modes (e.g., Standard, Music, Movie), and configure audio output options.

5.5 External Device Management

Use the Source menu to switch between connected devices. The TV also supports features like 'PC on TV' for remote access to your computer.



Image showing the "PC on TV" feature, displaying multiple desktop windows on the television screen.

The TV is also compatible with certain voice assistants, such as Alexa.

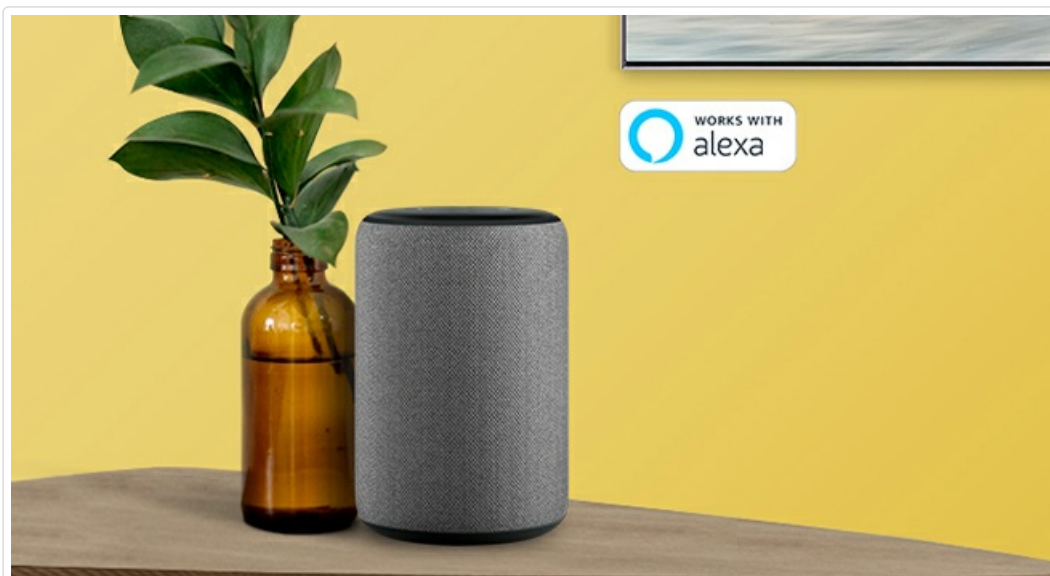


Image of an Amazon Alexa smart speaker with a "Works with Alexa" badge, indicating compatibility.

6. Maintenance

6.1 Cleaning

To clean the screen, gently wipe it with a soft, lint-free cloth. For the TV frame, use a soft, dry cloth. Do not use harsh chemicals or abrasive materials.

6.2 Software Updates

Periodically check for software updates through the TV's settings menu to ensure optimal performance and access to the latest features. Updates can be performed via network connection.

7. Troubleshooting

If you encounter issues with your TV, refer to the following common problems and solutions:

- **No Power:** Ensure the power cable is securely connected to both the TV and the wall outlet. Test the outlet with another device.
- **No Picture/Sound:** Check that the correct input source is selected. Verify all cable connections (HDMI, antenna).
- **Remote Control Not Working:** Replace the batteries. Ensure there are no obstructions between the remote and the TV's sensor.
- **Network Connection Issues:** Restart your router and modem. Re-enter your Wi-Fi password in the TV's network settings.
- **Poor Picture Quality:** Adjust picture settings (brightness, contrast, sharpness). Check the quality of the input source.

For more detailed troubleshooting, consult the E-manual accessible through your TV's menu or visit the Samsung support website.

8. Specifications

Feature	Detail
Model Number	UE32T5305CEXXC
Brand	Samsung
Display Size	32 inches
Resolution	Full HD (1920 x 1080)
Dimensions (with stand)	50 x 50 x 28 cm
Weight	4 kg
Energy Efficiency Rating	F
Operating System	Tizen Smart TV
Picture Enhancements	HDR, PurColor, Micro Dimming Pro, Ultra Clean View, Contrast Enhancer

9. Warranty and Support

Your Samsung TV is covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Samsung website.

For technical support, service requests, or further assistance, please contact Samsung Customer Service or visit www.samsung.com/support.

