



[Manuals.plus](#) /

› [Mattel](#) /

› [Mattel Fisher-Price Little People Big ABC Animal Train HCL79 Replacement Conductor Figure Manual](#)

Mattel HCL79

Instruction Manual

MATTEL FISHER-PRICE LITTLE PEOPLE BIG ABC ANIMAL TRAIN HCL79 REPLACEMENT CONDUCTOR/DRIVER FIGURE

Introduction

This manual provides essential information for the Mattel Fisher-Price Little People Big ABC Animal Train HCL79 Replacement Conductor/Driver Figure. This figure is designed as a direct replacement part for the original playset, ensuring continued imaginative play and interaction with the train.

What's Included:

- One (1) Conductor/Driver Figure

Replacement Conductor / Driver Figure Only



Image: Close-up view of the replacement Conductor/Driver Figure.

Setup

The Conductor/Driver Figure requires no assembly. It is ready for immediate use with the compatible Fisher-Price Little People Big ABC Animal Train (Model HCL79).

1. Identify the conductor's seat on your Fisher-Price Little People Big ABC Animal Train (HCL79). This is typically located at the front of the train.
2. Gently place the Conductor/Driver Figure into the designated seat. Ensure the figure is stable and seated correctly.

Replacement Conductor / Driver Figure Only



Image: The Fisher-Price Little People Big ABC Animal Train with the Conductor/Driver Figure and other animal figures.

Operating Instructions

The Conductor/Driver Figure is designed for interactive and imaginative play. Once placed in the train's seat, it becomes an integral part of the playset's narrative.

- **Role-Play:** Encourage children to use the figure as the train's operator, guiding the animal passengers on their journey.
- **Interaction:** The figure is compatible with the scale and design of other Little People figures and playsets, allowing for expanded play scenarios.

Maintenance

Proper care will ensure the longevity of your replacement figure.

- **Cleaning:** Wipe the figure with a soft, damp cloth. Use mild soap if necessary, then rinse thoroughly with clean water and air dry. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the figure in a clean, dry place away from direct sunlight and extreme temperatures to prevent material degradation or discoloration.
- **Inspection:** Periodically inspect the figure for any signs of wear or damage. Discontinue use if

significant damage is observed.

Troubleshooting

This section addresses common concerns regarding the Conductor/Driver Figure.

- **Figure does not fit in the train seat:** Ensure the figure is oriented correctly. The figure is designed to fit specifically in the conductor's seat of the Fisher-Price Little People Big ABC Animal Train (HCL79). Verify you are using the correct playset.
- **Figure appears damaged:** If the figure arrives damaged or becomes damaged during normal play, please refer to the customer support section for assistance.

Specifications

Feature	Detail
Product Type	Replacement Toy Figure
Brand	Mattel
Model Compatibility	Fisher-Price Little People Big ABC Animal Train (HCL79)
Material	Plastic
Item Weight	Approximately 2 Ounces
Item Dimensions (L x W x H)	Approximately 2 x 2 x 1 inches
Minimum Age Recommendation	12 Months
Maximum Age Recommendation	60 Months
Assembly Required	No
Batteries Required	No

Warranty Information

Specific warranty details for this replacement figure are not provided in the product information. For warranty inquiries, please refer to the original Fisher-Price Little People Big ABC Animal Train (HCL79) product manual or contact Mattel customer service directly.

Customer Support

If you have questions, require assistance, or need to report an issue with your replacement Conductor/Driver Figure, please contact the retailer from whom you purchased the item or visit the official Mattel website for customer service contact information.