

[Manuals.plus](#) /

› [Gaabor](#) /

› Gaabor 6L 1000W Multifunction Electric Pressure Cooker User Manual

Gaabor GE-S60A

Gaabor 6L 1000W Multifunction Electric Pressure Cooker User Manual

Model: GE-S60A

1. INTRODUCTION

Thank you for choosing the Gaabor 6L 1000W Multifunction Electric Pressure Cooker. This appliance is designed to provide efficient and convenient cooking for a variety of dishes, making meal preparation simpler and faster. Its advanced features ensure safety and consistent results.

Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety. Keep this manual for future reference.

Important Safety Instructions

- Always ensure the lid is properly locked before operating.
- Do not touch hot surfaces. Use handles or knobs.
- Do not immerse the appliance in water or other liquids.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug.
- Do not use outdoors.
- This appliance cooks under pressure. Improper use may result in scalding injury.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Gaabor Electric Pressure Cooker:

- Main Unit (Housing with Control Panel)

- Removable Inner Pot (Ceramic/Stainless Steel)
- Lid with Pressure Release Valve and Locking Mechanism
- Condensation Collector
- Power Cord
- Measuring Cup (may be included)
- Rice Spoon (may be included)



Figure 2.1: Front view of the Gaabor Electric Pressure Cooker, showcasing its blue metallic finish and central control panel.



Figure 2.2: Detailed view of the pressure cooker's lid, highlighting the pressure release valve and handle.



Figure 2.3: Illustration of how to remove the inner pot for cleaning or serving.

3. INITIAL SETUP

1. **Unpacking:** Carefully remove all packaging materials and inspect the cooker for any damage.
2. **First Cleaning:** Before first use, wash the inner pot, lid, and sealing ring with warm, soapy water. Rinse thoroughly and dry all parts completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the pressure cooker on a stable, level, heat-resistant surface, away from heat sources and water. Ensure adequate ventilation around the unit.
4. **Install Condensation Collector:** Attach the condensation collector to the back of the cooker.
5. **Power Connection:** Plug the power cord into the cooker's receptacle, then into a grounded 127V electrical outlet.

4. OPERATING INSTRUCTIONS

Basic Operation

1. **Add Ingredients:** Place the inner pot into the main unit. Add your ingredients and liquid according to your recipe. Do not fill above the MAX fill line.
2. **Close Lid:** Place the lid on the cooker, aligning the arrow on the lid with the arrow on the cooker body. Rotate the lid clockwise until it locks into place. Ensure the pressure release valve is set to the "Sealing" position.
3. **Select Cooking Program:** Plug in the cooker. The digital display will light up. Select your desired cooking program (e.g., RICE, MEAT, SOUP, CAKE, CONGEE, BEANS/TENDONS) by pressing the corresponding button on the control panel.



Figure 4.1: Close-up of the intuitive control panel with various preset cooking functions.

4. **Adjust Settings (Optional):** Some programs allow for taste adjustment (LESS, NORMAL, MORE) or preset time adjustment. Refer to the specific program details in your recipe.
5. **Start Cooking:** The cooker will automatically begin the preheating phase, then build pressure, and finally start the cooking countdown.
6. **Pressure Release:** Once cooking is complete, the cooker will beep and automatically switch to "Keep Warm" mode. To release pressure, carefully turn the pressure release valve to the "Venting" position. Keep hands and face away from the steam. Wait until the float valve drops down completely before opening the lid.
7. **Open Lid:** Rotate the lid counter-clockwise and lift it carefully away from you to avoid residual steam.

Pre-programmed Functions

The Gaabor Electric Pressure Cooker features several pre-programmed functions for common dishes:

- **RICE:** For various types of rice.
- **MEAT:** Ideal for tenderizing meats.
- **BEANS/TENDONS:** For cooking tough beans and tendons to perfection.
- **SOUP:** For preparing delicious soups and broths.
- **CAKE:** For baking moist cakes.
- **CONGEE:** For preparing creamy congee.
- **KEEP WARM/CANCEL:** Maintains food temperature after cooking or cancels a program.

TEMPORIZADOR DE COZIMENTO DE 24 HORAS



Figure 4.2: The 24-hour timer allows for delayed cooking, setting a start time for convenience.

COZINHAR COM ALTA PRESSÃO PARA UMA REFEIÇÃO RÁPIDA E SABOROSA

Rápido aquecimento sem interrupção para um cozimento eficiente



Figure 4.3: High-pressure cooking ensures rapid and efficient meal preparation.

5. CARE AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your pressure cooker.

Cleaning

- 1. **Unplug and Cool:** Always unplug the cooker and allow it to cool completely before cleaning.
- 2. **Inner Pot:** The removable inner pot is dishwasher safe or can be washed by hand with warm, soapy water. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
- 3. **Lid:** Wash the lid, sealing ring, and pressure release valve assembly with warm, soapy water. Ensure no food particles are lodged in the valve. The sealing ring should be removed and cleaned regularly.
- 4. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water or any other liquid.
- 5. **Condensation Collector:** Empty and clean the condensation collector after each use.
- 6. **Drying:** Ensure all parts are completely dry before reassembling and storing.

Storage

Store the cooker in a dry place. You may place the lid upside down on the inner pot to save space and allow for air circulation.

6. TROUBLESHOOTING GUIDE

If you encounter issues with your Gaabor Electric Pressure Cooker, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Cooker not turning on.	Not plugged in; power outlet issue; damaged cord.	Ensure power cord is securely plugged into both the cooker and a working outlet. Check circuit breaker. Contact customer support if cord is damaged.
Pressure not building.	Lid not properly sealed; pressure release valve in "Venting" position; insufficient liquid.	Ensure lid is fully locked. Turn pressure release valve to "Sealing". Add more liquid if necessary (minimum 1 cup). Check sealing ring for proper placement or damage.
Steam leaking from lid.	Sealing ring not properly installed or damaged; food debris on sealing ring or rim.	Check and reposition the sealing ring. Clean the sealing ring and lid rim. Replace sealing ring if damaged.
Food not cooked properly.	Incorrect cooking time/program; insufficient liquid; power interruption.	Adjust cooking time or select appropriate program. Ensure sufficient liquid. Check power supply.

If the problem persists after trying these solutions, please contact Gaabor customer support.

7. PRODUCT SPECIFICATIONS

Model: GE-S60A

Capacity: 6 Liters

Power: 1000W

Voltage: 127V

Material: Plastic exterior, Ceramic and Stainless Steel inner pot

Special Features: Keep Warm setting, Automatic Shutdown, Programmable, Locking Lid

Dimensions (Packaging): 40.29 x 39.5 x 35.1 cm

Weight (Packaging): 5.8 kg

Certification: Product certified by OCP 0098 (Inmetro Registration)

8. WARRANTY AND SUPPORT

Gaabor products are manufactured to high-quality standards. For warranty information and customer support, please refer to the warranty card included with your product or visit the official Gaabor website.

For assistance, you may contact Gaabor customer service through their official channels. Please have your model number (GE-S60A) and purchase information ready when contacting support.

Online Resources:

- Visit the official Gaabor store on Amazon: [Gaabor Official Store](#)