

## FYDEE A6

# FYDEE Bluetooth Turntable Model A6 User Manual

Your Guide to Enjoying Vinyl Records and Digital Audio

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all safety and operating instructions carefully before using this product. Keep these instructions for future reference.

- **Water and Moisture:** Do not use this apparatus near water.
- **Heat:** Do not place near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Power Source:** Only use the power adapter supplied by the manufacturer.
- **Cleaning:** Clean only with a dry cloth.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Ventilation:** Ensure proper ventilation. Do not block any ventilation openings.
- **Dust Cover:** Always use the dust cover to protect the turntable from dust and debris when not in use.

## 2. PRODUCT OVERVIEW


### 2.1 Package Contents

Verify that all items listed below are included in your package:

- 1 x FYDEE Record Player (Model A6)
- 1 x Power Adapter
- 1 x RCA Line
- 1 x Dust Cover
- 1 x User Manual

### 2.2 Turntable Components

Familiarize yourself with the various parts of your FYDEE Turntable:

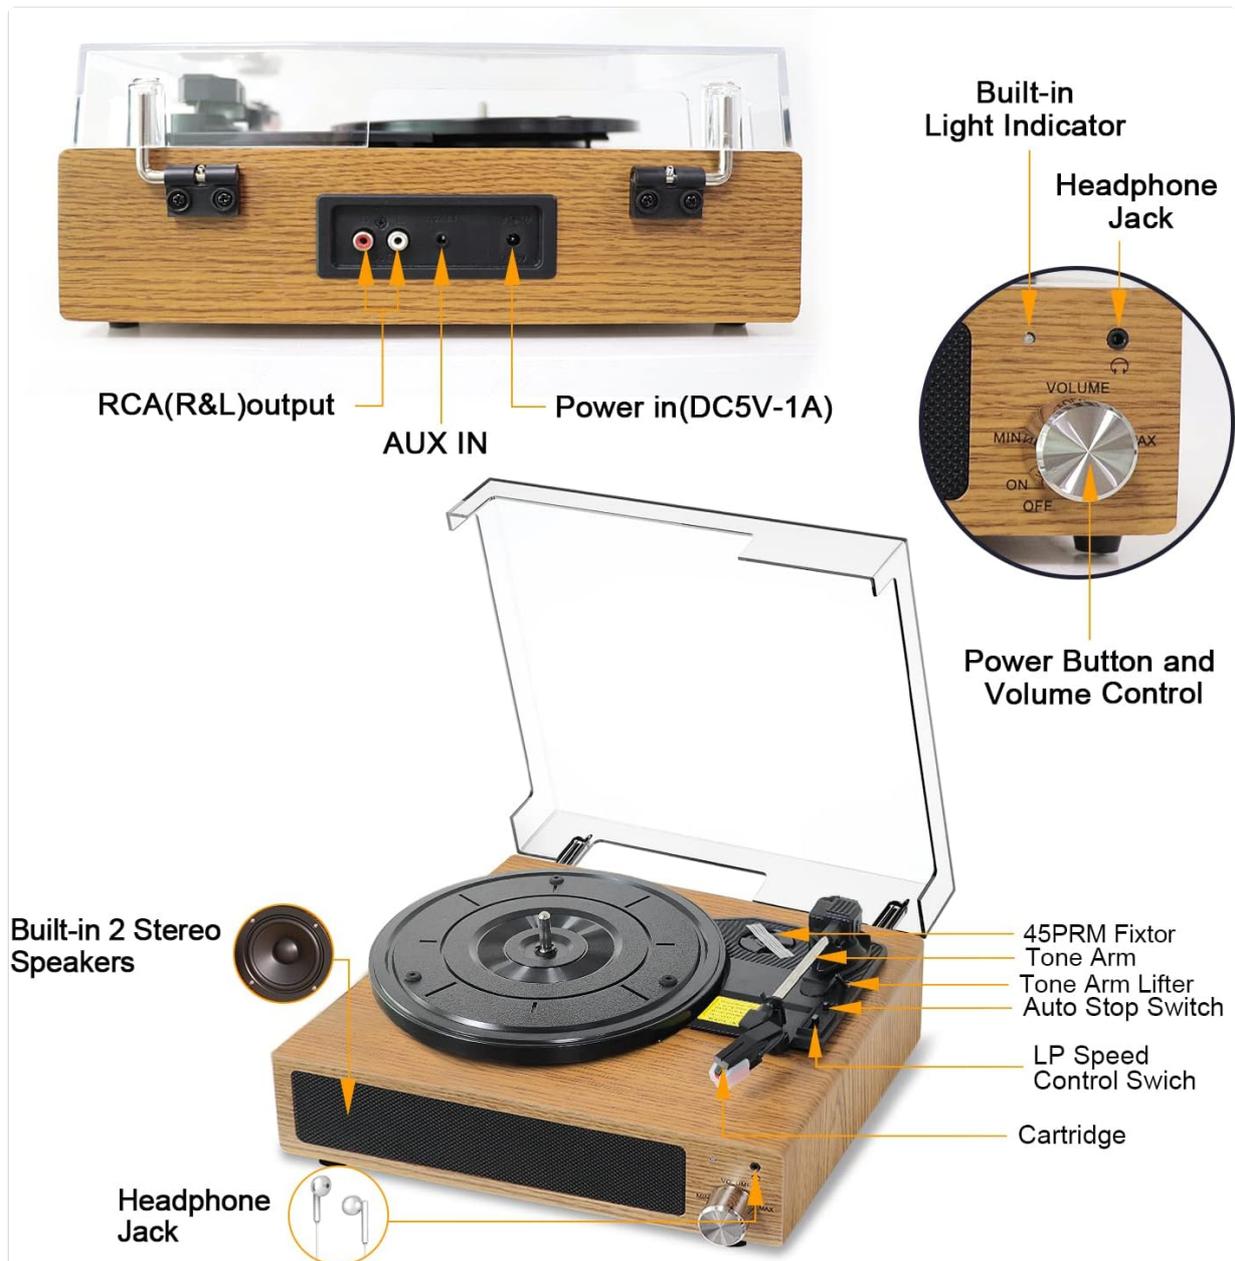

**Image:** Detailed view of the FYDEE Turntable, highlighting key components such as the 45 RPM adaptor, tone arm lifter, auto stop switch, LP speed switch, cartridge, built-in stereo speakers, headphone jack, power button, volume control, light indicator, RCA (R&L) output, AUX IN, and power input (DC5V-1A).

1. **Dust Cover:** Protects the turntable from dust.
2. **Platter:** Where the record rests during playback.
3. **Spindle:** Holds the record in place.
4. **45 RPM Adaptor:** Used for playing 7-inch records with a large center hole.
5. **Tone Arm:** Holds the cartridge and stylus.
6. **Tone Arm Lifter:** Raises and lowers the tone arm gently.
7. **Auto Stop Switch:** Enables or disables the auto-stop function.
8. **LP Speed Switch:** Selects playback speed (33 1/3, 45, 78 RPM).
9. **Cartridge with Stylus:** Reads the grooves of the record.
10. **Built-in Stereo Speakers:** Provide audio output.
11. **Headphone Jack:** For private listening.

12. **Volume Control:** Adjusts the output volume.
13. **Power Button:** Turns the unit on/off.
14. **Light Indicator:** Shows power and mode status.
15. **RCA (R&L) Output:** Connects to external amplifiers or powered speakers.
16. **AUX IN:** Connects external audio devices.
17. **Power In (DC5V-1A):** Connects the power adapter.

## 3. SETUP INSTRUCTIONS

---

### 3.1 Unpacking

Carefully remove the turntable from its packaging. Retain the packaging materials for future transport or storage.

### 3.2 Placement

Place the turntable on a stable, level surface away from direct sunlight, heat sources, and excessive dust or vibrations. Ensure there is adequate space around the unit for ventilation.

### 3.3 Power Connection

Connect the supplied power adapter to the 'Power In (DC5V-1A)' port on the back of the turntable and then plug the adapter into a wall outlet.

### 3.4 Dust Cover Installation

Gently attach the dust cover to the hinges at the back of the turntable. The dust cover helps protect the platter and tone arm assembly when the unit is not in use.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Playing Vinyl Records

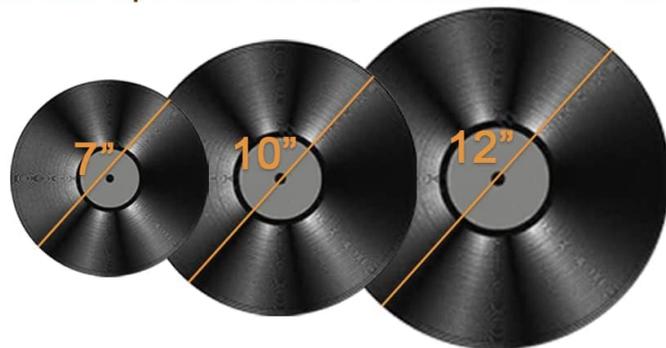
1. **Power On:** Turn the Power Button/Volume Control knob clockwise to power on the unit. The light indicator will illuminate.
2. **Select Speed:** Set the LP Speed Switch to the appropriate speed (33 1/3, 45, or 78 RPM) for your record.
3. **Place Record:** Place your vinyl record on the turntable platter. If playing a 7-inch record with a large center hole, use the 45 RPM adaptor.
4. **Lift Tone Arm:** Gently lift the tone arm using the Tone Arm Lifter.
5. **Position Stylus:** Move the tone arm so the stylus is positioned directly over the desired starting groove of the record.
6. **Lower Tone Arm:** Slowly lower the tone arm onto the record using the Tone Arm Lifter. The record will begin to play.
7. **Adjust Volume:** Rotate the Volume Control knob to adjust the sound level.
8. **Auto Stop Function:** If the Auto Stop Switch is ON, the turntable will automatically stop spinning when the record finishes. If OFF, it will continue to spin.

9. **End Playback:** When finished, gently lift the tone arm, return it to its rest, and turn the Power Button/Volume Control knob counter-clockwise to power off the unit.



## 7/10/12 INCHES RECORD

Selectable speeds of 33, 45 and 78 RPM



7"78PRM / 10"45PRM / 12"33PRM

**Image:** Visual guide for selecting the correct playback speed (33 1/3, 45, or 78 RPM) based on the record size (7, 10, or 12 inches).

### 4.2 Bluetooth Mode (Receiver Function)

The FYDEE Turntable can act as a Bluetooth receiver, allowing you to stream audio from your compatible devices.

1. **Power On:** Turn the Power Button/Volume Control knob clockwise to power on the unit.
2. **Activate Bluetooth:** The turntable will automatically enter Bluetooth pairing mode. The light indicator may flash to indicate it is discoverable.
3. **Pair Device:** On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings and search for available devices. Select 'A6' from the list.
4. **Confirmation:** Once paired, the turntable will emit a confirmation sound, and the light indicator will typically stop flashing and remain solid.
5. **Play Audio:** Start playing music on your connected device. The audio will now play through the turntable's built-in speakers.

6. **Adjust Volume:** Use the Volume Control knob on the turntable and/or the volume controls on your connected device to adjust the sound level.



## Bluetooth Wireless

Enjoy your favorite music via smart phone or tablet

**Image:** A smartphone screen displaying Bluetooth settings, showing the 'A6' turntable available for connection, illustrating the Bluetooth pairing process.

### 4.3 AUX Input Connection

Connect external audio sources like MP3 players or older devices using the AUX IN port.

1. **Power On:** Turn the Power Button/Volume Control knob clockwise to power on the unit.
2. **Connect Cable:** Insert a 3.5mm audio cable (not included) into the AUX IN port on the back of the turntable. Connect the other end to the headphone jack or audio output of your external device.
3. **Play Audio:** Start playing audio on your external device. The sound will be routed through the turntable's speakers.
4. **Adjust Volume:** Use the Volume Control knob on the turntable and/or the volume controls on your external device.

### 4.4 RCA Output Connection

Connect your turntable to an external amplifier or powered speakers for enhanced audio output.

1. **Power Off:** Ensure both the turntable and your external audio system are powered off before making connections.
2. **Connect RCA Cable:** Use the supplied RCA cable. Connect the red plug to the 'R' (Right) output and the white plug to the 'L' (Left) output on the back of the turntable.
3. **Connect to External System:** Connect the other end of the RCA cable to the corresponding audio input (e.g., 'AUX IN', 'LINE IN') on your amplifier or powered speakers.
4. **Power On:** Power on your external audio system, then power on the turntable.
5. **Play Audio:** Play a record on the turntable. The audio will now be output through your external system.
6. **Adjust Volume:** Adjust the volume using your external audio system's controls. The turntable's internal volume control may not affect the RCA output.

## 4.5 Headphone Jack

For private listening, connect headphones to the 3.5mm Headphone Jack on the front of the turntable.

1. **Connect Headphones:** Plug your 3.5mm headphones into the Headphone Jack.
2. **Play Audio:** Play a record or stream via Bluetooth/AUX.
3. **Adjust Volume:** Use the Volume Control knob on the turntable to adjust the headphone volume.



**Image:** An illustration demonstrating how to connect external speakers via RCA output, smartphones/tablets via AUX-IN, and headphones via the 3.5mm jack to the FYDEE Turntable.

## 5. MAINTENANCE

---

### 5.1 Cleaning the Stylus

The stylus (needle) is delicate and should be handled with care. A dirty stylus can degrade sound quality and damage records.

- Use a soft brush (not included), specifically designed for stylus cleaning, to gently brush the stylus from back to front.
- Do not use excessive force or brush from side to side.
- Replace the stylus periodically (e.g., every 300-500 hours of playback) or if you notice a significant drop in sound quality.

### 5.2 Cleaning the Turntable Unit

- Wipe the turntable cabinet with a soft, dry cloth.
- Do not use harsh chemicals, waxes, or abrasive cleaners.
- Keep the dust cover clean with a soft, damp cloth. Avoid using alcohol or strong cleaning agents on the dust cover as they may cause hazing.

### 5.3 Record Care

- Always handle records by their edges to avoid touching the grooves.
- Store records vertically in their sleeves in a cool, dry place.
- Clean records regularly with a dedicated record cleaning brush or solution to remove dust and static.

## 6. TROUBLESHOOTING

---

If you encounter issues with your FYDEE Turntable, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure power adapter is securely connected and the outlet is functional.
No sound from speakers	Volume too low; RCA output connected; Bluetooth connected.	Increase volume. Disconnect RCA cable if using internal speakers. Ensure Bluetooth is not actively streaming if playing vinyl.
Sound distorted or skipping	Dirty or damaged record; dirty or worn stylus; turntable not level.	Clean record. Clean or replace stylus. Ensure turntable is on a stable, level surface.
Record plays too fast/slow	Incorrect speed setting.	Adjust the LP Speed Switch to the correct RPM (33 1/3, 45, or 78) for the record.

Problem	Possible Cause	Solution
Bluetooth not connecting	Turntable not in pairing mode; device too far; already connected to another device.	Ensure turntable is powered on and in Bluetooth mode. Move device closer. Disconnect from other Bluetooth devices.
Auto-stop not working	Auto Stop Switch is OFF; specific record type.	Ensure Auto Stop Switch is ON. Some records, especially older or non-standard ones, may not trigger the auto-stop function correctly.

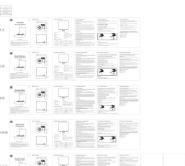
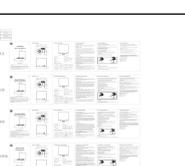
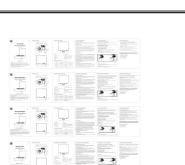
## 7. SPECIFICATIONS

Feature	Detail
Brand	FYDEE
Model Name	A6
Product Dimensions	14.5 x 13 x 7 inches
Item Weight	5.8 pounds
Material	Plastic (with Natural Wood finish)
Rotational Speeds	33 1/3, 45, 78 RPM
Built-in Speakers	Yes (2 x 3W Stereo Speakers)
Bluetooth	Bluetooth Receiver Function
Connectivity	RCA Output, AUX Input, Headphone Jack
Power Consumption (On-mode)	10 watts
Compatible Devices	Headphone, Smartphone, Tablet

## 8. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact FYDEE customer support.

If you experience any issues or have questions not covered in this manual, please contact FYDEE customer support for assistance. Contact information can typically be found on the product packaging or the official FYDEE website.

	<p><a href="#">FYDEE A6 Turntable: User Manual and Specifications</a></p> <p>Comprehensive user manual for the FYDEE A6 turntable, detailing setup, operation modes (Bluetooth, Phono, Aux-in), technical specifications, needle replacement, maintenance tips, and customer support.</p>
	<p><a href="#">User Manual for A6 Retro Record Player</a></p> <p>This user manual provides instructions and specifications for the A6 Retro Record Player, a vintage-style turntable with Bluetooth connectivity and built-in speakers. It includes details on setup, operation, amplifier connection, and troubleshooting in multiple languages.</p>
	<p><a href="#">FYDEE A6 Turntable: User Manual and Specifications</a></p> <p>Comprehensive user manual for the FYDEE A6 turntable, detailing setup, operation modes (Bluetooth, Phono, Aux-in), technical specifications, needle replacement, maintenance tips, and customer support.</p>
	<p><a href="#">User Manual for A6 Retro Record Player</a></p> <p>This user manual provides instructions and specifications for the A6 Retro Record Player, a vintage-style turntable with Bluetooth connectivity and built-in speakers. It includes details on setup, operation, amplifier connection, and troubleshooting in multiple languages.</p>
	<p><a href="#">User Manual for A6 Retro Record Player</a></p> <p>This user manual provides comprehensive instructions for operating the A6 Retro Record Player, covering setup, playback modes (Phono, Bluetooth, AUX-IN), needle replacement, maintenance tips, and contact information for support.</p>
	<p><a href="#">Eversolo DMP-A6 High Fidelity Music Streamer Product Manual</a></p> <p>Comprehensive product manual for the Eversolo DMP-A6 High Fidelity Music Streamer, detailing its features, specifications, hardware, basic operation, system settings, connectivity, and downloads.</p>