

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [OMOTON](#) /

› [OMOTON Wireless Keyboard WK005 User Manual](#)

OMOTON WK005

OMOTON Wireless Keyboard WK005 User Manual

Model: WK005

1. INTRODUCTION

Thank you for choosing the OMOTON Wireless Keyboard. This 2.4G silent, full-size ergonomic keyboard is designed for optimal productivity and comfort, featuring a numeric keypad and media hotkeys. It is compatible with Windows 11/10/8/7/Vista/XP systems. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure you get the most out of your new keyboard.

2. SAFETY INFORMATION

- Keep the keyboard away from liquids and excessive moisture to prevent damage.
- Avoid exposing the keyboard to extreme temperatures (hot or cold) or direct sunlight.
- Do not attempt to disassemble or repair the keyboard yourself. Refer to qualified service personnel.
- Dispose of batteries according to local regulations. Do not mix old and new batteries.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing:

- 1 x OMOTON Wireless Keyboard
- 1 x USB Receiver

4. SETUP

4.1 Installing Batteries

The keyboard requires 2 AAA batteries (not included). Locate the battery compartment on the underside of the keyboard. Open the cover, insert the batteries with the correct polarity, and close the cover securely.



USB for magnetic adsorption storage



Anti-fingerprint



2*AAA batteries (not included)



Anti-slip rubber pad



Figure 4.1: The USB receiver is conveniently stored in the recess of the keyboard battery compartment. Open the battery cover to access it.

4.2 Connecting the Keyboard

This keyboard utilizes 2.4GHz wireless technology for a stable and reliable connection. Follow these steps to connect:

1. Retrieve the USB receiver from the keyboard's battery compartment.
2. Plug the USB receiver into an available USB port on your computer, PC, notebook, or laptop.
3. Turn on the keyboard using the ON/OFF switch located on the top right side of the keyboard.
4. The keyboard is plug-and-play; no driver installation is required. It should automatically connect to your device. The connection distance is up to 33 feet (10m).



Plug and Play, No Delays



2.4G Wireless Connection



Plug & Play



33ft Wireless Range/ 10m

Figure 4.2: The OMOTON wireless keyboard offers a seamless plug-and-play experience with its 2.4G wireless connection, ensuring no delays in input.

5. OPERATING THE KEYBOARD

5.1 General Use

The OMOTON Wireless Keyboard features a QWERTY 110-key layout, including a full numeric keypad for efficient data entry. Its ultra-slim design and ergonomic 8-degree typing angle enhance overall typing comfort and reduce strain on hands and wrists.



Figure 5.1: The OMOTON Wireless Keyboard features a full 110-key layout, including a numeric keypad, designed for comprehensive task completion.

Full Size & Ultra Slim Keyboard

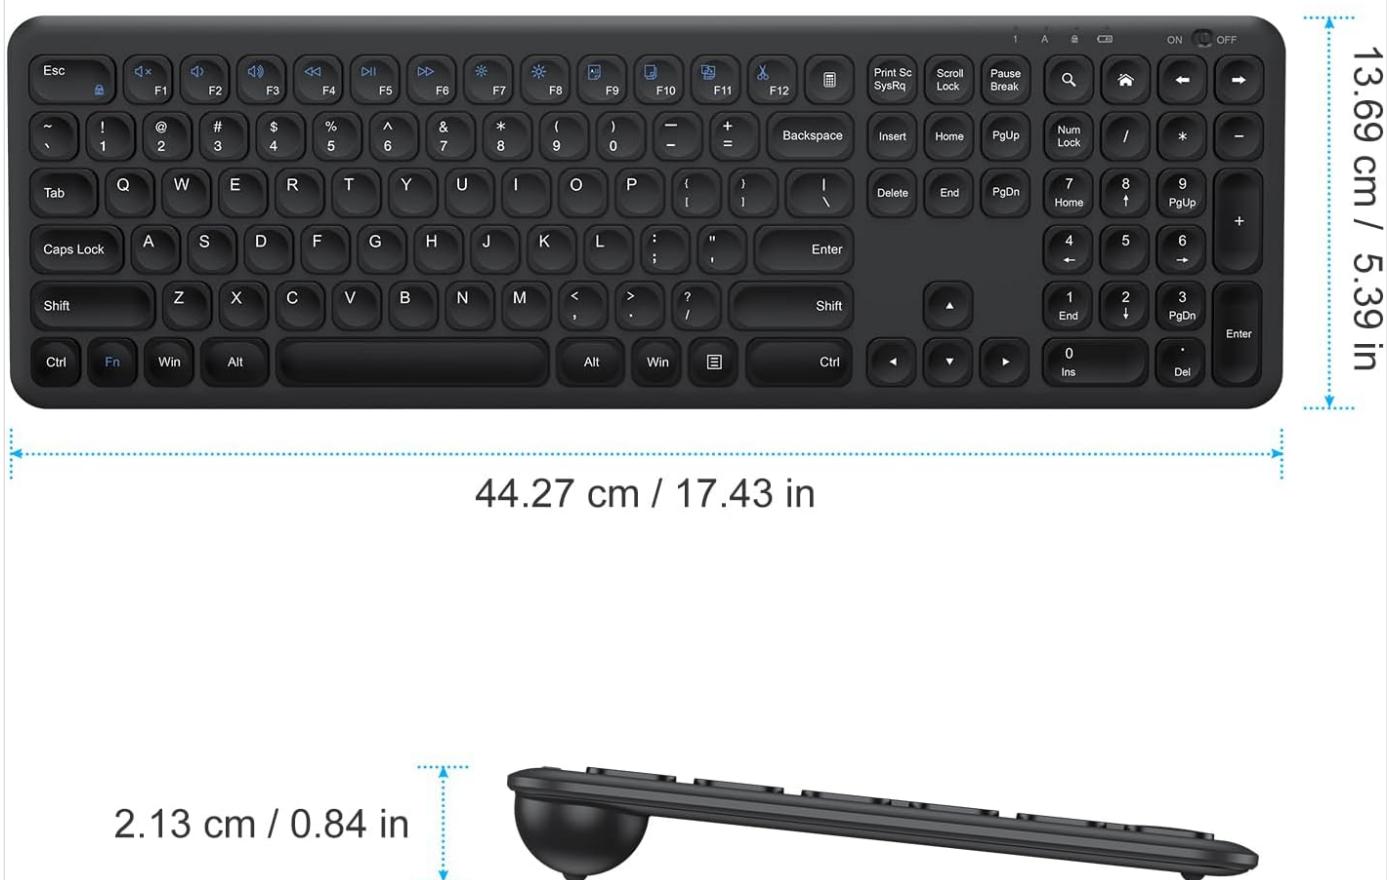


Figure 5.2: The keyboard's dimensions are 44.27 cm (17.43 in) in length, 13.69 cm (5.39 in) in width, and 2.13 cm (0.84 in) in height, highlighting its full-size and ultra-slim design.

5.2 Media Hotkeys and Fn Lock

The keyboard is equipped with 12 media hotkeys for quick access to functions like volume adjustment, playback control, and common office shortcuts (copy, paste, cut). With the Fn lock feature, you can directly use these media keys without needing to press the Fn key simultaneously with F1-F12.

FN Lock

FN+ESC: Activate or deactivate the function Fn lock



Figure 5.3: The Fn Lock feature allows direct access to 12 media keys for functions such as volume control, media playback, and office shortcuts, eliminating the need for Fn+F1-F12 combinations.

5.3 Silent Typing Experience

The keyboard features a scissor foot switch structure design and round ball square keycaps, providing a smooth, comfortable, and quiet typing experience, ideal for office environments.

Scissor Switch Structure Design

Bringing you a smooth, comfortable and quiet typing experience



Scissor Mechanism



Regular Key

Figure 5.4: The scissor switch structure design and concave keycaps contribute to a smooth, comfortable, and quiet typing experience.



Concave Keycaps Design

Designed for the shape of your fingertips

Figure 5.5: The concave keycaps are specifically designed to conform to the shape of your fingertips, enhancing typing comfort.

5.4 Automatic Power Saving Function

To conserve battery life, the wireless keyboard automatically enters hibernation mode after 30 minutes of non-operation. To wake the keyboard, simply press any key.

6. MAINTENANCE

- Clean the keyboard regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters the keyboard.
- Avoid using harsh chemicals or abrasive cleaners.
- Store the keyboard in a cool, dry place when not in use for extended periods.

7. TROUBLESHOOTING

7.1 Keyboard Not Responding

- **Check Power:** Ensure the keyboard's ON/OFF switch is in the 'ON' position.
- **Battery Check:** Replace the AAA batteries if they are low or depleted.
- **USB Receiver:** Ensure the USB receiver is securely plugged into a working USB port on your computer. Try a different USB port if necessary.
- **Distance:** Make sure the keyboard is within the 33-foot (10m) operating range of the USB receiver.
- **Re-pairing:** If the connection is lost, try unplugging and re-plugging the USB receiver. The keyboard should automatically re-establish connection.

7.2 Keys Not Functioning Correctly

- **Clean Keys:** Check for any debris or foreign objects under the keys that might be obstructing their movement.
- **Software Issues:** Restart your computer to rule out any software-related glitches.

7.3 Keyboard Enters Sleep Mode Too Quickly

- The keyboard is designed to enter hibernation mode after 30 minutes of inactivity to save power. This is normal behavior. Simply press any key to wake it up.

8. SPECIFICATIONS

Feature	Detail
Brand	OMOTON
Model	WK005
Connectivity Technology	2.4G USB Wireless
Compatible Devices	Windows 11/10/8/7/Vista/XP, PC, Computer, Notebook, Laptop
Keyboard Description	Multimedia, Full-Size, Ergonomic
Number of Keys	110
Special Features	Round Key, Ergonomic, 2.4G Wireless, Silent, Numeric Keypad, Media Hotkeys
Color	Black
Product Dimensions	17.32 x 5.35 x 0.83 inches (44.27 x 13.69 x 2.13 cm)
Item Weight	1.57 pounds
Manufacturer	OMOTON
Country of Origin	China
First Available Date	February 3, 2023

9. OFFICIAL PRODUCT VIDEO

Watch the official product video for a visual overview of the OMOTON Wireless Keyboard's features and benefits.

Your browser does not support the video tag.

Video 9.1: An official product video showcasing the OMOTON Wireless Keyboard, highlighting its full-size design, ergonomic features, scissor switch keys, and plug-and-play wireless connectivity.

10. WARRANTY AND SUPPORT

OMOTON products are designed for reliability and performance. For specific warranty information, please refer to the warranty card included with your purchase or visit the official OMOTON website. For technical support or further assistance, please contact OMOTON customer service through their official channels.

Online Support: Visit the OMOTON official website for FAQs, drivers, and support contact information.

© 2023 OMOTON. All rights reserved.