

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Outsunny](#) /
- › [Outsunny Heavy Duty Party Tent User Manual](#)

Outsunny 84C-019V00GY

Outsunny Heavy Duty Party Tent User Manual

Model: 84C-019V00GY

PRODUCT OVERVIEW

The Outsunny Heavy Duty Party Tent is designed for various outdoor events, providing shelter and protection from the elements. It features a robust galvanized steel frame, a UV-blocking canopy, and removable sidewalls with transparent windows. This manual provides essential information for the safe and effective use of your party tent.

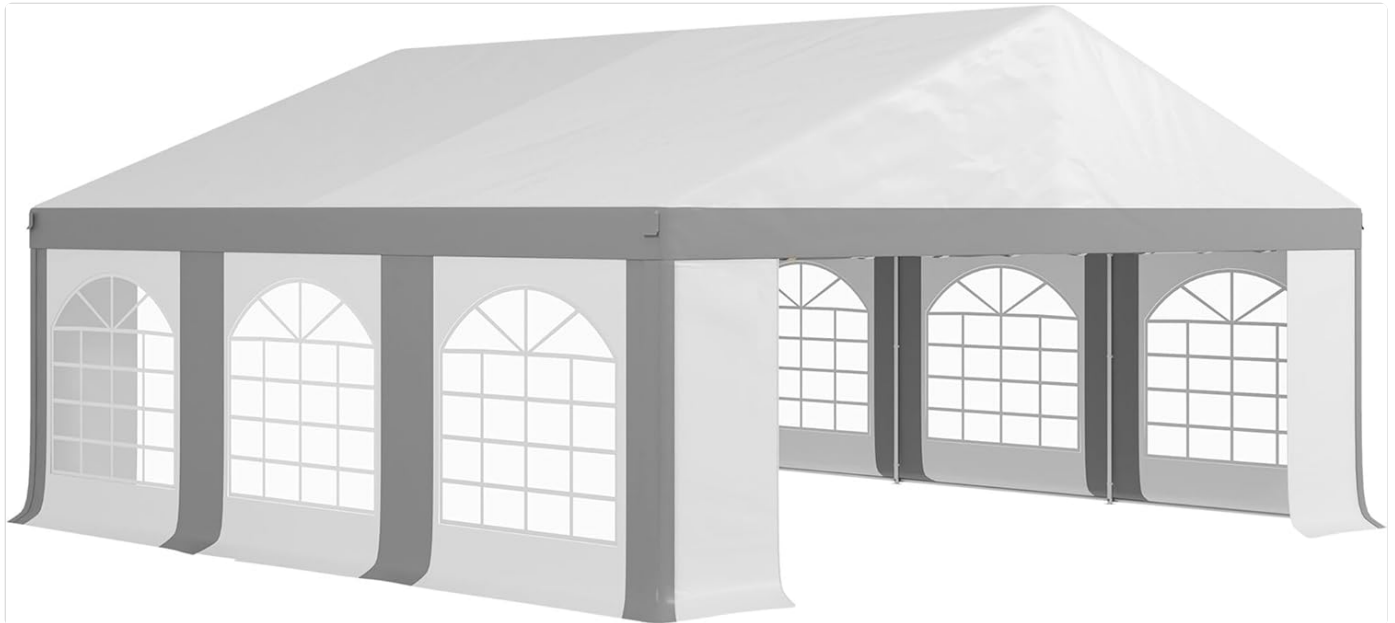


Figure 1: Main product view of the Outsunny party tent, showcasing its white canopy and gray trim with window panels.



Figure 2: The Outsunny party tent set up in a grassy outdoor area, demonstrating its large coverage and suitability for events.

SAFETY INFORMATION

WARNING: Failure to follow these instructions can result in serious injury or damage to the product.

- Never leave the tent up overnight or in bad weather conditions, including strong winds, heavy rain, or snow.
- Always assemble and disassemble the tent with at least 4-6 people to ensure safety and proper handling.
- Secure the tent firmly with all provided stakes and ropes, especially in windy conditions, to prevent collapse or displacement.
- Measure your intended site before assembly to ensure adequate space and a level surface.
- Keep all flame and heat sources away from the tent fabric.

SETUP INSTRUCTIONS

Proper assembly is crucial for the stability and longevity of your party tent. Follow these steps carefully.

1. Unpacking and Component Identification

Carefully unpack all components and verify against the parts list (not provided in this manual, refer to original packaging). Ensure all poles, connectors, canopy, and sidewalls are present and undamaged.

2. Frame Assembly

Begin by assembling the galvanized steel frame. Connect the poles using the provided connectors, ensuring all snap pins are securely engaged. Follow the structural diagram to build the base, then the uprights, and finally the roof structure.



Figure 3: Close-up view of the heavy-duty galvanized steel pipes, strong spiral ground stakes, and L-shaped ground stakes, illustrating the tent's stable construction elements.

3. Canopy and Sidewall Installation

Once the frame is complete, carefully drape the UV-blocking canopy over the roof structure. Secure it to the frame using the integrated ties or fasteners. Attach the removable sidewalls and end panels, ensuring the zippered doors are correctly

aligned. The sidewalls typically attach with Velcro strips or similar fasteners.



Figure 4: A diagram highlighting the two zippered doors for easy access and the six transparent window panels designed to allow light and visibility.

4. Securing the Tent

Utilize the provided guy ropes and ground stakes to anchor the tent securely to the ground. For enhanced stability, especially in areas prone to wind, consider using additional or stronger anchoring methods such as heavier-duty stakes or sandbags (not included).

OPERATING INSTRUCTIONS

Your Outsunny party tent is designed for versatility and ease of use.

Ventilation and Access

The tent features two zippered doors for convenient entry and exit. These doors can be rolled up and secured to allow for

increased airflow. The sidewalls are removable, offering flexibility to create an open, breezy gazebo-style tent or a fully enclosed shelter as needed.

UV Protection

The canopy is designed to block UV rays, providing a shaded and protected area. The transparent window panels allow natural light to enter while minimizing sun glare.

Recommended Uses

This tent is suitable for a variety of outdoor occasions, including:

- Weddings and Receptions
- Graduation Parties
- Family Gatherings and Picnics
- Carports or Vehicle Covers
- Temporary Backyard Storage for furniture or tools

SUITABLE FOR VARIETIES OF OCCASIONS

Ideal for family gatherings, birthday parties, picnics, campings and more



Figure 5: A collage demonstrating the versatility of the Outsunny party tent for different events and uses, including parties, gatherings, and storage.

MAINTENANCE

Regular maintenance will extend the life of your party tent.

Cleaning

- Clean the canopy and sidewalls with mild soap and water. Do not use harsh chemicals or abrasive cleaners.
- Rinse thoroughly and allow all fabric components to dry completely before storage to prevent mildew.
- Wipe down the steel frame with a damp cloth to remove dirt and debris.

Storage

- Disassemble the tent carefully, following the reverse of the assembly instructions.
- Ensure all components are clean and completely dry before packing.
- Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Here are solutions to common issues you might encounter.

Tent Instability / Wind Damage

If the tent feels unstable or is affected by wind, ensure all guy ropes are taut and all ground stakes are fully inserted. For increased stability in windy conditions, consider reinforcing the anchoring points with heavier-duty stakes or additional weights (e.g., sandbags, water barrels) at each leg. Always disassemble the tent if strong winds or storms are forecast.

Water Accumulation on Canopy

If water pools on the canopy, it may indicate improper tensioning or an uneven setup. Ensure the canopy is stretched tightly and evenly across the frame. Verify that the frame is level and that the roof pitch allows for proper water runoff. In heavy rain, it is advisable to monitor the tent and gently push up on the underside of the canopy to release accumulated water, or consider disassembling the tent to prevent structural damage.

Difficulty with Pole Fitment

If poles do not seem to fit correctly or the canopy is too tight, double-check that all poles are correctly oriented and fully inserted into their connectors. Ensure you are using the correct poles for each section as per the assembly diagram. Slight adjustments to pole length or re-drilling holes should only be considered as a last resort and may void any potential warranty.

SPECIFICATIONS

| Attribute | Detail |
|--------------|--------------|
| Brand | Outsunny |
| Model Number | 84C-019V00GY |

| | |
|--------------------|--------------------------------|
| Material | Alloy Steel, Polyethylene (PE) |
| Color | White and Gray |
| Overall Dimensions | 236.25" L x 236.25" W x 124" H |
| Eaves Height | 78.75" H |
| Item Weight | 193 Pounds |
| UV Protection | Yes |
| Water Resistance | Water Resistant |
| Assembly Required | Yes (Requires 4-6 people) |
| UPC | 196393034224 |

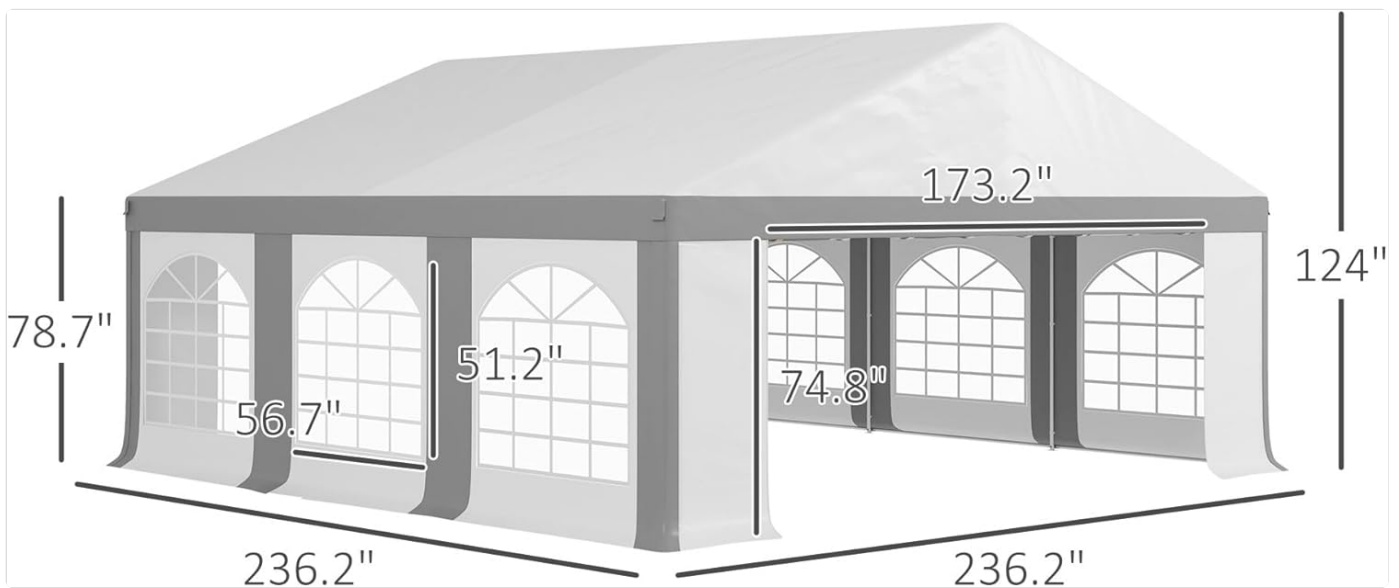


Figure 6: A technical diagram illustrating the key dimensions of the Outsunny party tent, including length, width, and height measurements.

WARRANTY AND SUPPORT

For customer support or inquiries regarding your Outsunny Party Tent, please contact the manufacturer or seller directly. Refer to your purchase documentation for specific contact details.

Returns: This product typically offers a 30-day easy return policy. Please check your purchase terms for exact details.

For additional assistance, you may visit the [Outsunny Store on Amazon](#).