

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [EBELLO](#) /

› EBELLO Power Recliner Chair (Model CD0026AF51D-C547-2) Instruction Manual

EBELLO CD0026AF51D-C547-2

EBELLO Power Recliner Chair Instruction Manual

Model: CD0026AF51D-C547-2

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your EBELLO Power Recliner Chair. Please read this manual thoroughly before use to ensure safe and correct operation. Keep this manual for future reference.



Image 1.1: Two EBELLO Power Recliner Chairs in a modern living room.

2. SAFETY INSTRUCTIONS

Observe the following safety precautions to prevent injury or damage to the product:

- Ensure all components are securely assembled before use.
- Keep hands and feet clear of the reclining mechanism during operation.
- Do not allow children or pets to play on or around the recliner, especially when it is in motion.
- Do not exceed the maximum weight capacity of 220 lbs (approximately 100 kg).
- Only use the recliner on a stable, level surface.
- Unplug the power cord from the wall outlet before cleaning or performing maintenance.
- Avoid spilling liquids on the control buttons or USB port.

3. PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Recliner Chair Base (2 units for a set)
- Recliner Chair Backrest (2 units for a set)
- Power Adapter and Cord (2 units for a set)
- Installation Manual (1 unit)

4. SETUP AND ASSEMBLY

The EBELLO Power Recliner Chair is designed for quick and easy assembly. Most users can complete assembly within 10-15 minutes without requiring additional tools.

1. Carefully unpack all components from the packaging.
2. Place the recliner chair base in the desired location, ensuring sufficient space for reclining.
3. Align the backrest with the metal brackets on the chair base. Slide the backrest down firmly until it clicks into place. Ensure both sides are securely engaged.
4. Connect the power adapter to the chair's power input, typically located at the rear or underneath the chair.
5. Plug the power cord into a standard wall outlet.



Image 4.1: Overview of the recliner chair from various perspectives.

5. OPERATING INSTRUCTIONS

Your EBELLO Power Recliner Chair features an electric reclining mechanism and a convenient USB charging port.

5.1 Reclining Function

- Locate the control button on the side of the recliner.
- Press and hold the button to smoothly adjust the reclining angle to your desired position, from upright (approximately 90 degrees) to fully reclined (approximately 150 degrees).
- Release the button to stop the recliner at any angle.
- To return to the upright position, press and hold the button again until the chair fully retracts.

ELECTRIC POWER RECLINER CHAIR



Image 5.1: Reclining range and suggested uses for the EBELLO Power Recliner Chair.

5.2 USB Charging Port

- A USB charging port is integrated into the side control panel.
- Connect your compatible electronic devices (e.g., smartphones, tablets) to the USB port for convenient charging while seated.



Image 5.2: Detail of the control button and USB port on the recliner.

6. MAINTENANCE

Proper care will extend the life and appearance of your recliner.

- **Cleaning:** The fabric upholstery should be dry cleaned. For minor spills, blot immediately with a clean, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Mechanism:** Periodically check all bolts and screws to ensure they are tight. Do not lubricate the reclining mechanism unless specifically instructed by customer support.
- **Power Cord:** Inspect the power cord regularly for any signs of damage. If damaged, discontinue use and contact customer support for a replacement.

7. TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Recliner does not operate.	Power cord not connected; power outlet not functioning; loose connection.	Ensure power cord is securely plugged into both the chair and a working wall outlet. Check circuit breaker.
Recliner makes unusual noises.	Loose hardware; obstruction in mechanism.	Check and tighten all visible bolts and screws. Inspect for any objects obstructing the reclining mechanism.
USB port not charging devices.	Device not compatible; cable faulty; recliner not powered.	Ensure the recliner is powered on. Try a different USB cable or device.

If the problem persists, please contact EBELLO customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	EBELLO
Model Name	CD0026AF51D-C547-2
Color	Grey
Material	Textile (Fabric), Memory Foam Fill
Product Dimensions (D x W x H)	38.2"D x 31.1"W x 41.7"H
Seat Depth	20.5 inches
Item Weight	158.29 Pounds
Weight Capacity	220 lbs
Recommended Uses	Gaming, Reading, Relaxing, Sleeping
Room Type	Bedroom, Living Room, Office, Study Room
Assembly Required	Yes
Additional Features	Arm Rest, Ergonomic, Foldable (referring to footrest), Foot Rest, Head Support, USB Charge Port

S I Z E



Image 8.1: Detailed dimensions of the EBELLO Power Recliner Chair. Note: The image indicates 350 lbs weight capacity, while the product specifications state 220 lbs. Please refer to the product listing for the most accurate weight capacity.

9. WARRANTY AND SUPPORT

Your EBELLO Power Recliner Chair comes with a **1-year guarantee** from the date of purchase. This warranty covers manufacturing defects under normal use.

For any questions, concerns, or warranty claims, please contact EBELLO customer support. Our team is available 24 hours online to assist you.

Contact Information: Refer to your purchase documentation or the EBELLO brand store on Amazon for current contact details.



