

REVLON RVDR5292

Revlon Root Booster Dryer and Styler Brush (127V) User Manual

Model: RVDR5292

1. PRODUCT OVERVIEW

The Revlon Root Booster Dryer and Styler Brush is designed to dry, style, and add volume to your hair in one step. This innovative tool combines the power of a hair dryer with the versatility of a styling brush, making it suitable for all hair types and lengths, including shorter hair and roots.

Key Features:

- **One-Step Drying & Styling:** Dries, styles, and volumizes simultaneously.
- **1.5-inch Brush Head:** Ideal for reaching roots and styling shorter hair.
- **Ionic Technology:** Helps reduce frizz and enhance shine for a healthy-looking finish.
- **Ceramic Coating:** Ensures even heat distribution to minimize heat damage.
- **Flexible Temperature Control:** Features 3 heat/speed settings (OFF, COOL, LOW, HIGH).
- **Detangling Bristles:** Designed to glide through hair smoothly.
- **Ergonomic Design:** Lightweight and comfortable for easy handling.
- **Swivel Cord:** Professional-grade 1.8-meter swivel cord for tangle-free use.



Figure 1: Angled view of the Revlon Root Booster Dryer and Styler Brush.

This product operates at 127 Volts and has a power output of 1000 watts.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions before using this appliance. Keep away from water.

- **Electrical Safety:** Always ensure the appliance is connected to a power outlet with the correct voltage (127 Volts). Do not use with voltage converters.
- **Water Hazard:** Do not use this appliance near bathtubs, showers, basins, or other vessels containing water. If the appliance falls into water, unplug it immediately. Do not reach into the water.
- **Heat:** The brush head becomes hot during use. Avoid direct contact with skin, especially the scalp, to prevent burns. Allow the appliance to cool completely before storing.
- **Children:** This appliance is not intended for use by children. Keep out of reach of children.
- **Damage:** Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has

been dropped or damaged in any manner.

- **Ventilation:** Do not block the air vents during operation. Keep hair away from the air intake openings.
- **Storage:** Store the appliance in a cool, dry place when not in use. Do not wrap the cord around the appliance.

3. PRODUCT COMPONENTS

Familiarize yourself with the different parts of your Revlon Root Booster Dryer and Styler Brush:

- **Brush Head:** Features a 1.5-inch barrel with detangling bristles and ceramic coating.
- **Handle:** Ergonomically designed for comfortable grip.
- **Temperature/Speed Control Dial:** Located on the handle, allowing selection of OFF, COOL, LOW, or HIGH settings.
- **Air Vents:** Located at the base of the brush head and on the handle for airflow.
- **Swivel Cord:** Prevents tangling during use.



Figure 2: Full view of the Revlon Root Booster Dryer and Styler Brush.

4. SETUP

1. **Unpack:** Carefully remove the Revlon Root Booster Dryer and Styler Brush from its packaging. Ensure all components are present and undamaged.
2. **Inspect:** Check the appliance and power cord for any signs of damage. Do not use if damaged.
3. **Plug In:** Insert the power plug into a standard 127V electrical outlet. Ensure your outlet matches the appliance's voltage requirement.

5. OPERATING INSTRUCTIONS

Follow these steps for optimal drying and styling results:


1. **Prepare Hair:** For best results, towel-dry your hair to remove excess water. For faster results, you may pre-dry your hair slightly with a regular hair dryer. Apply a heat protectant spray if desired.
2. **Section Hair:** Divide your hair into manageable sections using clips.
3. **Select Setting:** Turn the temperature/speed control dial to your desired setting:
 - **LOW:** For fine or thin hair, or for gentle drying.
 - **HIGH:** For thick or coarse hair, or for faster drying.
 - **COOL:** To set your style with a blast of cool air.
4. **Styling:** Place the brush close to the roots and brush downwards towards the ends. For added volume, lift hair at the roots and hold the brush for a few seconds. For curled ends, rotate the brush inwards or outwards as you reach the ends.
5. **Ionic Technology:** The built-in ionic technology helps to condition, smooth, and make hair shinier while reducing frizz and static.

Controle Flexível de Temperatura

Com 3 temperaturas/velocidades diferentes



Figure 3: Temperature control dial with OFF, COOL, LOW, and HIGH settings.

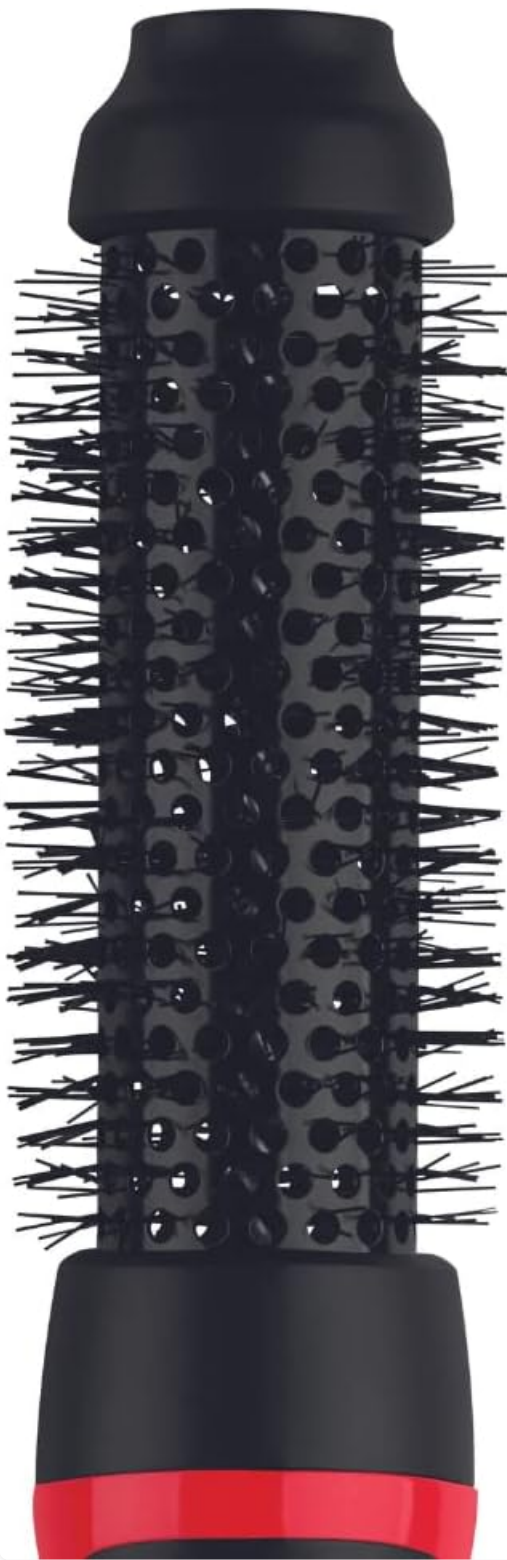

Reduz o Frizz e aumenta o Brilho

Tecnologia Iônica [®]

Dá o poder de criar um acabamento de salão com menos frizz para um cabelo brilhante e com aspecto saudável.

Figure 4: Ionic Technology helps reduce frizz and increase shine.

Important: Do not wrap hair around the brush head multiple times, as this may cause tangling.

6. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and performance of your appliance.

- **Cleaning:**

- a. Always unplug the appliance and allow it to cool completely before cleaning.
- b. Use a soft, damp cloth to wipe down the handle and brush head.
- c. Remove any hair or debris from the bristles and air vents using a small brush or comb.

d. Do not immerse the appliance in water or any other liquid.

• **Storage:**

- a. Ensure the appliance is completely cool and dry before storing.
- b. Store in a safe, dry location, away from children.
- c. Do not wrap the power cord tightly around the appliance, as this can damage the cord.

7. TROUBLESHOOTING

If you encounter any issues with your Revlon Root Booster Dryer and Styler Brush, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly; power outlet issue; appliance damage.	Ensure the plug is fully inserted. Test the outlet with another appliance. If still not working, contact customer support.
Low airflow or heat.	Air vents are blocked by lint or hair.	Unplug and allow to cool. Clean the air intake and exhaust vents of any obstructions.
Hair gets tangled in the brush.	Too much hair sectioned at once; hair is too wet.	Work with smaller sections of hair. Ensure hair is towel-dried before styling. Do not wrap hair multiple times around the brush.
Appliance feels too hot.	Using on HIGH setting for too long; air vents blocked.	Switch to a lower heat setting (LOW or COOL). Clean air vents. Ensure proper distance from scalp.

If the problem persists after trying these solutions, discontinue use and contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	REVLON
Model Number	RVDR5292
Voltage	127 Volts
Power (Watts)	1000 watts
Dimensions (Product)	41.4 x 14.7 x 8.4 cm
Weight	550 g
Material	Alloy Steel, Metal, Nylon
Hair Type Compatibility	Fine, Straight, Normal, Wavy, All hair types
Temperature Settings	OFF, COOL, LOW, HIGH
Cord Length	1.8 meters (swivel cord)

Feature	Detail
ASIN	B0BTTWT4F6
EAN	0761318552925

9. WARRANTY AND SUPPORT

This Revlon Root Booster Dryer and Styler Brush comes with a **2-year warranty** against manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support, warranty claims, or further assistance, please refer to the contact information provided with your product packaging or visit the official Revlon Hair Tools website.

You can also visit the [REVLON Brand Store](#) for more information and products.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question