

[Manuals.plus](#) /

› [PerFascin](#) /

› PerFascin Replacement Remote Control Instruction Manual for Panasonic Recorders (Model PA-N2Q994-U)

PerFascin PA-N2Q994-U

PerFascin Replacement Remote Control Instruction Manual for Panasonic Recorders (Model PA-N2Q994-U)

INTRODUCTION

This manual provides instructions for the PerFascin PA-N2Q994-U replacement remote control. This remote is designed to function as a direct substitute for various original Panasonic recorder remote controls, offering the same primary functions without requiring complex setup.

Compatible Original Remote Models:

- N2QAYB000993
- N2QAYB000994
- N2QAYB001056
- N2QAYB001071
- N2QAYB001172
- N2QAYB001055
- N2QAYB001142
- N2QAYB001148
- N2QAYB001069
- N2QAYB001044
- N2QAYB000995
- N2QAYB001143
- N2QAYB001087
- N2QAYB001171
- N2QAYB001088
- N2QAYB001173
- N2QAYB001184
- N2QAYB001086

Compatible Panasonic Recorder Models:

- DMR-BRW1000, DMR-BRW500, DMR-BRZ1000, DMR-BRZ2000, DMR-BRZ1010, DMR-BRW1010, DMR-BRW510, DMR-BRZ1020, DMR-BRX2020, DMR-BRX2000, DMR-BRW520, DMR-BRW1020, DMR-BRS500, DMRBRS510,

DMR-BX2030, DMR-UBZ2020, DMR-UBZ1020, DMR-BRT530, DMR-BW1050, DMR-BW550, DMR-BRW550, DMR-BRW1050, DMR-BRS530, DMR-BRS520, DMR-UBZ2030, DMR-UBZ1030, DMR-BG2050, DMR-BRG2050, DMR-BRG2020, DMR-BRT1030, DMR-BRZ1010, DMR-BRG2010, DMR-BRG2030, DMR-BRG1030, DMR-BRX2030



レコーダー 用リモコン

●代用リモコン: N2QAYB000993

N2QAYB000994 N2QAYB001056

N2QAYB001071 N2QAYB001172

N2QAYB001055 N2QAYB001142

N2QAYB001148 N2QAYB001069

N2QAYB001044 N2QAYB000995

N2QAYB001143 N2QAYB001087

N2QAYB001171 N2QAYB001088

N2QAYB001173 N2QAYB001184

N2QAYB001086

●純正リモコンと同機能のボタンが設置されており、主な機能は全て使用できます。

●電池を入れるとすぐに使うことができます。


Image: Front view of the PerFascin PA-N2Q994-U remote control, displaying its button layout and a list of compatible original remote control models.

SETUP

Battery Installation

The PerFascin PA-N2Q994-U remote control requires two AAA dry cell batteries (sold separately) for operation. No programming or pairing is needed; simply insert the batteries, and the remote is ready for use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

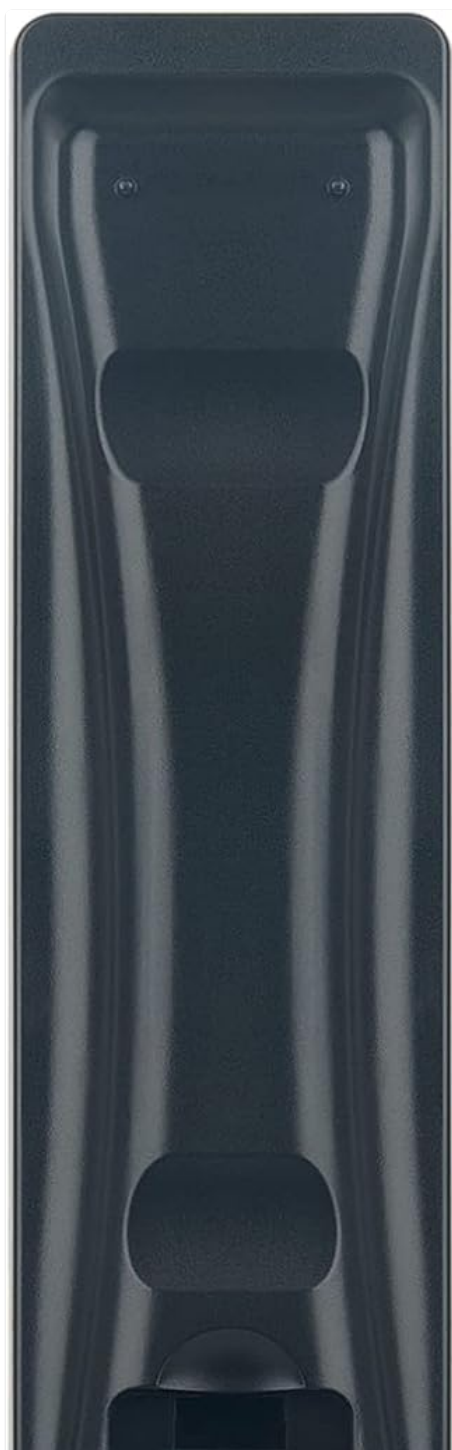

単四形乾電池2本(別売)





Image: Rear view of the remote control with the battery cover removed, showing the battery compartment where two AAA batteries are to be inserted. Text indicates "2 AAA dry cell batteries (sold separately)".

OPERATING INSTRUCTIONS

This replacement remote control is designed to replicate the functionality of your original Panasonic recorder remote. All primary functions are accessible directly from the buttons on the remote.

General Use

- Point the remote control directly towards your Panasonic recorder.
- Press the desired button to perform the corresponding function (e.g., Power, Channel Up/Down, Volume Up/Down, Play, Pause, Stop, Menu, etc.).
- Ensure there are no obstructions between the remote control and the recorder's infrared receiver.



Image: Multiple views of the PerFascin PA-N2Q994-U remote control, showing its front, side profile, and rear design, highlighting its ergonomic shape.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If not used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the recorder.
 - Verify that the remote is pointed directly at the recorder's infrared sensor.
- **Certain buttons not working:**
 - This remote is a replacement and replicates the main functions of the original. Some highly specific or rarely used functions might not be present if they were not part of the core button layout of the original remote it replaces.
 - If a primary button is not working, try replacing the batteries.

SPECIFICATIONS

Feature	Detail
Brand	PerFascin
Model Number	PA-N2Q994-U
Connectivity Technology	Infrared (IR)
Setup Required	No
Power Source	2 x AAA Batteries (not included)
Product Dimensions	4 x 2 x 18 cm (approximately)
Product Weight	100 g (approximately)
Number of Buttons	90

WARRANTY AND SUPPORT

Warranty Period: This product comes with a 1-year warranty from the date of purchase.

Support: If you encounter any defects or issues with the product during the warranty period, please contact us via email for assistance. Please refer to your purchase documentation for specific contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BTY2X58Z>

More documents and user manuals: <https://manuals.plus/>