

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Ortizan](#) /
- › [Ortizan X30 Bluetooth Speaker User Manual](#)

Ortizan X30

Ortizan X30 Bluetooth Speaker User Manual

Model: X30

1. INTRODUCTION

Thank you for purchasing the Ortizan X30 Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of your device.

2. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep the speaker away from medical devices, as it contains magnets.
- Do not attempt to disassemble, repair, or modify the speaker yourself. Contact qualified service personnel.
- Ensure the charging port is dry before connecting the charging cable.

3. PACKAGE CONTENTS

Please check that all items are present:

- Ortizan X30 Bluetooth Speaker Unit
- Audio Cable
- Power Cable (USB-C)
- Quick Start Guide

4. PRODUCT OVERVIEW & CONTROLS

Familiarize yourself with the speaker's buttons and ports.



Image: Top view of the Ortizan X30 speaker, highlighting the control panel with various buttons and input ports including USB, AUX, TF Card slot, and Type-C charging port.

Buttons:

- **Power Button:** Press and hold to power on/off. Short press for other functions (e.g., play/pause in some modes).
- **Volume Up (+):** Increase volume.
- **Volume Down (-):** Decrease volume.
- **Play/Pause Button:** Play or pause audio playback.
- **EQ Button:** Short press to cycle through 3 equalizer modes (Popular, Bass, Vocal).
- **Light Mode Button:** Short press to cycle through LED light modes (Steady Light, Colorful Flashing, Gradation Flow). Press and hold to turn lights off.

Ports:

- **USB Port:** For USB drive playback.
- **AUX Port:** For wired audio connection using the provided audio cable.
- **TF Card Slot:** For MicroSD card playback.
- **Type-C Charging Port:** For charging the speaker.

5. GETTING STARTED

5.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Type-C power cable to the speaker's charging port and a compatible USB power adapter (not included). The LED indicator will show charging status. A full charge provides up to 30 hours of playback at 50% volume.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power button for approximately 2-3 seconds until you hear an audible prompt and the LED lights activate.
- **To Power Off:** Press and hold the Power button for approximately 2-3 seconds until you hear an audible prompt and the LED lights turn off.

6. CONNECTIVITY

6.1 Bluetooth Pairing

The Ortizan X30 uses Bluetooth 5.3 for stable and fast connections.

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing blue LED.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Ortizan X30" from the list.
4. Once paired, the LED indicator will turn solid blue, and you will hear a confirmation sound.



Image: An illustration of the Bluetooth 5.3 chip, symbolizing the speaker's advanced connectivity.

6.2 True Wireless Stereo (TWS) Pairing

You can pair two Ortizan X30 speakers together for an enhanced 80W stereo sound experience.

1. Ensure both Ortizan X30 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the Play/Pause button for 2-3 seconds. You will hear a prompt indicating TWS pairing mode.
3. The two speakers will automatically connect to each other. Once connected, you will hear a confirmation sound.
4. Now, connect your device to the primary speaker via Bluetooth as described in Section 6.1. Both speakers will play audio in stereo.



Image: Two Ortizan X30 speakers positioned in a room, showing wireless connection lines between them and a device, illustrating the True Wireless Stereo (TWS) pairing feature.

6.3 AUX Connection

Use the provided 3.5mm audio cable to connect the speaker to devices without Bluetooth capability.

1. Connect one end of the 3.5mm audio cable to the AUX port on the speaker.
2. Connect the other end to the audio output jack of your device.
3. The speaker will automatically switch to AUX mode.

6.4 MicroSD Card Playback

Insert a MicroSD card (TF card) with audio files into the TF Card slot. The speaker will automatically detect the card and begin playback.

7. OPERATING THE SPEAKER

7.1 Music Playback Controls

- **Play/Pause:** Short press the Play/Pause button.
- **Volume Adjustment:** Short press the Volume Up (+) or Volume Down (-) buttons.
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.

7.2 LED Light Modes

The speaker features dynamic LED lights that synchronize with your music.



Image: The Ortizan X30 speaker displaying vibrant RGB LED lights, creating an atmospheric visual effect.

Short press the Light Mode button to cycle through the following modes:

- **Steady Light:** A constant, ambient light.
- **Colorful Flashing:** Lights flash in various colors.
- **Gradation Flow:** Lights transition smoothly between colors.

Press and hold the Light Mode button to turn the LED lights off.

7.3 EQ Modes

Optimize your audio experience with three distinct EQ modes.



Image: A close-up of the EQ button on the Ortizan X30 speaker, with icons representing the three available sound modes: Popular, Bass, and Vocal.

Short press the EQ button to switch between:

- **Popular Mode:** Balanced sound for general listening.
- **Bass Mode:** Enhanced bass for a deeper sound.
- **Vocal Mode:** Optimized for clear vocals.

8. MAINTENANCE

Proper maintenance ensures the longevity of your speaker.

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents. The IPX7 rating allows for water rinsing, but ensure ports are closed and dry before charging.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.

IPX 7 防水防塵

シャワー、ハイキング、
キャンプなど最適



Image: The Ortizan X30 speaker being splashed with water, showcasing its IPX7 waterproof capability, suitable for use in wet environments.

9. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.

Problem	Possible Cause	Solution
Cannot pair via Bluetooth.	Speaker is already paired to another device or device's Bluetooth is off.	Ensure the speaker is in pairing mode. Turn off Bluetooth on other devices. Restart your device's Bluetooth.
No sound or low volume.	Volume too low on speaker or connected device. Incorrect input mode.	Increase volume on both speaker and device. Check if the correct input mode (Bluetooth, AUX, MicroSD) is selected.
TWS pairing fails.	Speakers are already connected to other devices.	Ensure both speakers are disconnected from all devices before initiating TWS pairing.
LED lights not working.	Lights are turned off.	Short press the Light Mode button to cycle through modes.

10. SPECIFICATIONS

Technical details of the Ortizan X30 Bluetooth Speaker:

Feature	Detail
Model Name	Ortizan-X30
Speaker Type	Portable Bluetooth Speaker
Output Power	40 W
Connectivity Technology	Bluetooth 5.3, AUX, USB, MicroSD (TF Card)
Wireless Range	Up to 20 meters
Waterproof Rating	IPX7 (Submersible up to 1 meter for 30 minutes)
Battery Life	Up to 30 hours (at 50% volume)
Charging Port	Type-C
Product Dimensions	8.5 cm (D) x 20.6 cm (W) x 8.5 cm (H)
Product Weight	500 grams
Audio Output Mode	Stereo
Frequency Response	20 KHz (Upper limit, typical range 20Hz-20kHz)

11. WARRANTY AND SUPPORT

Ortizan products come with a standard warranty. For detailed warranty information, product support, or service inquiries, please refer to the warranty card included in your package or visit the official Ortizan website. Do not attempt to repair the product yourself, as this may void the warranty.

