

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bucktool](#) /

› [Bucktool Low Speed Bench Belt Grinder Combo Instruction Manual](#)

Bucktool 60e07973-9212-48d0-861a-44a24ad1ff3d

Bucktool Low Speed Bench Belt Grinder Combo

INSTRUCTION MANUAL

Model: 60e07973-9212-48d0-861a-44a24ad1ff3d

1. SAFETY INFORMATION

Always prioritize safety when operating power tools. Read and understand all instructions before use. Failure to follow safety guidelines may result in serious injury.

1.1 General Safety Rules

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.
- Avoid accidental starting. Ensure the switch is in the off-position before plugging in.

1.2 Personal Protective Equipment (PPE)

- Always wear eye protection (safety glasses or face shield) to guard against flying debris.
- Wear hearing protection when operating the grinder for extended periods.
- Use a dust mask or respirator, especially when grinding materials that produce fine dust.
- Wear appropriate work gloves to protect hands.

2. PRODUCT OVERVIEW

The Bucktool Low Speed Bench Belt Grinder Combo is a versatile tool designed for various sanding and grinding needs, including knife making, sharpening, woodworking, and metalworking. It features a 1x30 inch belt and a 6 inch grinding wheel, powered by a 1/3 HP, 2.1A motor providing 1790 RPM.



Figure 2.1: The Bucktool Low Speed Bench Belt Grinder Combo.

DIRECT DRIVE BELT GRINDER

1/3HP MOTOR | 1790RPM SPEED

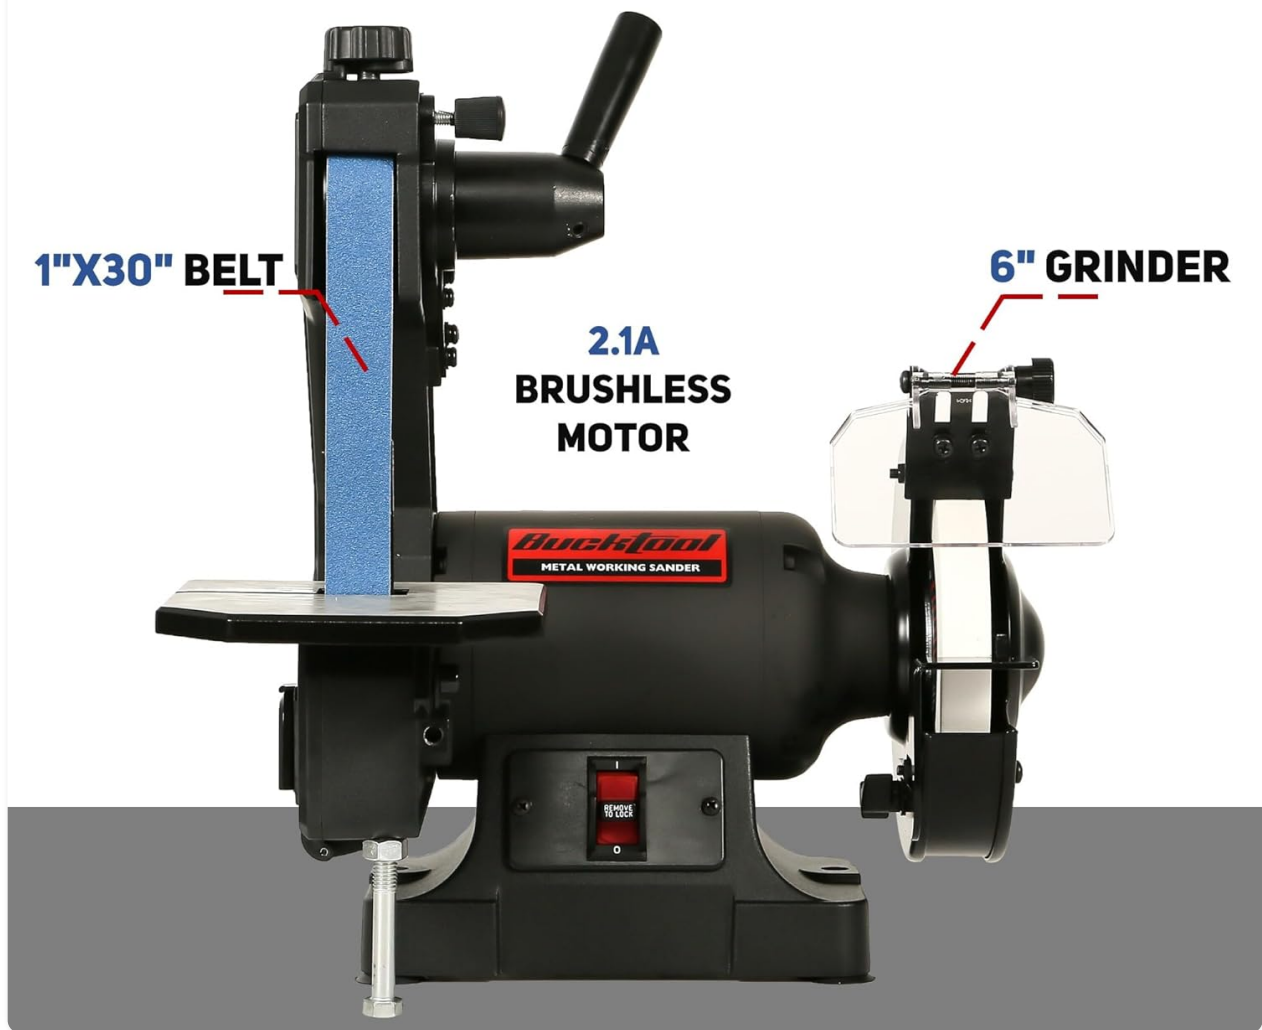


Figure 2.2: Diagram illustrating the direct drive belt grinder with 1"x30" belt and 6" grinder.

2.1 Key Features

- **User-Friendly Design:** Features a convenient one-button belt cover take-off and integrated wrench storage.
- **Direct Drive Design:** 1/3 HP 2.1A motor provides 1790 RPM, offering 25% more sanding power due to direct drive.
- **Easy Belt Change:** Quick-release system and easy-remove belt cover facilitate fast belt changes.
- **Compact Design:** Benchtop unit with a 1x30-inch belt and 6-inch grinder for diverse applications.

3. SETUP

3.1 Unpacking and Inspection

Carefully remove the grinder from its packaging. Inspect all components for any signs of damage during shipping. Ensure all parts listed in the packing list are present before proceeding.

3.2 Bench Mounting

For stable operation, it is recommended to securely mount the grinder to a sturdy workbench using appropriate

fasteners (not included). This will minimize vibration and ensure safe use.

3.3 Belt Installation and Change

The Bucktool grinder features an easy belt change system. To change the belt:

1. Ensure the power tool is unplugged.
2. Locate the one-button belt cover take-off mechanism. Rotate it to release the belt cover.
3. Utilize the quick belt release system to loosen the tension on the existing belt.
4. Remove the old belt and slide the new 1x30 inch belt into position, ensuring it is properly aligned for belt tracking.
5. Re-engage the belt tension and secure the belt cover.

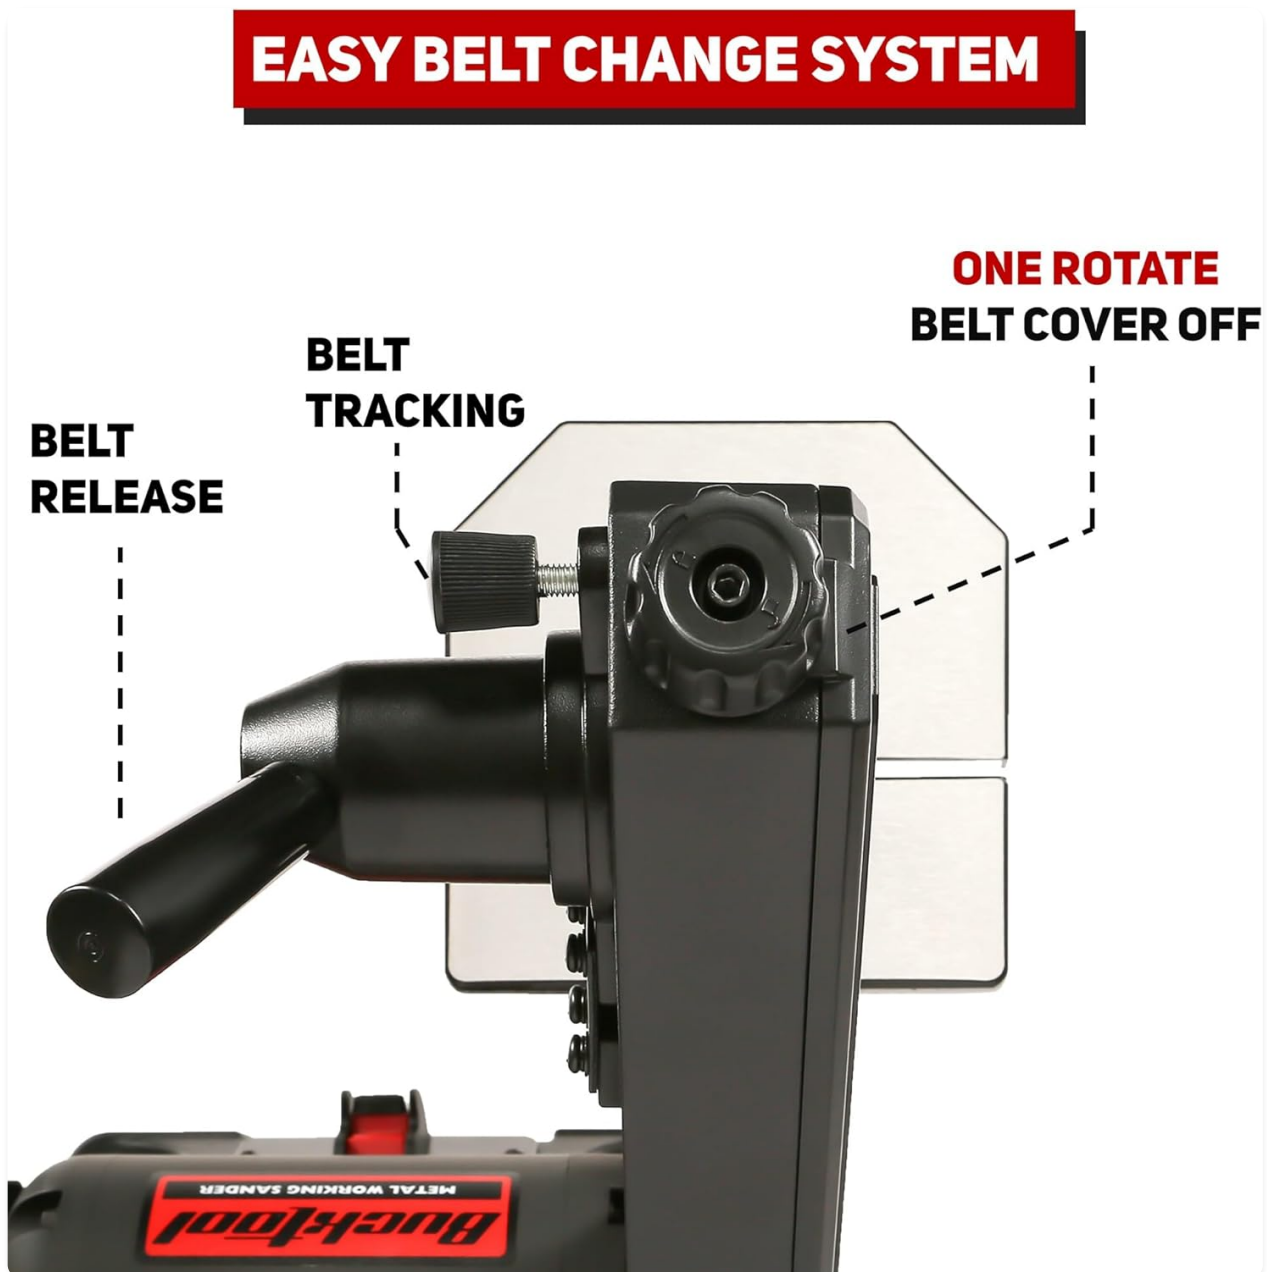


Figure 3.1: Close-up of the easy belt change system, showing belt release and tracking adjustment.



ONE ROTATE BELT COVER TAKE OFF



Figure 3.2: Illustration of the one-rotate belt cover take-off for quick access.

3.4 Work Table and Eye Shield Adjustment

Adjust the cast aluminum work table to the desired angle and height for your specific task. Position the adjustable eye shield to provide maximum protection without obstructing your view of the workpiece.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Connect the grinder to a 120V, 60Hz power outlet. Use the ON/OFF switch located on the front of the unit to start and stop the machine. Allow the machine to reach full speed before beginning work.

4.2 Belt Grinding Techniques

The 1x30 inch belt operates at 1700 FPM, an ideal low speed for sharpening and fine metalworking without excessive heat buildup. Apply gentle, consistent pressure when grinding. Move the workpiece evenly across the belt to ensure uniform material removal.

Video 4.1: This video demonstrates the operation of the Bucktool Low Speed Bench Belt Grinder Combo,

highlighting its low speed and efficiency for sharpening tasks. It also compares it to other models, showcasing its unique features like the direct drive and easy belt change system.

4.3 Grinding Wheel Usage

The 6-inch grinding wheel operates at 1790 RPM. Use the tool rest to support your workpiece when using the grinding wheel. Apply light pressure and move the workpiece consistently to avoid overheating and maintain control.

1790 RPM GRINDER



Figure 4.2: The 6-inch grinder with its eye shield and adjustable tool rest.

4.4 Dust Collection

The grinder is equipped with a vacuum port for dust extraction. Connect a suitable shop vacuum or dust collection system to this port to minimize airborne dust and maintain a cleaner work environment. This is especially important when working with materials that produce significant dust.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Bucktool grinder.

5.1 Cleaning

- Always unplug the tool before cleaning.
- Use a brush or compressed air to remove dust and debris from the motor vents and grinding areas.
- Wipe down exterior surfaces with a clean, damp cloth. Avoid using harsh chemicals or solvents.

5.2 Belt and Wheel Replacement

Replace belts and grinding wheels when they show signs of wear, such as reduced effectiveness or visible damage. Refer to Section 3.3 for detailed belt replacement instructions. For grinding wheels, ensure the replacement wheel matches the specifications and is properly balanced before installation.

5.3 General Inspection

Periodically check all nuts, bolts, and fasteners to ensure they are tight. Inspect the power cord for any damage. If any issues are found, discontinue use and contact customer support.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your grinder.

Problem	Possible Cause	Solution
Grinder does not start	No power supply; Faulty switch	Check power connection and outlet; Inspect switch for damage.
Motor overheats	Prolonged heavy use; Blocked vents	Allow motor to cool down; Clear any obstructions from vents.
Belt tracking issues	Improper belt installation; Tension too loose/tight	Re-install belt correctly; Adjust belt tension.
Excessive vibration	Loose mounting; Unbalanced wheel	Securely mount the grinder; Check and rebalance grinding wheel.

7. SPECIFICATIONS

Specification	Value
Brand	Bucktool
Model Number	60e07973-9212-48d0-861a-44a24ad1ff3d
Product Dimensions	13.39"L x 12.99"W x 15.35"H
Motor Power	1/3 HP
AC Adapter Current	2.1 Amps
Voltage	120 Volts
Maximum Rotational Speed	1790 RPM

Specification	Value
Sanding Belt Size	1x30 inch
Grinding Wheel Size	6 inch
Item Weight	23.6 pounds
Color	Black

PRODUCT DIMENSION



Figure 7.1: Detailed product dimensions for the Bucktool grinder.

8. WARRANTY & SUPPORT

The Bucktool Low Speed Bench Belt Grinder Combo comes with a 2-year warranty from the manufacturer, BUCKTOOL. This warranty covers defects in materials and workmanship under normal use.

8.1 Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Bucktool factory direct. You can also visit the official Bucktool Store on Amazon for more information and product resources.

Bucktool Store: <https://www.amazon.com/stores/BUCKTOOL/page/0908CF08-D6C2-447C-97FA-5BA8906D5E1E>

8.2 Protection Plans

Extended protection plans are available for purchase to provide additional coverage beyond the manufacturer's warranty. Options include 3-Year and 4-Year Protection Plans, as well as a monthly Complete Protect plan.