

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA 64G MP3 Player Instruction Manual

ASHATA ASHATAxtc08uovz4-13

ASHATA 64G MP3 Player Instruction Manual

Model: ASHATAxtc08uovz4-13

INTRODUCTION

Thank you for purchasing the ASHATA 64G MP3 Player. This portable music player is designed for ease of use and high-quality audio playback, supporting various formats. This manual provides detailed instructions on how to set up, operate, and maintain your device, ensuring a long and enjoyable experience.



Image: The ASHATA 64G MP3 Player, showcasing its compact design and user interface.

Safety Information

Please read the following safety precautions carefully before using the device to prevent personal injury or equipment damage.



Image: A warning sign indicating that users should not attempt to disassemble, modify, or repair the product themselves to avoid injury or damage.

- Do not attempt to disassemble, modify, or repair the product yourself. This can lead to personal injury or equipment damage and will void the warranty.
- Keep the device away from water, moisture, and extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Use only the provided charging cable and compatible power sources.
- Do not expose the battery to excessive heat, such as direct sunlight or fire.

PACKAGE CONTENTS

Ensure all items are present in the package:

- ASHATA 64G MP3 Player (Blue)
- Charging Cable
- Earphones



Image: The ASHATA MP3 Player displayed alongside its included charging cable and wired earphones.

PRODUCT OVERVIEW

Familiarize yourself with the components and features of your ASHATA MP3 Player.



Image: A top-down view of the ASHATA MP3 Player, highlighting its screen and control buttons.



Image: A close-up view of the bottom of the MP3 Player, showing the USB charging port, headphone jack, and microSD card slot.



Image: A detailed view of the circular control pad on the MP3 Player, featuring Menu, Volume, and navigation buttons.

Key Features:

- **Premium Material:** Constructed from durable aluminum alloy for long-lasting use.
- **Large Memory Capacity:** Supports up to 64GB of external memory via a microSD card (card not included).
- **Long Battery Life:** Provides up to 8 hours of continuous music playback on a full charge. A full charge takes approximately 2 hours.
- **Lossless Sound Quality:** Supports a wide range of audio formats including MP3, WMA, FLAC, APE, AAC, OGG, and ACELP.
- **Easy to Use:** Features intuitive navigation, playlist support, random play, and playback functions. Includes a sleep shutdown feature.

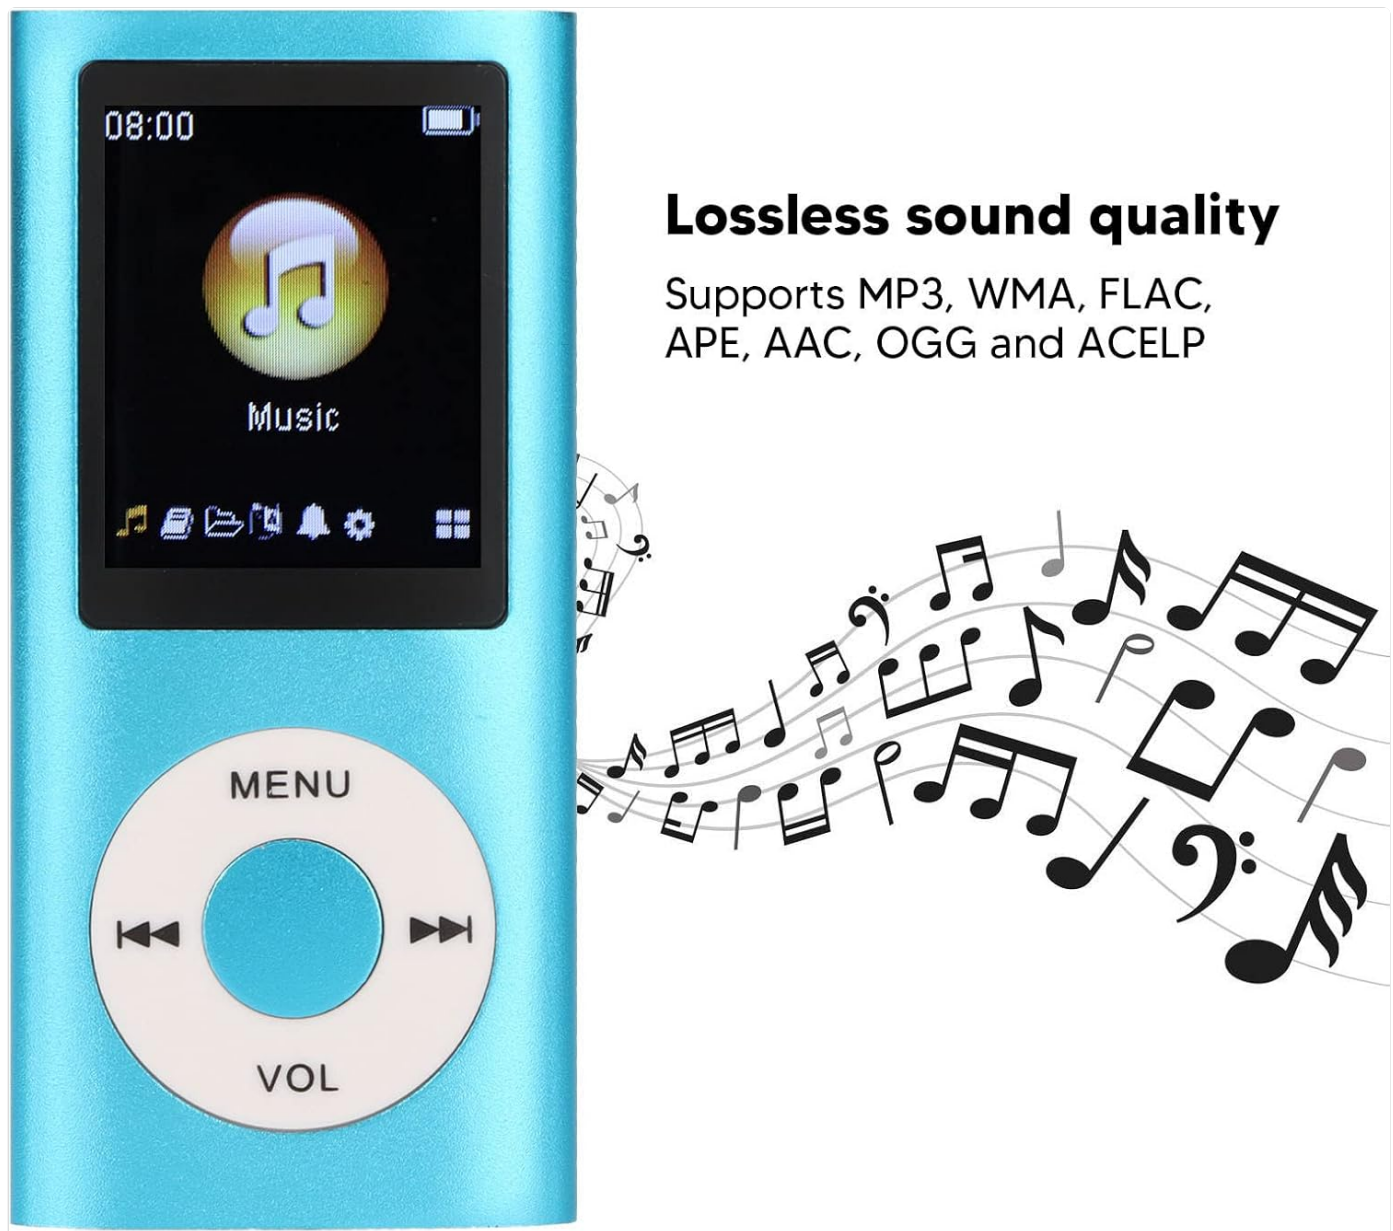


Image: The MP3 Player screen showing the "Music" icon, with text indicating "Lossless sound quality" and supported formats: MP3, WMA, FLAC, APE, AAC, OGG, and ACELP.

Large memory

Supports up to 64G memory capacity,
(note: card not included)

Original for MYMAHDI memory card
recommended



Image: The MP3 Player screen showing the "Music" icon, with text indicating "Large memory" and support for up to 64G memory capacity (card not included).

Long lasting battery

Battery takes about 2 hours to fully charge
Up to 8 hours of use on a full charge



Image: The MP3 Player alongside an illustration of a battery, with text indicating "Long lasting battery" and details about charging time (2 hours) and usage time (up to 8 hours).

SETUP

1. Charging the Device

1. Connect the small end of the provided USB charging cable to the USB port on the bottom of the MP3 player.
2. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.

3. The battery indicator on the screen will show charging status.
4. A full charge typically takes about 2 hours. Disconnect the cable once fully charged.

2. Inserting a MicroSD Card

The MP3 player supports up to 64GB microSD cards for expanded storage. A card is not included.

1. Locate the microSD card slot on the bottom of the device, next to the USB port.
2. Gently insert the microSD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, gently push the card in again until it clicks and springs out.

3. Transferring Music Files

1. Connect the MP3 player to your computer using the provided USB cable.
2. The device will appear as a removable disk drive on your computer.
3. Drag and drop your desired music files (MP3, WMA, FLAC, APE, AAC, OGG, ACELP) into the player's storage or the inserted microSD card.
4. Once files are transferred, safely eject the device from your computer before disconnecting the USB cable.

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on, press and hold the "MENU" button for a few seconds.
- To power off, press and hold the "MENU" button again until the screen turns off.

2. Basic Navigation

- Use the **Left/Right arrow buttons** (previous/next track) to navigate through menus and select options.
- Press the **"MENU" button** to enter a selected option or return to the previous menu.
- Press the **"VOL" button** to adjust the volume. Use the Left/Right arrow buttons to increase or decrease volume.

3. Playing Music

1. From the main menu, navigate to "Music" and press the "MENU" button.
2. You can browse by "All Songs", "Artists", "Albums", "Genres", or "Playlists".
3. Select a song or playlist and press the "MENU" button to start playback.
4. During playback:
 - Press **Left/Right arrow buttons** to skip to the previous/next track.
 - Press the **"MENU" button** to pause/play.
 - Press the **"VOL" button** to enter volume adjustment mode, then use Left/Right to change volume.

4. Sleep Shutdown

The device supports a sleep shutdown feature to conserve battery. Refer to the device's settings menu to configure this option.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Software Updates:** Check the ASHATA official website periodically for any available firmware updates to ensure optimal

performance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is drained.	Connect the device to a power source using the USB cable and charge for at least 30 minutes.
Cannot transfer files to the device.	Incorrect USB connection or driver issue.	Ensure the USB cable is securely connected. Try a different USB port or computer. Restart both the device and computer.
No sound from earphones.	Earphones not properly connected or faulty. Volume too low.	Ensure earphones are fully plugged into the headphone jack. Test with another pair of earphones. Increase the volume.
Device freezes or becomes unresponsive.	Software glitch.	Press and hold the "MENU" button for about 10-15 seconds to force a restart.
MicroSD card not recognized.	Card not inserted correctly or incompatible.	Reinsert the microSD card. Ensure it is formatted correctly (FAT32 or exFAT). Try a different microSD card.

SPECIFICATIONS

Brand	ASHATA
Model Number	ASHATAxtc08uovz4-13
Color	Blue
Screen Size	1.8 Inches
Memory Storage Capacity	64 GB (via Micro SD card, not included)
Connectivity Technology	USB
Supported Audio Formats	MP3, WMA, FLAC, APE, AAC, OGG, ACELP
Battery Life	Up to 8 hours playback
Charging Time	Approximately 2 hours
Item Weight	2.82 ounces
Package Dimensions	9.06 x 3.19 x 0.94 inches
Included Components	Charging Cable, Earphone

WARRANTY AND SUPPORT

ASHATA products are manufactured to the highest quality standards. For any issues or support inquiries, please refer to your purchase platform or contact ASHATA customer service directly. Please retain your proof of purchase for warranty claims. For more information, visit the [ASHATA Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BTYN3L8L>

More documents and user manuals: <https://manuals.plus/>