

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA 64G MP3 Player User Manual

ASHATA ASHATAx08uovz4-12

ASHATA 64G MP3 Player User Manual

Model: ASHATAx08uovz4-12

INTRODUCTION

This manual provides comprehensive instructions for the ASHATA 64G MP3 Player. Please read this manual carefully before using the device to ensure proper operation and to maximize its features. This portable music player is designed for sports and studying, offering high-quality audio playback and a compact design.

WHAT'S INCLUDED

Verify that all items are present in the package:

- ASHATA 64G MP3 Player (Silver)
- Earphones
- USB Charging Cable
- User Manual (this document)



Image: The ASHATA MP3 Player shown alongside its included earphones and USB charging cable.

PRODUCT OVERVIEW

Familiarize yourself with the components of your ASHATA MP3 Player:



Image: Front view of the silver ASHATA MP3 Player, displaying the screen and control buttons.

- **1.8 Inch Screen:** Displays menus, song information, and settings.
- **Control Buttons:** Central navigation pad with Menu, Play/Pause, Next/Previous, and Volume controls.
- **USB Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** For connecting earphones.
- **MicroSD Card Slot:** Supports up to 64GB memory expansion (card not included).



Image: Detailed view of the bottom of the MP3 player, showing the USB port, headphone jack, and microSD card slot.



Image: Close-up of the circular control pad with "MENU", "VOL", and navigation buttons.

SETUP

1. Charging the Device

Before first use, fully charge the MP3 player. The battery takes approximately 2 hours to fully charge and provides up to 8 hours of playback.

1. Connect the small end of the USB charging cable to the USB port on the bottom of the MP3 player.
2. Connect the standard USB end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The screen will indicate charging status.

Long lasting battery

Battery takes about 2 hours
to fully charge
Up to 8 hours of use on
a full charge



Image: The MP3 player displayed next to a graphic of a full battery, illustrating its long-lasting battery feature.

2. Inserting a MicroSD Card (Optional)

The MP3 player supports up to 64GB of external memory via a MicroSD card (not included). An original memory card is recommended for optimal performance.

1. Locate the MicroSD card slot on the bottom of the device.
2. Gently insert the MicroSD card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove, gently push the card inward until it springs out.

Large memory

Supports up to 64G memory capacity,
(note: card not included)
Original for MYMAHDI memory card
recommended



Image: The MP3 player with text highlighting its support for large memory capacity, up to 64GB via MicroSD card.

3. Connecting Earphones

Plug the included earphones or your preferred 3.5mm headphones into the headphone jack on the bottom of the device.

OPERATING THE MP3 PLAYER

Power On/Off

Press and hold the Play/Pause button (center button) to power the device on or off.

Navigation

- **Menu Button:** Press to return to the previous menu or the main menu.
- **Up/Down/Left/Right Buttons:** Navigate through menu options.
- **Center Button (Play/Pause):** Select an option or play/pause music.
- **VOL Button:** Press to adjust volume. Use the Left/Right buttons to increase/decrease volume.

Playing Music

The player supports MP3, WMA, FLAC, APE, AAC, OGG, and ACELP audio formats, offering lossless sound quality.

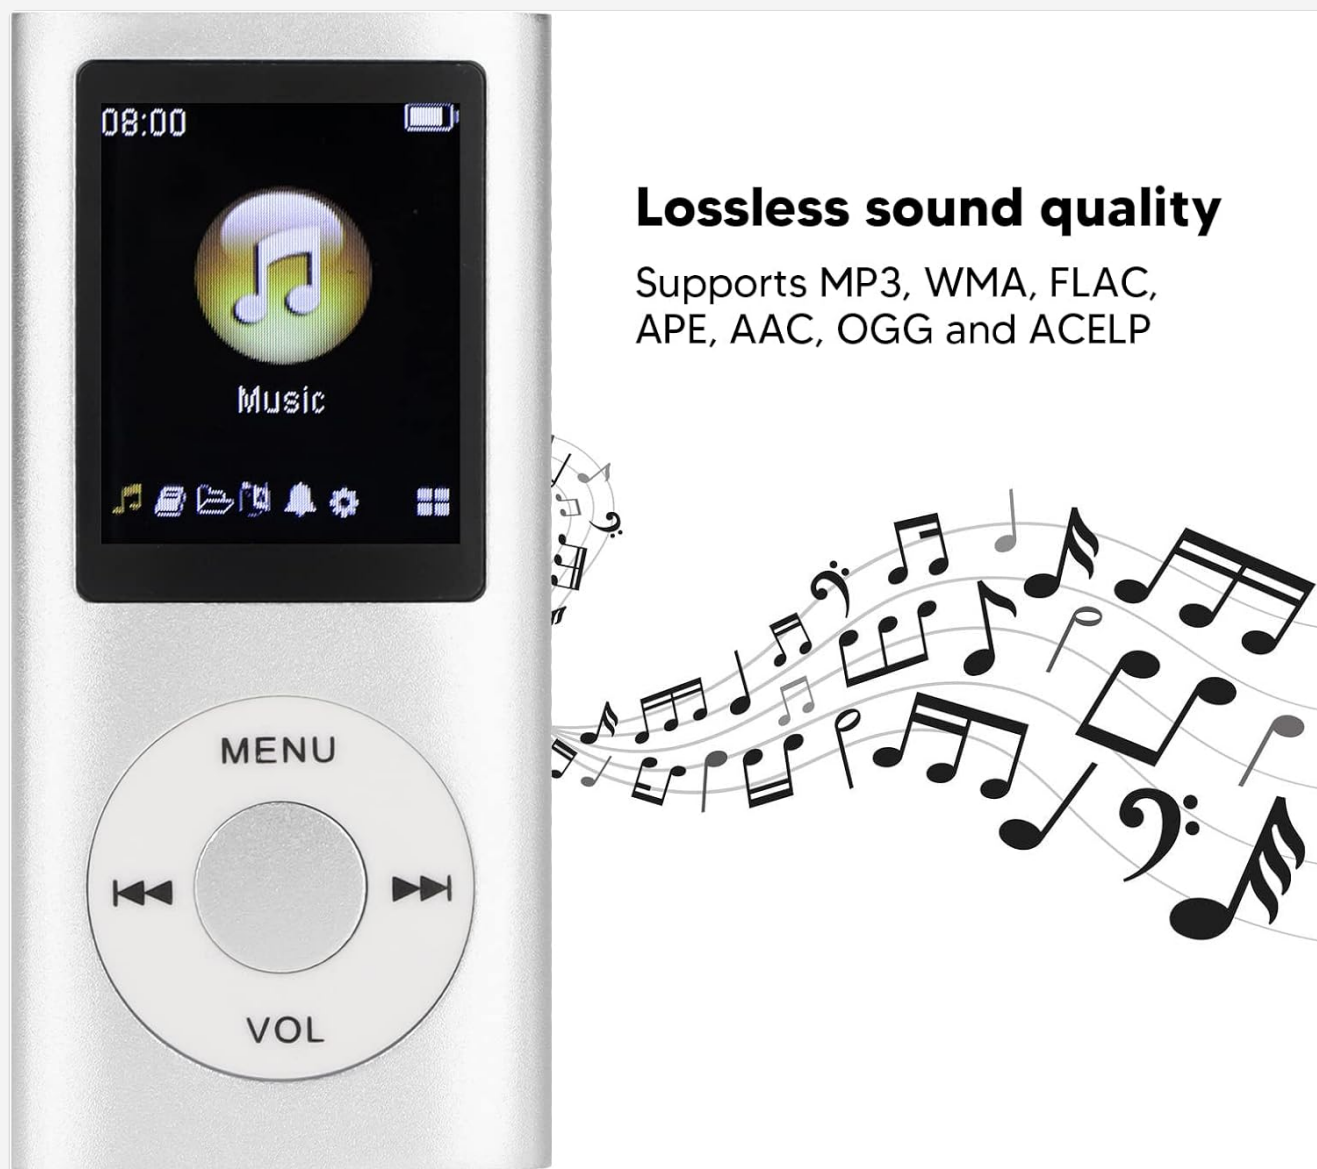


Image: The MP3 player with a graphic illustrating its lossless sound quality and listing supported audio formats.

1. From the main menu, navigate to "Music" or "Files".
2. Browse through your folders and select a song to play.
3. Use the Play/Pause button to control playback.
4. Use the Next/Previous buttons to skip tracks.
5. The player supports playlists, random play, and playback modes.

Transferring Files

To transfer music files to your MP3 player or MicroSD card:

1. Connect the MP3 player to your computer using the USB cable.
2. The device will appear as a removable disk drive on your computer.
3. Drag and drop your audio files into the appropriate folders on the device or MicroSD card.
4. Safely eject the device from your computer before disconnecting the USB cable.

Your browser does not support the video tag.

Video: A demonstration of the ASHATA MP3 Player's features and how to handle the device, including connecting accessories and basic operation.

Your browser does not support the video tag.

Video: An overview of the ASHATA MP3 Player, highlighting its compact size and suitability for activities like sports.

MAINTENANCE

- Keep the device dry. Moisture can damage electronic components.
- Clean the screen and body with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Protect the device from extreme temperatures and direct sunlight.
- Avoid dropping the device or subjecting it to strong impacts.
- Do not attempt to disassemble, modify, or repair the product yourself to avoid personal injury or equipment damage.



Image: A warning graphic advising users not to disassemble or modify the product to prevent injury or damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; device frozen.	Charge the device for at least 30 minutes. If still unresponsive, press and hold the power button for 10-15 seconds to force a restart.
No sound from earphones.	Volume too low; earphones not properly connected; faulty earphones.	Increase volume. Ensure earphones are fully plugged in. Test with another pair of earphones.
Cannot transfer files.	Loose USB connection; incorrect USB mode; driver issue on computer.	Ensure USB cable is securely connected. Try a different USB port or cable. Check if the device is recognized as a removable disk.
Music files not recognized.	Unsupported file format; corrupted files.	Ensure files are in supported formats (MP3, WMA, FLAC, APE, AAC, OGG, ACELP). Re-transfer files or try different files.

SPECIFICATIONS

Feature	Detail
Brand	ASHATA
Model Number	ASHATAxtc08uovz4-12
Screen Size	1.8 Inches
Memory Storage Capacity	64 GB (via MicroSD card, not included)
Supported Audio Formats	MP3, WMA, FLAC, APE, AAC, OGG, ACELP
Connectivity Technology	USB
Battery Life	Up to 8 hours (playback)
Charging Time	Approximately 2 hours
Item Weight	2.64 ounces
Color	Silver
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your purchase or visit the official ASHATA website. Keep your purchase receipt as proof of purchase for warranty claims.

© 2024 ASHATA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BTYPDYDZ>

More documents and user manuals: <https://manuals.plus/>