

Cybex 521003579

Cybex LEMO High Chair 3-in-1 Set Instruction Manual

Model: Lemo 2 (521003579)

INTRODUCTION

The Cybex LEMO 3-in-1 High Chair offers a versatile solution designed to grow with your child, seamlessly integrating into your home environment. This manual provides essential information for the safe and effective use, assembly, and maintenance of your Cybex LEMO High Chair.

From 6 months, utilize the Baby Set and Snack Tray for convenient meal times. As your child develops, the LEMO chair adapts, transforming into an everyday chair suitable for use up to 99 years, supporting a maximum weight of 209 pounds.



Image: The Cybex LEMO High Chair 3-in-1 Set in Pearl Pink, showcasing its primary configuration.

SAFETY INFORMATION

Your child's safety is paramount. Please read and understand all safety warnings and instructions before using the Cybex LEMO High Chair.

- **Always use the restraint harness system.** Ensure your child is securely fastened at all times when using the Baby Set.
- **Never leave the child unattended** in the high chair or bouncer.
- Ensure the chair is placed on a stable, level surface.
- Keep children away from the product during assembly and disassembly.
- Regularly inspect the product for any loose, worn, or damaged parts. Discontinue use if any damage is found.
- Do not use accessories or replacement parts other than those approved by Cybex.

SETUP AND ASSEMBLY

The Cybex LEMO High Chair is designed for easy assembly, typically requiring only a few minutes and eight screws.

Components Overview

Before beginning assembly, ensure all components are present and undamaged. The 3-in-1 set typically includes the LEMO High Chair frame, Baby Set, and Snack Tray.



Image: Individual components of the Cybex LEMO High Chair, including the main frame, seat, footrest, Baby Set, and Snack Tray.

Assembly Steps

1. Unpack all parts and lay them out on a clean, flat surface.
2. Attach the main frame components using the provided screws. Ensure all connections are secure.
3. Slide the seat and footrest into their desired positions. These can be adjusted later.
4. For infants, attach the Baby Set to the seat. Ensure it clicks securely into place.

5. If using, attach the Snack Tray to the Baby Set.

LEMO 2

HIGH CHAIR 3-IN-1 SET



**EFFORTLESS
ADJUSTMENT**

**INDIVIDUAL
DEPTH AND
HEIGHT
ADJUSTMENT**

**ANTI-TIP
WHEELS**

**EASY TO
ASSEMBLE**

Image: Visual guide illustrating the simple assembly process of the Cybex LEMO High Chair.

OPERATING THE HIGH CHAIR

The Cybex LEMO High Chair is designed for effortless adjustment and adaptability to your child's growth stages.

Effortless Adjustment

The seat and footrest can be adjusted quickly and easily with one hand, allowing for optimal ergonomic positioning as your child grows.



Image: Close-up of the one-hand adjustment mechanism for the seat and footrest.

Depth and Height Adjustment

Multiple positions for both seat depth and height ensure comfortable and proper seating for children of various ages and sizes.

INDIVIDUAL DEPTH AND HEIGHT ADJUSTMENT

MULTIPLE POSITIONS ENSURE COMFORTABLE SEATING AS YOUR CHILD GROWS

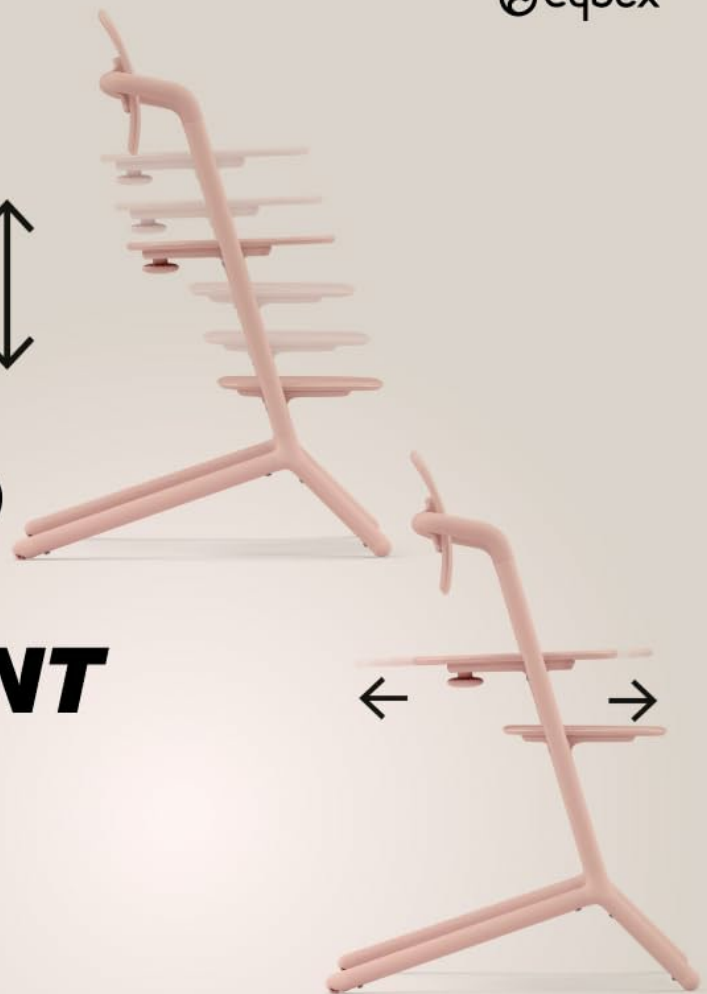


Image: Diagram illustrating the range of depth and height adjustments for the seat and footrest.

Anti-Tip Wheels

Integrated anti-tip wheels provide enhanced stability and allow for easy portability of the chair around your home.

3-in-1 Functionality

- **High Chair with Baby Set + Snack Tray (from 6 months):** Ideal for infants learning to eat solid foods. The Baby Set provides support, and the Snack Tray offers a convenient eating surface.
- **Junior Chair:** As your child grows, remove the Baby Set and Snack Tray to use the LEMO as a junior chair, allowing them to sit comfortably at the family table.
- **Adult Chair:** The LEMO chair can be used as a regular chair for adults, demonstrating its long-term versatility.



Image: The Cybex LEMO High Chair displayed in its various configurations, from infant high chair to adult seating.

Product Overview Video

Watch this official video for a comprehensive overview of the Cybex LEMO High Chair System, demonstrating its features and versatility.

Your browser does not support the video tag.

Video: An official product video showcasing the Cybex LEMO High Chair System, highlighting its design, features, and adaptability for different age groups.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and hygiene of your Cybex LEMO High Chair.

- **General Cleaning:** All surfaces, including the seat and tray, are wipeable. Use a damp cloth with mild soap and water to clean. Avoid abrasive cleaners.
- **Snack Tray:** The Snack Tray is removable and dishwasher-safe for easy cleaning.
- **Straps:** The shoulder straps are easily removable for cleaning. The crotch strap can be more challenging to remove; consider cleaning it while attached to the Baby Set for a quick refresh.
- **Wooden Components:** If your chair includes wooden elements, ensure they are dried thoroughly after cleaning to prevent bulging or cracking. Food stains, especially from berries, may be absorbed if not cleaned promptly, as the wood is not perfectly sealed from the factory.
- **Storage:** Store the high chair in a dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

This section addresses common concerns you might encounter with your Cybex LEMO High Chair.

- **Difficulty with Tray Removal/Attachment:** The tray may require both hands to attach and remove. Ensure the clips are fully engaged or disengaged. If your hands are wet or messy, this can make the process more difficult.
- **Suction Plates Not Sticking to Tray:** The matte finish of the tray may prevent some silicone suction plates from adhering properly. This is a characteristic of the material.
- **Loose or Damaged Parts:** If any parts appear loose, broken, or damaged upon arrival or during use, discontinue use immediately. Contact Cybex customer service for assistance. Do not attempt to repair damaged components yourself.
- **Strap Adjustment/Removal Difficulty:** While shoulder straps are easy to remove, the crotch strap can be fiddly. Refer to the assembly instructions for proper removal and reinstallation.

SPECIFICATIONS

Key technical specifications for the Cybex LEMO High Chair 3-in-1 Set:

Feature	Specification
Product Dimensions	22"D x 21.5"W x 32.1"H (55.9 x 54.6 x 81.5 cm)
Item Weight	20.5 Pounds (9.3 kg)
Maximum Weight Recommendation	209 Pounds (95 kg)
Material Composition	60% Aluminum, 20% Beechwood, 15% Plastic, 4% metal, 1% silicone
Model Number	521003579
Color	Pearl Pink
Is Portable	Yes



Image: Diagram showing the key dimensions of the Cybex LEMO High Chair.

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please contact Cybex customer service directly. They can provide the most accurate and up-to-date information regarding your product.

Visit the official Cybex website or refer to the contact information provided with your product packaging for assistance.

© 2024 Cybex. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question