

Lavor SKYVAP MAX

Lavor SKYVAP MAX Steam Generator and Vacuum Cleaner User Manual

Model: SKYVAP MAX

1. INTRODUCTION

The Lavor SKYVAP MAX is a versatile and powerful steam generator and vacuum cleaner designed for deep cleaning and sanitization of various surfaces, particularly carpets. This appliance utilizes high-temperature steam and strong suction to effectively remove dirt, grime, and bacteria, ensuring a hygienic environment. Please read this manual thoroughly before operating the device to ensure safe and efficient use.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the power supply matches the appliance's requirements (120V).
- Do not immerse the appliance in water or other liquids.
- Keep hands, face, and body away from the steam nozzle when in use, as steam is extremely hot (up to 145°C) and can cause burns.
- Do not open the water tank cap while the appliance is under pressure or hot. Allow it to cool down and release pressure before refilling.
- Always unplug the appliance from the electrical outlet before cleaning, servicing, or when not in use.
- Do not operate the appliance with a damaged cord or plug.
- Use only manufacturer-recommended attachments and accessories.
- Keep the appliance out of reach of children and pets.
- Use the appliance only on surfaces that can withstand high temperatures and moisture.

3. PRODUCT COMPONENTS AND ACCESSORIES

The LAVOR SKYVAP MAX comes with several components and accessories to facilitate various cleaning tasks.



Image: The LAVOR SKYVAP MAX steam generator shown with its full set of accessories, including hoses, brushes, and nozzles.

Standard Inclusions:

- Main Unit (Lavor SKYVAP MAX Steam Generator)
- 3 Meter Hose
- 480 mm HP Extension Pipe
- HP Connection for Brushes
- HP Rectangular Floor Brush
- HP Triangular Brush
- HP Window Wiper
- Small Round Bristle Brush
- Towels
- Funnel
- Inclined HP Sprayer

4. TECHNICAL SPECIFICATIONS

Understanding the technical specifications of your Lavor SKYVAP MAX ensures optimal performance and safe operation.

Specification	Value
Brand	Lavor
Model Number	SKYVAP MAX
Power Source	Wired Electric
Motor Power	2000 Watts
Voltage	120 Volts
Steam Pressure	4 Bar
Water Temperature	145°C
Tank Capacity	2.4 Liters
Weight	8.4 kg
Noise Level	75 dB
Filter Type	Disc
Surface Recommendation	Carpet
Form Factor	Canister

Key Features:

- Integrated Power Cable Holder
- Control Panel with Indicator Lamps (Steam Sensor, Water Shortage)
- Thermostat and Double Thermostat for Rapid Temperature Sensing
- Technical Mechanical Cover for Easy Opening and Closing
- Safety Cap with Anti-Unscrewing Protection and Safety Valve
- 6-meter Power Cable
- Equipped with Wheels for Easy Mobility

5. SETUP AND INITIAL USE

5.1 Unpacking and Assembly:

1. Carefully remove all components from the packaging.
2. Check for any damage. Do not use the appliance if it appears damaged.
3. Attach the desired hose and extension pipes securely to the main unit.

4. Select and attach the appropriate cleaning brush or nozzle for your task.

5.2 Filling the Water Tank:

1. Ensure the appliance is unplugged and cool.
2. Unscrew the safety cap on the water tank.
3. Using the provided funnel, carefully pour clean tap water into the tank. Do not overfill; refer to the maximum fill line.
4. Securely screw the safety cap back on.



SKYVAP max

Technical data sheet	المواصفات الفنية
<p>Technical Specifications:</p> <ol style="list-style-type: none"> 1) Operating current: 230V – 50–60 Hz. 2) Motor power: 2000W. 3) Pressure: 4 bar. 4) Water temperature: 145° C. 5) Tank capacity: 2,4l. 6) Weight: 8,4 kg. 	<p>المواصفات الفنية:</p> <ol style="list-style-type: none"> ١) تيار التشغيل: ٢٣٠ فولت – ٥٠-٦٠ هرتز. ٢) قدرة الموتور: ٢٠٠٠ وات. ٣) الضغط: ٤ بار. ٤) درجة حرارة البخار: ١٤٥ درجة. ٥) سعة الخزان: ٢,٤ لتر. ٦) الوزن: ٨,٤ كجم.
<p>Features:</p> <ol style="list-style-type: none"> 1) Power cable holder. 2) Control panel with lamps includes: <ol style="list-style-type: none"> a. Steam sensor lamp. b. Water shortage lamp with heater. 3) Steam regulator. 4) Thermometer. 5) Double thermostat for fast temperature sensing. 6) A technical mechanical cover for easy closing and opening. 7) Cap with protection against anti-unscrewing and safety valve. 8) Power cable 6 m. 9) The machine equipped with wheels for easy movement. 	<p>المميزات:</p> <ol style="list-style-type: none"> ١) مزودة بحامل كابل كهربائى. ٢) مزودة بلوحة تحكم مشيئة تشمل الأتي: <ul style="list-style-type: none"> ○ لمبة عند استشعار البخار. ○ لمبة عند نقص المياه بالسفان. ٣) بكرة تحديد كمية البخار. ٤) عداد الحرارة. ٥) ترموستات مزدوجة لسرعة الاستشعار بدرجة الحرارة. ٦) غطاء ميكانيكى فى سهولة الغلق والفتح. ٧) المائتة مزودة بغطاء حماية ويحتوى على بلف امان عند ارتفاع الضغط بالسفان. ٨) كابل كهرباء بطول ٦ متر. ٩) المائتة مجهزة على عجل لسهولة الحركة.
<p>Machine Inclusions:</p> <ol style="list-style-type: none"> 1) 3 Meter HOSE. 2) 480 mm HP Extension pipes. 3) HP connection for brushes. 4) HP rectangular floor brush. 5) HP triangular brush. 6) HP window wiper. 7) Small round bristle brush. 8) Towels, Carafe, Funnel. 9) Inclined HP Sprayer 	<p>مشمومات الماكينة:</p> <ol style="list-style-type: none"> ١) خرطوم ٣ متر. ٢) أنبوب إطالة ضغط عالي ٤٨٠ سم. ٣) وحدة ضغط عالي لتفريغ. ٤) فرشاة أرضيات ضغط عالي مستطيلة الشكل. ٥) فرشاة ضغط عالي مثلثة الشكل. ٦) ممسحة نوافذ ضغط عالي. ٧) فرشاة صغيرة دائرية من الشعر الخشن. ٨) مناشف وقنينة وفتح. ٩) بخاخ ضغط عالي مائل.

Image: A hand demonstrates filling the water tank of the LAVOR SKYVAP MAX using the provided funnel.

6. OPERATING INSTRUCTIONS

6.1 Powering On and Heating:

1. Plug the power cord into a suitable 120V electrical outlet.
2. Turn on the main power switch. The indicator lamp will illuminate, signaling that the appliance is heating up.
3. Wait for the steam-ready indicator lamp to light up, indicating that the optimal steam temperature and

pressure have been reached. This may take several minutes.

6.2 Steam Cleaning:

1. Press the steam release button on the handle to activate steam flow.
2. Direct the steam nozzle towards the surface to be cleaned. For best results, move the nozzle slowly and steadily.
3. For stubborn dirt, hold the nozzle closer to the surface for a longer duration.
4. Use the appropriate brush or attachment for different surfaces (e.g., rectangular brush for floors, small round brush for crevices).

6.3 Vacuum Function:

Specific instructions for activating and using the vacuum function will depend on the model's controls. Generally, there will be a separate switch or mode selector for vacuuming. Ensure the steam function is off or not actively used when primarily vacuuming dry debris.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Lavor SKYVAP MAX.

7.1 After Each Use:

1. Turn off the appliance and unplug it from the power outlet.
2. Allow the unit to cool completely.
3. Empty any remaining water from the tank.
4. Clean the accessories and attachments with water and mild detergent, then allow them to air dry.
5. Wipe the exterior of the appliance with a damp cloth.

7.2 Descaling:

Over time, mineral deposits (scale) can build up in the boiler and components, affecting performance. Lavor offers optional descaling products:

- **Scale Prevention:** Use Lavor scale prevention solution (Code 0.010.0036, 100 ml x 4 pcs) to prevent deposits in components and pipes. Follow product instructions for use.
- **Scale Removal:** For existing scale deposits in the boiler, use Lavor scale removal product (Code 0.010.0028, 50 gr x 25 pcs). Follow product instructions carefully.

7.3 Storage:

Store the appliance and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.



Image: The LAVOR SKYVAP MAX with its power cord wrapped and floor tool attached for compact storage.

8. TROUBLESHOOTING

If you encounter issues with your LAVOR SKYVAP MAX, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam pressure	Water tank empty; appliance not heated sufficiently; scale buildup.	Refill water tank; wait for steam-ready indicator; descale the appliance.
Appliance not turning on	Not plugged in; power switch off; electrical outlet fault.	Check power cord connection; ensure switch is on; test outlet with another device.
Water leaking	Tank cap not secured; hose/attachment not properly connected.	Tighten tank cap; ensure all connections are firm.
Vacuum suction is weak	Dust container full; filter clogged; hose/nozzle blocked.	Empty dust container; clean or replace filter; check for and clear blockages.

If the problem persists after attempting these solutions, please contact customer support.

9. WARRANTY AND SUPPORT

The Lavor SKYVAP MAX comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or warranty claims, please contact Lavor customer support through their official website or the contact information provided in your product documentation. When contacting support, please have your model number (SKYVAP MAX) and purchase information ready.