

[Manuals.plus](#) /

› [Profi Cook](#) /

› Portable 1.7L Black Electric Kettle PC-WKS1243 User Manual

Profi Cook PC-WKS1243

Profi Cook Portable 1.7L Black Electric Kettle

Model: PC-WKS1243 (501243)

User Manual

INTRODUCTION

Thank you for choosing the Profi Cook Portable 1.7L Black Electric Kettle. This appliance is designed for efficient and safe water boiling, featuring precise temperature control and a convenient keep-warm function. Please read this manual carefully before first use to ensure proper operation and maintenance.



Image: The Profi Cook PC-WKS1243 electric kettle, showcasing its sleek black design and digital display, alongside a glass cup of tea.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been

damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the lid is securely closed before operating.
- Do not fill above the MAX line or below the MIN line.
- This kettle features dry-boil protection and overheat protection, and an automatic shut-off function for enhanced safety.

Sicherer und Langlebiger Wasserkocher



Sicherheits-
klappdeckel



Trocken-
gehschutz



Überhitzungs-
schutz



Automatische
Abschaltung



Image: Diagram highlighting the safety features of the kettle, including safety flip lid, dry-boil protection, overheat protection, and automatic shut-off.

PARTS IDENTIFICATION

Familiarize yourself with the components of your electric kettle:

- **Kettle Body:** The main container for water, featuring a double-walled thermo-housing for insulation.
- **Lid:** Hinged lid for easy filling and cleaning.
- **Handle:** Ergonomically designed for comfortable pouring.
- **Spout:** For pouring water.
- **Water Level Indicator:** Located inside the kettle, showing MIN and MAX fill levels.
- **Digital Display/Control Panel:** On the front of the kettle, showing temperature and control buttons.
- **Power Base:** The separate base unit with a power cord, providing 360-degree rotation for the kettle.

SETUP

Before using your new electric kettle for the first time, please follow these steps:

1. Unpack the kettle and all accessories. Remove any packaging materials.
2. Place the power base on a dry, flat, stable, and heat-resistant surface. Ensure the power cord is not dangling where it can be tripped over.
3. Fill the kettle with clean water up to the MAX fill line.
4. Boil the water (see "Operating Instructions"). Discard the boiled water.
5. Repeat the boiling and discarding process 2-3 times to remove any manufacturing residues.
6. Your kettle is now ready for use.



Image: A close-up view of the kettle's 360-degree rotatable power base, illustrating its cordless design for easy handling.

OPERATING INSTRUCTIONS

Follow these steps to operate your Profi Cook electric kettle:

1. **Filling the Kettle:** Open the lid by pressing the stainless steel button on the handle. Fill the kettle with the desired amount of fresh, cold water. Do not fill below the MIN mark or above the MAX mark. Close the lid securely.

Einhandbedienung durch Klappöffnung



Image: A hand holding the kettle under a faucet, demonstrating the one-hand operation for filling by pressing the stainless steel button to open the lid.

2. **Placing on Power Base:** Place the kettle firmly onto the power base. Ensure it is properly seated.
3. **Connecting to Power:** Plug the power cord into a suitable wall outlet.
4. **Selecting Temperature and Boiling:**
 - Press the power button () on the control panel to turn on the kettle. The display will illuminate.
 - Use the temperature selection buttons (often indicated by lines or arrows) to cycle through the desired temperature settings: 50°C, 70°C, 80°C, 90°C, or 100°C (Boil).
 - Once the desired temperature is selected, the kettle will begin heating. The current temperature will be displayed.
 - The kettle will automatically shut off once the selected temperature is reached.

Mit Temperatureinstellung

Einfache Bedienung per Touch



Ideal für die Zubereitung verschiedener **Teesorten.**

Image: The kettle's digital display showing various temperature presets (50°C for baby food, 70°C for white tea, 80°C for green tea, 90°C for instant coffee, 100°C for black tea), illustrating easy touch operation.

5. **Keep-Warm Function:** After reaching the set temperature, you can activate the "WARM" function (if available on your model's control panel). This will maintain the water at the selected temperature for a certain period.

“Keep-it-warm” Warmhaltefunktion



Doppelwandiges
Thermogehäuse



Image: The kettle on a kitchen counter, highlighting its "Keep-it-warm" function and the double-walled thermo-housing for insulation.

6. **Baby Food Warming:** The 50°C setting is ideal for warming water for baby formula or food. Always check the temperature of the liquid before feeding to ensure it is safe for consumption.

Optimal für Babyflasche

Aufwärmen mit Voreinstellung



Image: The electric kettle positioned next to baby bottles, illustrating its optimal use for warming baby formula with pre-set temperature options.

7. **Pouring:** Carefully lift the kettle from the base and pour the hot water. Be cautious of steam.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

General Cleaning:

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the kettle or its power base in water or any other liquid.
- The interior can be rinsed with water. For stubborn stains, use a soft brush or sponge.

Descaling:

Mineral deposits (limescale) can build up inside the kettle over time, especially in hard water areas. This can affect performance and taste. Descale your kettle regularly (e.g., monthly or bi-monthly depending on water hardness).

- Fill the kettle with a mixture of white vinegar and water (1:2 ratio) or a commercial descaling solution according to the product instructions.
- Boil the solution.
- Let it stand for at least 30 minutes, or longer for heavy buildup.
- Pour out the solution and rinse the kettle thoroughly several times with fresh water.
- Boil fresh water in the kettle 2-3 times and discard to remove any residual vinegar or descaling solution taste.

TROUBLESHOOTING

If you encounter any issues with your kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in; power switch not activated; kettle not properly seated on base.	Ensure plug is securely in outlet; press power button; reseal kettle on base.
Kettle switches off before boiling.	Too much limescale buildup; dry-boil protection activated (no water or too little water).	Descale the kettle; ensure water level is between MIN and MAX marks.
Water has an unusual taste.	New kettle residue; limescale buildup.	Perform initial cleaning steps (boil and discard water several times); descale the kettle.
Lid does not close properly.	Obstruction; lid mechanism issue.	Check for any obstructions; ensure nothing is preventing the lid from clicking shut.

SPECIFICATIONS

Model:	PC-WKS1243 (501243)
Brand:	Profi Cook
Capacity:	1.7 Liters
Power:	2200 Watts
Voltage:	(Standard household voltage, e.g., 120V for US, 220-240V for EU)
Material:	Non-Toxic, Double-walled thermo-housing
Color:	Black
Dimensions (L x W x H):	6.3" x 9.06" x 10.04" (16 cm x 23 cm x 25.5 cm)
Weight:	2.51 pounds (1.14 kg)
Special Features:	Portable, Temperature Control (50°C, 70°C, 80°C, 90°C, 100°C), Keep-Warm Function, 360° Rotatable Base, BPA-Free, Safety Flip Lid, Dry-Boil Protection, Overheat Protection, Automatic Shut-off.

Handliche Größe mit 1,7 L Füllmenge



Image: A visual representation of the kettle's dimensions (25 cm height, 15.5 cm width), along with key specifications like temperature display, 2200 Watts power, and BPA-free material.

WARRANTY AND SUPPORT

Your Profi Cook PC-WKS1243 Electric Kettle is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

- **Warranty Period:** Typically 2 years for EU spare part availability. Please check your specific region's warranty details.
- **Customer Support:** For technical assistance, warranty claims, or spare parts, please contact Profi Cook customer service. Contact information can usually be found on the Profi Cook official website or on the product packaging.
- **Proof of Purchase:** Always retain your proof of purchase for warranty purposes.

© 2024 Profi Cook. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question