

[Manuals.plus](#) /

› [Cybex](#) /

› Cybex LEMO 2 High Chair Instruction Manual

## Cybex Lemo 2 High Chair

# Cybex LEMO 2 High Chair Instruction Manual

Model: Lemo 2 High Chair

## INTRODUCTION

Welcome to the Cybex LEMO 2 High Chair instruction manual. This guide provides essential information for the safe and proper assembly, operation, and maintenance of your high chair. The Cybex LEMO 2 is designed to be a versatile seating solution that adapts to your child's growth, from infancy through adulthood.

Please read this manual thoroughly before using the product and keep it for future reference.

## IMPORTANT SAFETY INFORMATION

Always follow these safety guidelines to prevent injury or damage:

- Always use the restraint harness system when a child is in the high chair.
- Never leave the child unattended in the high chair.
- Ensure all components are securely fastened before each use.
- Do not use the high chair if any parts are broken, torn, or missing.
- Keep children away from the product during assembly and adjustment.
- Do not place the high chair near open flames or other heat sources.
- The high chair is designed for children who can sit unaided.
- Maximum weight recommendation: 209 pounds.

## SETUP AND ASSEMBLY

The Cybex LEMO 2 High Chair is designed for easy assembly. Follow these steps:

1. Unpack all components and verify against the parts list (not provided in this manual, refer to packaging).

2. Attach the main frame components. The chair is assembled using eight screws.
3. Securely fasten the seat and footrest boards into their desired positions.
4. Ensure the anti-tip wheels are correctly oriented and functional.



Image: Front-side view of the assembled Cybex LEMO 2 High Chair in Sand White, showcasing its modern design with a light wooden seat and footrest, and a white frame.



Image: Front view of the Cybex LEMO 2 High Chair, highlighting its minimalist design and stable base.



Image: Back view of the Cybex LEMO 2 High Chair, showing the rear support structure and the attachment points for the seat and backrest.

## OPERATING INSTRUCTIONS

### Adjusting Seat Height and Depth


The LEMO 2 High Chair features effortless, one-hand adjustment for both seat height and depth, allowing it to adapt to your child's growth and different table heights.

- To adjust the seat height, locate the adjustment mechanism under the seat. Lift or lower the seat to the desired position.
- To adjust the seat depth, slide the seat forward or backward to ensure a comfortable and secure fit for the child.
- Ensure the footrest is also adjusted to provide proper support for the child's feet.

## EASY ADJUSTMENT



One-hand & tool-free

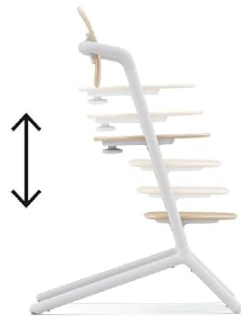

Individual height



Individual depth

Image: A diagram illustrating the one-hand, tool-free adjustment for individual height and depth of the Cybex LEMO 2 High Chair's seat and footrest.

### Anti-Tip Wheels

The integrated anti-tip wheels provide stability and allow for easy movement of the chair without lifting. These wheels are designed to prevent tipping when a child pushes off a table.


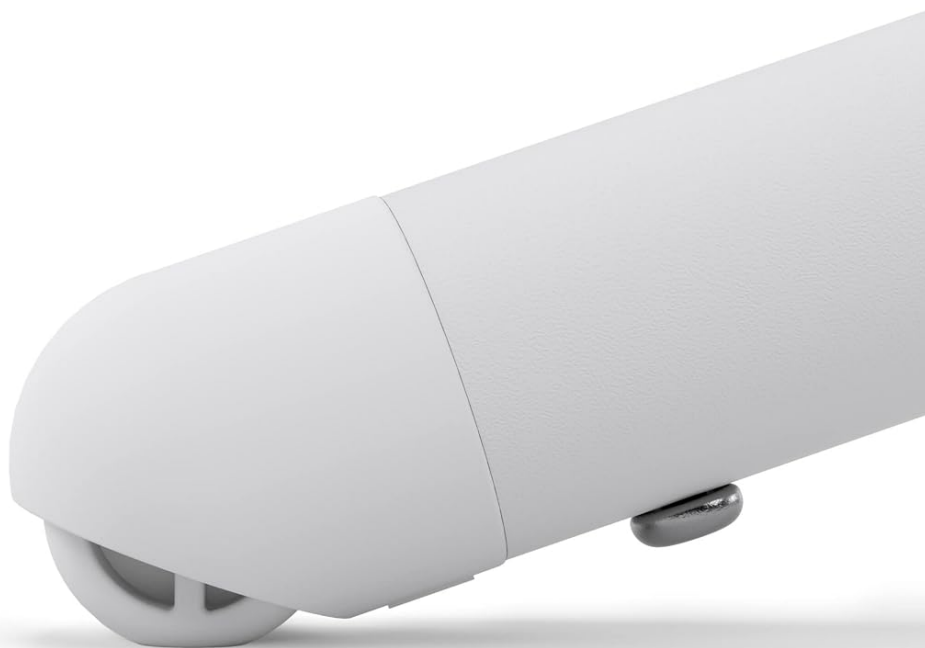 


Image: A close-up view of the anti-tip wheel on the Cybex LEMO 2 High Chair, with an icon indicating its anti-tip function.

### **Convertibility**

 The LEMO 2 High Chair is a "Forever Chair," designed to be used from 3 to 99 years, adapting from a baby bouncer setup (with additional accessories, sold separately) to a high chair, and eventually to an adult chair.

# THE FOREVER CHAIR

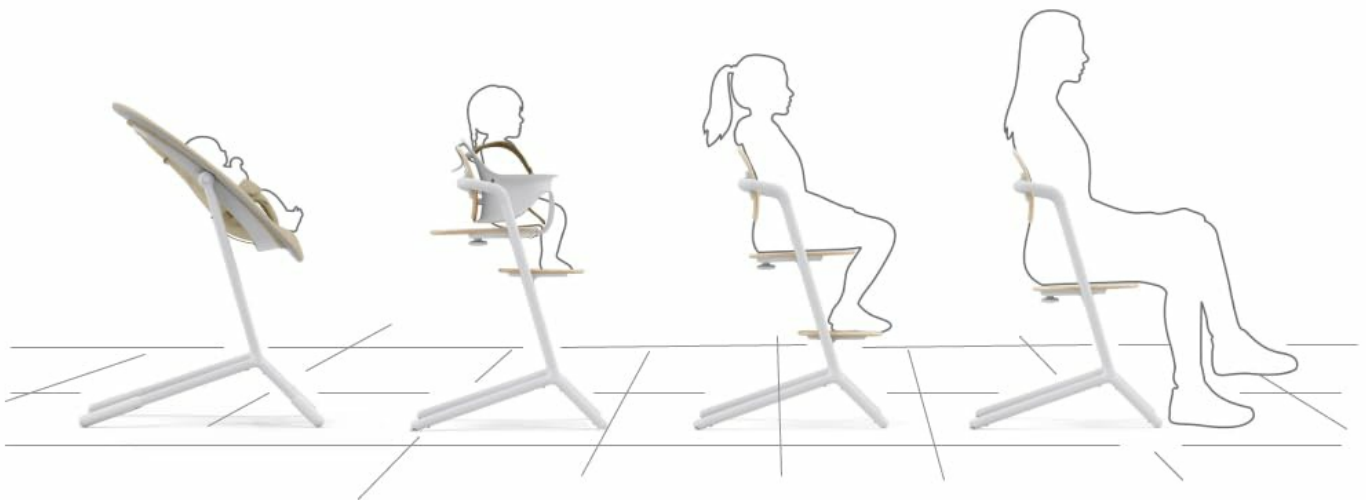

## FROM BIRTH TO 99 YEARS

A TIMELESS CHAIR SYSTEM THAT GROWS WITH YOUR CHILD UP TO 209 LBS.

Image: A visual representation of the Cybex LEMO 2 High Chair's versatility, showing its use with a baby bouncer, as a high chair for a toddler, and as a regular chair for an older child and an adult.

### MAINTENANCE AND CARE

Proper care ensures the longevity and safety of your Cybex LEMO 2 High Chair:

- **Cleaning:** Clean with a damp cloth and mild detergent. Dry thoroughly immediately after cleaning to prevent moisture damage to wooden components.
- **Inspection:** Regularly inspect all parts for wear, damage, or loose fasteners. Tighten screws as needed.
- **Storage:** Store the high chair in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

| Problem                                    | Possible Cause                          | Solution                                                                                                                  |
|--------------------------------------------|-----------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Chair feels unstable or wobbly.            | Loose screws or uneven floor surface.   | Check and tighten all eight assembly screws. Ensure the chair is on a flat, level surface.                                |
| Difficulty adjusting seat height/depth.    | Mechanism might be stiff or obstructed. | Ensure no debris is blocking the adjustment mechanism. Apply gentle force. If persistent, contact customer support.       |
| Anti-tip wheels not functioning correctly. | Wheels obstructed or damaged.           | Clear any obstructions around the wheels. Inspect for damage. If damaged, contact customer support for replacement parts. |

SPECIFICATIONS

**Product Dimensions:** 22"D x 21.5"W x 32.1"H (55.9 cm D x 54.6 cm W x 81.5 cm H)

**Item Weight:** 16.9 Pounds (7.67 kg)

**Maximum Weight Recommendation:** 209 Pounds (94.8 kg)

**Material Type:** 70% Aluminum, 25% Beechwood, 4% metal, 1% silicone

**Style:** Lemo 2

**Color:** Sand White

**Portability:** Yes

**Batteries Required:** No



Image: A diagram illustrating the key dimensions of the Cybex LEMO 2 High Chair: 32.1 inches in height, 21.5 inches in width, and 22 inches in depth.

## WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official Cybex website or contact their customer service department. Keep your proof of purchase for any warranty claims.

**Cybex Official Website:** [www.cybex-online.com](http://www.cybex-online.com)

© 2025 Cybex. All rights reserved.

**ASK A QUESTION ABOUT THIS MANUAL**

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**