

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Honeywell](#) /

› [Honeywell Keyless Entry Door Lock with Touch Screen Keypad Deadbolt - Model 8635000 User Manual](#)

Honeywell 8635000

Honeywell Keyless Entry Door Lock with Touch Screen Keypad Deadbolt - Model 8635000 User Manual

Your guide to secure and convenient home access.

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Honeywell Keyless Entry Door Lock, Model 8635000. Please read these instructions carefully before installation and use to ensure proper function and security.

PACKAGE CONTENTS

Verify that all components listed below are present in your package:

- Exterior Assembly
- Interior Assembly
- 2 Entry Keys
- Strike Plate
- Latch (Adjustable)
- Mounting Plate
- 1" (25mm) Screws - 1 ea
- 3/4" (19mm) Screws - 5 ea
- 7/8" (22mm) Screws - 2 ea
- 5/16" (8mm) Screws - 2 ea

COMPLETE PACKAGE INCLUDES:

- Exterior Assembly
- Interior Assembly
- 2 Entry Keys
- Strike Plate
- Latch (Adjustable)
- Mounting Plate
- 1" (25mm) Screws - 1 ea
- 3/4" (19mm) Screws - 5 ea
- 7/8" (22mm) Screws - 2 ea
- 5/16" (8mm) Screws - 2 ea



This image displays all components included in the Honeywell Keyless Entry Door Lock package, such as the exterior and interior assemblies, keys, strike plate, latch, mounting plate, and various screws.

INSTALLATION AND SETUP

The Honeywell Keyless Entry Door Lock is designed for easy installation. A Phillips screwdriver is typically the only tool required. Ensure your door is prepared according to standard deadbolt installation requirements.

- 1. Prepare the Door:** Ensure the door bore hole and backset are compatible with the lock.
- 2. Install the Latch:** Insert the latch into the door edge and secure it with screws.
- 3. Install Exterior Assembly:** Place the exterior keypad assembly onto the door, ensuring the spindle passes through the latch.
- 4. Install Interior Mounting Plate:** Secure the interior mounting plate to the exterior assembly using the provided screws.
- 5. Connect Cables and Install Interior Assembly:** Connect the cable from the exterior assembly to the interior assembly. Mount the interior assembly onto the mounting plate and secure it.
- 6. Insert Batteries:** Open the battery cover on the interior assembly and insert 4 AA batteries (not included).
- 7. Perform Door Handing Process:** The lock features an auto-handing sensor. Follow the instructions in the full manual to ensure the lock correctly identifies if your door is right or left-handed.



MODERN TOUCH SCREEN KEYPAD

For quick and easy access.



KEYLOCK FOR EXTRA SECURITY

With 2 backup entry keys.



Dual Access for Enhanced Security

Unlock with the touchscreen keypad or traditional keys for added convenience.

A person is shown installing the Honeywell Keyless Entry Door Lock on a white door using a Phillips screwdriver, demonstrating the ease of installation.

This video demonstrates the installation process of the Honeywell Keyless Entry Door Lock, including battery insertion, securing the lock to the door, and highlighting features like the backlit keypad and one-touch locking.

OPERATION

Your Honeywell Keyless Entry Door Lock offers convenient and secure access.

Keyless Entry

To unlock the door using a personalized code:

1. Touch the keypad to activate the backlit display.
2. Enter your personalized 4-8 digit user code.
3. The deadbolt will retract, allowing you to open the door.



ONE-TOUCH LOCKING FOR INSTANT SECURITY

Lock your door with a single touch secure, fast, and built for total peace of mind, at home or away.



SECURE VACATION

Activate vacation mode to disable functions, save power, and secure your home while you're away.

A finger is shown pressing a number on the backlit touchscreen keypad of the Honeywell Keyless Entry Door Lock, illustrating keyless access.

One-Touch Locking

To lock the door from the exterior:

- Press the lock symbol button on the keypad.
- The deadbolt will extend, securing the door.

EASY INSTALLATION

In minutes with a Phillips screwdriver, especially when holes are pre-drilled into the door



PACKAGE INCLUDES



MOUNTING KIT



INSTRUCTION MANUAL



DRILLING TEMPLATE

A hand is shown pressing the lock button on the Honeywell Keyless Entry Door Lock keypad, demonstrating the one-touch locking feature.

Vacation Mode

Activate Vacation Mode to disable all lock functions, conserving battery life and enhancing security when you are away. Refer to the full manual for specific steps to enable and disable this mode.

PROGRAMMING USER CODES

The lock supports up to 50 unique user codes, allowing multiple individuals to access your property. Each code can be 4 to 8 digits long.

Adding a User Code

1. Enter the Master Programming Code (default is usually 12345678, but verify in the full manual).
2. Press the 'Program' button (often indicated by a gear icon or similar).
3. Enter the new 4-8 digit user code you wish to add.
4. Press the 'Lock' button to confirm.

Deleting a User Code

To delete a specific user code, you will typically need to enter the Master Programming Code, followed by a sequence to delete a user code, and then the specific user code to be removed. Consult the full manual for the exact sequence.



This image shows the Honeywell Keyless Entry Door Lock keypad alongside two physical keys, with text emphasizing the ability to program and delete up to 50 different user codes.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lock.

Battery Replacement

The lock features a low battery indicator. When the batteries are low, the indicator light will flash, or the lock may emit an audible alert. Replace all four AA batteries promptly to avoid loss of function. Use only new, high-quality alkaline batteries.

Cleaning

Clean the lock's exterior with a soft, damp cloth. Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the finish and electronic components.

TROUBLESHOOTING

If you encounter issues with your lock, refer to the following common solutions:

- **Keypad Not Responding:** Check the batteries. If the batteries are dead, the keypad will not illuminate or respond. Replace them.
- **Lockout Protection:** After multiple incorrect code entries, the lock will enter a lockout mode for a short period to prevent unauthorized access. Wait for the lockout period to expire before trying again.
- **Deadbolt Not Extending/Retracting:** Ensure the door is properly aligned and not binding. Check for any obstructions in the door frame or strike plate.
- **Physical Key Not Working:** Ensure you are using the correct backup entry key. If the key still does not work, the cylinder may need inspection by a qualified locksmith.

For more detailed troubleshooting steps, consult the complete user manual or contact customer support.

SPECIFICATIONS

Brand	Honeywell
Model Name	8635000
Special Feature	Touchscreen
Lock Type	Keypad
Item Dimensions (L x W x H)	9 x 5 x 8 inches
Material	Nickel
Color	Satin Nickel
Power Source	4 AA Batteries (not included)
User Codes	Up to 50 programmable codes
Control Method	Touch, Mechanical knob

WARRANTY INFORMATION

Honeywell provides the following warranty for this product:

- **Limited Lifetime Mechanical and Finish Warranty:** Covers defects in material and workmanship of the lock's mechanical components and finish for the lifetime of the product.
- **1-Year Limited Electronic Warranty:** Covers defects in the electronic components for one year from the date of purchase.

For full warranty terms and conditions, please refer to the documentation included with your product or visit the official Honeywell website.

CUSTOMER SUPPORT

If you require further assistance, have questions, or need to report an issue, please contact Honeywell customer support. Contact information can typically be found on the product packaging or the official Honeywell website. When contacting support, please have your product model number (8635000) and proof of purchase readily available.