

[Manuals.plus](#) /

> [ALLIMITY](#) /

> ALLIMITY AKB76038001 Remote Control User Manual

## ALLIMITY AKB76038001

# ALLIMITY AKB76038001 Remote Control User Manual

Replacement Remote Control for LG Sound Bars

## INTRODUCTION

This manual provides instructions for the ALLIMITY AKB76038001 replacement remote control. This remote is designed to function as a direct replacement for the original LG Sound Bar remote control, model AKB76038001. It requires no programming or setup; simply insert batteries to begin operation.





Image: Front view of the ALLIMITY AKB76038001 remote control, showcasing its button layout and sleek black design.

## SETUP

---

Follow these steps to prepare your remote control for use:

1. **Open the Battery Compartment:** Locate the battery cover on the back of the remote control. Gently slide the cover downwards or press the latch (if present) to open it.





Image: Back view of the ALLIMITY AKB76038001 remote control, showing the open battery compartment ready for battery insertion.

- 2. Insert Batteries:** Insert two (2) AAA 1.5V alkaline batteries into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries match the markings inside the compartment.

3. **Close the Battery Compartment:** Slide the battery cover back into place until it clicks securely.
4. **No Programming Required:** This replacement remote control is pre-programmed and does not require any additional setup or pairing with your LG Sound Bar. It is ready for immediate use after battery installation.

## OPERATING INSTRUCTIONS

---

The ALLIMITY AKB76038001 remote control provides full functionality for compatible LG Sound Bar models. Point the remote directly at your sound bar for optimal performance.

### Key Functions:

- **Power Button ( ):** Turns the sound bar on or off.
- **Volume Up/Down (+/-):** Adjusts the sound bar's volume level.
- **Mute Button ( ):** Mutes or unmutes the sound.
- **Input/Function Button:** Cycles through available input sources (e.g., HDMI, Optical, Bluetooth).
- **Navigation Pad (Up, Down, Left, Right, OK):** Used for menu navigation and selection.
- **Settings Button (⚙️):** Accesses the sound bar's settings menu.
- **Other Function Buttons:** Depending on your specific LG Sound Bar model, other buttons may control specific audio modes, sound effects, or playback options. Refer to your sound bar's original manual for detailed functionality.

### Compatible LG Sound Bar Models:

This remote control is compatible with the following LG Sound Bar models:

- S95QR
- SPQ9-SL, SPQ9-SR
- SP9YA, SP8YA, SPP8-W, SP9YT
- DS95QR, S75QR
- WTP3
- SP9A, SP8A, SPP5-W
- S65Q
- SP7, SP7Y
- S90QY, S80QY
- SPQ8-W, SPQ8-S
- SP11RA, SPP11M-SL, SPP11M-SR
- S78S2-S
- DS80QR
- AKB76038001 (original remote model it replaces)

## MAINTENANCE

---

Proper care and maintenance will extend the life of your remote control.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA 1.5V alkaline).
- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential

- damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops and Spills:** Protect the remote from physical impact and exposure to liquids, which can cause internal damage.

## TROUBLESHOOTING

If you experience issues with your remote control, refer to the following troubleshooting tips:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA 1.5V alkaline batteries.
  - Ensure there are no obstructions between the remote control and the LG Sound Bar.
  - Make sure you are within the effective operating range and pointing the remote directly at the sound bar's sensor.
- **Intermittent Operation:**
  - This could indicate low battery power. Replace the batteries.
  - Ensure the remote's infrared (IR) emitter is clean and not obstructed.
- **Specific Buttons Not Working:**
  - If only certain buttons are unresponsive, try replacing the batteries first.
  - Ensure the button is not stuck or physically damaged.
  - Confirm that the function you are trying to use is supported by your specific LG Sound Bar model.

If the issue persists after trying these steps, please contact customer support.

## SPECIFICATIONS

| Feature            | Detail                                                 |
|--------------------|--------------------------------------------------------|
| Model Number       | AKB76038001 (Replaced Remote)                          |
| Brand              | ALLIMITY                                               |
| Power Supply       | 2 x AAA 1.5V Alkaline Batteries (not included)         |
| Product Dimensions | 6.5 x 1.38 x 0.72 inches                               |
| Item Weight        | 2.5 ounces                                             |
| Color              | Black                                                  |
| Compatibility      | LG Sound Bar models (e.g., S95QR, SP9YA, DS95QR, etc.) |

## SUPPORT

For further assistance or inquiries regarding your ALLIMITY AKB76038001 remote control, please contact ALLIMITY customer support through your purchase platform or the manufacturer's official website. Please have your product model number and purchase details ready when contacting support.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0BV25DBQV>

More documents and user manuals: <https://manuals.plus/>