

[Manuals.plus](#) /

› [Gamrombo](#) /

› Gamrombo Wireless Controller User Manual

Gamrombo Wireless Controller for Xbox

Gamrombo Wireless Controller User Manual

Model: Wireless Controller for Xbox

1. PRODUCT OVERVIEW

The Gamrombo Wireless Controller is designed to provide an enhanced gaming experience across multiple platforms. It features advanced functionalities such as a Turbo function, programmable buttons, a 6-axis gyro sensor, and adjustable vibration for immersive gameplay.

This controller is compatible with:

- Xbox One
- Xbox Series X/S
- Xbox One S/X
- Mac/PC/Steam
- Android/iOS devices



Figure 1: Gamrombo Wireless Controller, front view.

PROGRAMMABLE BUTTONS FOR HIGHLY PERSONALIZED CONFIGS



Figure 2: Multi-platform compatibility of the Gamrombo Wireless Controller.

2. SAFETY INFORMATION

Please read and follow these safety guidelines to ensure safe operation and prolong the life of your controller:

- Do not expose the controller to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the controller to strong impacts.
- Keep the controller away from liquids and moisture.
- Do not attempt to disassemble or modify the controller. This may void the warranty and cause damage.
- Use only approved charging cables and accessories.
- Keep out of reach of small children.

3. SETUP

3.1 Initial Connection to Xbox Console

Follow these steps to connect your Gamrombo Wireless Controller to your Xbox console:

1. Press the power button on your Xbox console to turn it on.
2. Locate and press the WiFi pairing button on the Xbox console.
3. On the Gamrombo controller, press the HOME key.
4. While holding the HOME key, press and hold the pairing key located at the top of the controller for 3 seconds. The handle light will begin to flash rapidly, indicating it is in pairing mode.
5. Once the connection is successful, the controller's light will become constant.

Your browser does not support the video tag.

Video 1: Demonstrates the connection method for the Xbox controller.

3.2 Software Update Procedure

To ensure optimal performance and compatibility, it is recommended to keep your controller's software updated. If you experience connection issues, an update may be required.

1. Download the updated software from the official link:<https://we.tl/t-nP91yV2IWp>.
2. On the controller, press and hold the **Y** button.
3. While holding the **Y** button, connect the controller to your PC using a USB cable.
4. Open the downloaded upgrade program on your PC.
5. Once the program indicates "Connected", click the "Download" button to start the firmware update.
6. A 100% progress bar indicates a successful upgrade.
7. After upgrading, first connect the Xbox console with the cable before you can subsequently connect to the Xbox console wirelessly normally.

If you are unable to connect to the Xbox system

Please download the updated software through this URL:

<https://we.tl/t-nP91yV2lWp>

There is a **software upgrade video** tutorial in the listing. Please check it out. It **only takes 2 minutes** to complete the upgrade



Figure 3: Software update instructions for the controller.

Your browser does not support the video tag.

Video 2: Detailed tutorial on how to upgrade the Xbox controller software.

4. OPERATING INSTRUCTIONS

4.1 Controller Layout

Familiarize yourself with the various buttons and their functions:



Figure 4: Gamrombo Wireless Controller button layout and functions.

- **Home Button:** Powers on/off the controller, accesses system menus.
- **Menu Button:** Opens in-game menus or system options.
- **View Button:** Provides additional in-game information or context-sensitive actions.
- **A/B/X/Y Buttons:** Standard action buttons.
- **D-pad:** Directional input.
- **Left/Right Stick:** Analog joysticks for movement and camera control.
- **LB/RB (Left/Right Bumper):** Shoulder buttons.
- **LT/RT (Left/Right Trigger):** Analog triggers.
- **USB Charging Port:** For charging and wired connection.
- **Pair Key:** Used for wireless pairing.
- **Headphone Jack:** For audio output.
- **PR/Set/PL Buttons:** Programmable back paddles.

4.2 Turbo Function

The Turbo function allows for rapid-fire input of specific buttons, providing a competitive edge in certain games.

- To activate Turbo for a button: Press and hold the **Turbo** button, then press the desired action button (A, B, X, Y, LB, RB, LT, RT).
- To deactivate Turbo: Repeat the process.



Figure 5: Turbo Function explanation.

4.3 Programmable Buttons (Paddles)

The controller features programmable back paddles (PR, Set, PL) for highly personalized configurations. Up to 16 buttons can be programmed.

- Consult the detailed instructions provided with the controller for specific programming steps for the PR, Set, and PL buttons.
- This feature allows mapping single buttons or complex multi-button sequences to the back paddles.

TURBO FUNCTION

Gain a competitive edge with the Turbo Function, allowing you to easily activate rapid-fire mode for quick and efficient gameplay.



Figure 6: Programmable back buttons for custom configurations.

4.4 Advanced Features

- **3D Gaming Joystick:** Provides zero delay and 360° response for fast and accurate in-game control.
- **6-Axis Gyro Sensor:** Allows for precise motion sensing, enhancing control and motion tracking in compatible games.
- **Adjustable Vibration:** Built-in dual motors provide haptic feedback for an immersive gaming experience. Vibration intensity may be adjustable through game settings or controller software.

3D GAMING JOYSTICK

Zero delay ,360° response without interval
the game is fast and accurate



Figure 7: 3D Gaming Joystick for precise control.



Figure 8: 6-Axis Gyro Sensor and Adjustable Vibration features.

5. MAINTENANCE

Proper maintenance will help extend the lifespan of your Gamrombo Wireless Controller:

- **Cleaning:** Use a soft, dry cloth to wipe down the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** If the controller uses a rechargeable battery, avoid fully discharging it frequently. Charge the controller regularly, even if not in constant use, to maintain battery health.

6. TROUBLESHOOTING

If you encounter issues with your Gamrombo Wireless Controller, refer to the following common solutions:

- **Controller Not Connecting:**
 - Ensure the controller is charged or has fresh batteries.
 - Verify the Xbox console is powered on and its WiFi pairing button has been pressed.
 - Re-attempt the pairing process as described in Section 3.1.
 - If connection issues persist, perform a software update as detailed in Section 3.2. Remember to connect the controller via cable to the Xbox after the update for the first time.
- **Buttons Not Responding / Sticking:**
 - Clean around the buttons with a soft, dry cloth to remove any debris.
 - Ensure the controller is properly connected and not experiencing signal interference.
- **Input Lag or Delay:**
 - Move closer to the console/device to reduce wireless interference.
 - Ensure no other wireless devices are causing interference.
 - Try connecting the controller via a USB cable to see if the issue resolves, indicating a wireless interference problem.

If these steps do not resolve the issue, please contact Gamrombo customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
ASIN	B0BV29H38T
Package Dimensions	6.77 x 4.72 x 2.76 inches
Item Weight	9.91 ounces
Type of Item	Video Game Controller
Date First Available	May 27, 2023
Connectivity	Wireless (Bluetooth 5.0), Wired (USB)
Special Features	Turbo Function, Programmable Paddles, 3D Gaming Joystick, 6-Axis Gyro Sensor, Adjustable Vibration, 3.5mm Headphone Jack

8. WARRANTY AND SUPPORT

Gamrombo is committed to providing high-quality products and excellent customer service.

- **Warranty:** This product comes with a 1-Year Free Replacement warranty.
- **Lifetime Service:** Gamrombo offers lifetime service for this product.
- **Customer Support:** For any questions or issues, please communicate with us in time by your Order ID. We aim for a 24-hour prompt response.

For more information or to contact support, please visit the [Gamrombo Store on Amazon](#).