

[manuals.plus](#) /

› [INTERGREAT](#) /

› [INTERGREAT Portable Twin Tub Washer and Spin Dryer User Manual \(Model: B0BV2Q3F8L\)](#)

INTERGREAT B0BV2Q3F8L

INTERGREAT Portable Twin Tub Washer and Spin Dryer User Manual

Model: B0BV2Q3F8L

INTRODUCTION

Thank you for choosing the INTERGREAT Portable Twin Tub Washer and Spin Dryer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and retain it for future reference.



Image: Front-side view of the INTERGREAT Portable Twin Tub Washer and Spin Dryer. The appliance is white with a blue transparent lid, featuring two tubs and control knobs on top.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Ensure the power supply matches the voltage requirements (110 Volts).
- Do not operate the machine with a damaged power cord or plug.
- Keep children away from the appliance during operation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Always unplug the machine when not in use or before cleaning.
- The washing machine features an automatic lid safety switch that prevents operation if the cover is not securely closed. Do not attempt to bypass this safety mechanism.

- Do not overload the washing or spin tubs. Refer to capacity guidelines.
- Ensure the drain hose is properly positioned to prevent water damage.

PRODUCT COMPONENTS AND CONTROLS

Familiarize yourself with the main parts of your portable washer and dryer.

- **Washing Tub:** For washing clothes. Capacity: 9.6 lbs.
- **Spin Tub:** For spin-drying clothes. Capacity: 6.4 lbs. Made of stainless steel.
- **Control Panel:** Includes Wash Timer, Wash Selector, and Spin Timer knobs.
- **Water Inlets:** Two ports for water supply.
- **Drain Hose:** For expelling wastewater.
- **Spin Cap:** Safety cover for the spin tub.

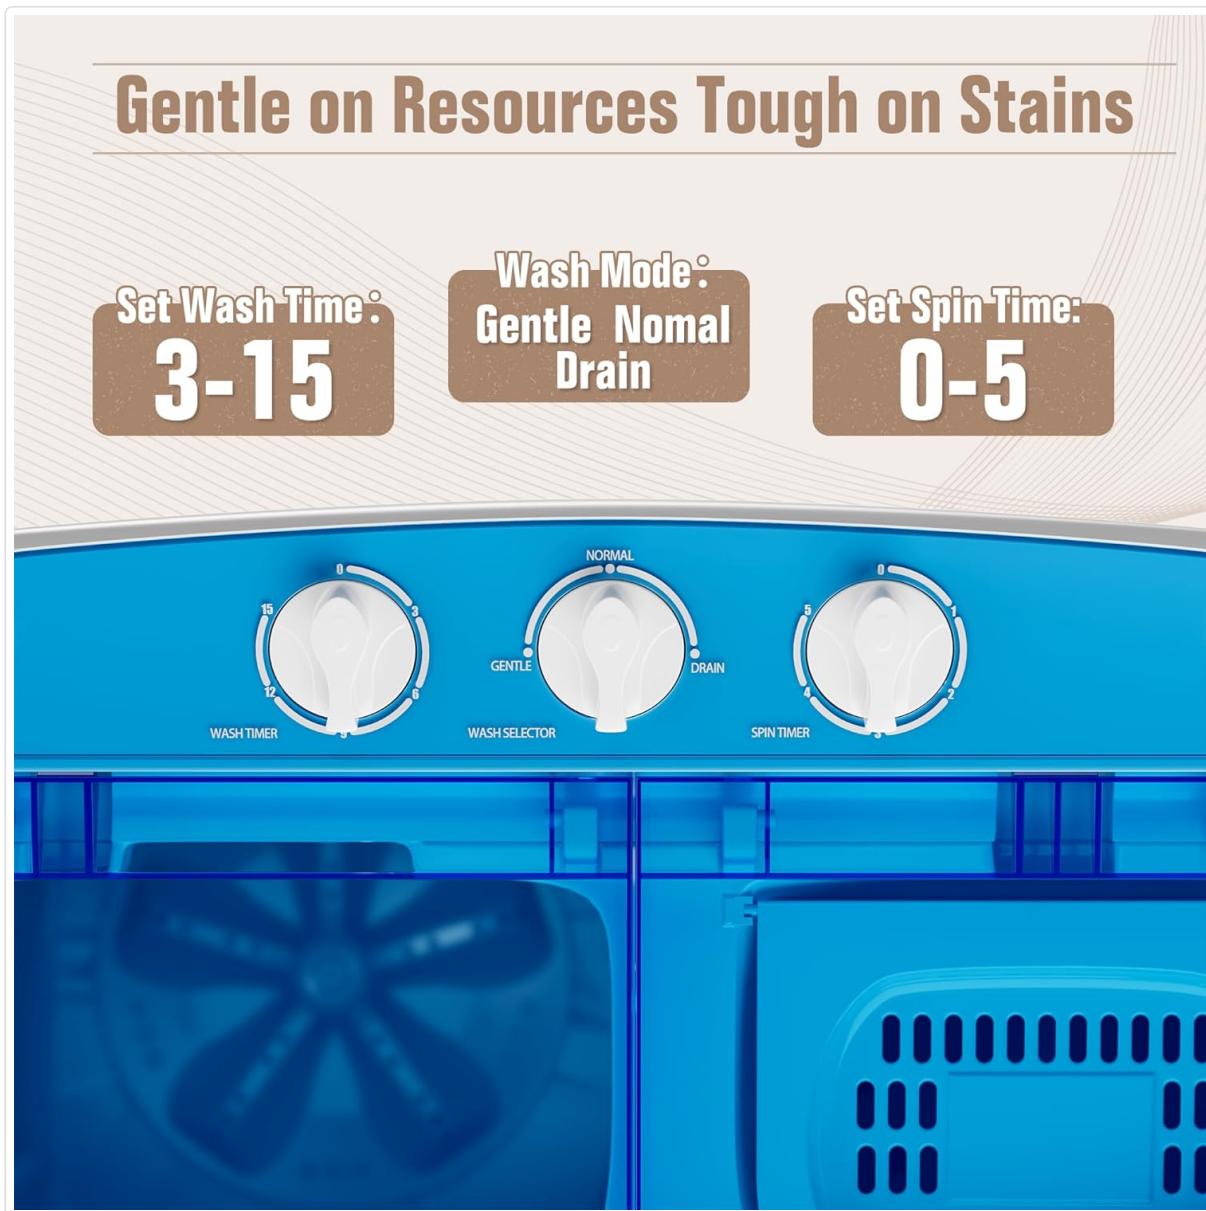


Image: Detailed view of the control panel. From left to right, the knobs are labeled "Wash Timer" (3-15 minutes), "Wash Selector" (Gentle, Normal, Drain), and "Spin Timer" (0-5 minutes).

Free Hands Enjoy Life



Long lasting and durable



Save water



Save electricity



Double cylinder use. save time



Spin cap



Two water filling ports



Drain pipe

Image: An illustration highlighting key components: the spin cap inside the spin tub, two water filling ports on the top rear, and the drain pipe on the side.

SETUP AND INSTALLATION

1. Unpacking

- Carefully remove the washing machine from its packaging.
- Verify all included components are present: Washing Machine, 2 Water Inlets, Instruction Manual.
- Inspect the appliance for any shipping damage. Contact customer support if damage is found.

2. Placement

- Place the washer on a firm, level surface to minimize vibration and noise during operation.
- Ensure adequate space around the machine for ventilation and access.
- The appliance dimensions are approximately 22.4 x 14 x 25.4 inches (L x W x H) and it weighs 27.5 pounds.
- Position the machine near a water source and a drain.

Small Size Big Clean



Image: An illustration detailing the dimensions (22" L x 13.38" W x 25.2" H) and capacities of the washing tub (9.6 lbs / 250 W) and spinning tub (6.4 lbs / 140 W).

3. Water Connection

- Connect the provided water inlet hoses to the water inlet ports on the back of the machine.
- Connect the other end of the hoses to your water supply (e.g., a sink faucet). Ensure connections are secure to prevent leaks.

4. Drain Hose Setup

- Position the drain hose into a sink, bucket, or floor drain. Ensure it is securely placed and will not dislodge during draining.
- The machine uses a gravity drain system.

5. Power Connection

- Plug the power cord into a grounded 110-Volt electrical outlet.

OPERATING INSTRUCTIONS

1. Washing Clothes

- Load Clothes:** Open the lid of the washing tub and place clothes inside. Do not exceed the 9.6 lbs capacity. For optimal cleaning, avoid overloading.
- Add Water:** Fill the washing tub with water to the desired level using the water inlet hoses.
- Add Detergent:** Add an appropriate amount of laundry detergent.
- Select Wash Mode:** Turn the "Wash Selector" knob to either "Gentle" for delicate items or "Normal" for regular loads.
- Set Wash Time:** Turn the "Wash Timer" knob to the desired washing duration (3-15 minutes). The machine will start washing automatically.
- Drain Water:** Once the wash cycle is complete, turn the "Wash Selector" knob to "Drain" to empty the water from the washing tub.



Image: An illustration detailing load capacities: 1 sweater, 2 pairs of jeans, 5 T-shirts, 20 pieces of underwear, or 1 quilt. This helps users visualize appropriate load sizes.

2. Spin Drying Clothes

- Transfer Clothes:** Carefully transfer the washed clothes from the washing tub to the spin tub. Distribute them evenly to maintain balance.
- Place Spin Cap:** Ensure the spin cap is securely placed over the clothes in the spin tub.
- Close Lid:** Close the lid of the spin tub. The machine will not operate if the lid is not securely closed due to the safety switch.

4. **Set Spin Time:** Turn the "Spin Timer" knob to the desired spin duration (0-5 minutes). The machine will begin spin-drying.
5. **Remove Clothes:** Once the spin cycle is complete, open the lid and carefully remove the clothes. Note that the spin dryer removes approximately 90% of water; clothes will still require air drying.

Important: The spin tub operates at 1300 RPM. Always ensure the spin cap is in place and the lid is closed before starting the spin cycle.

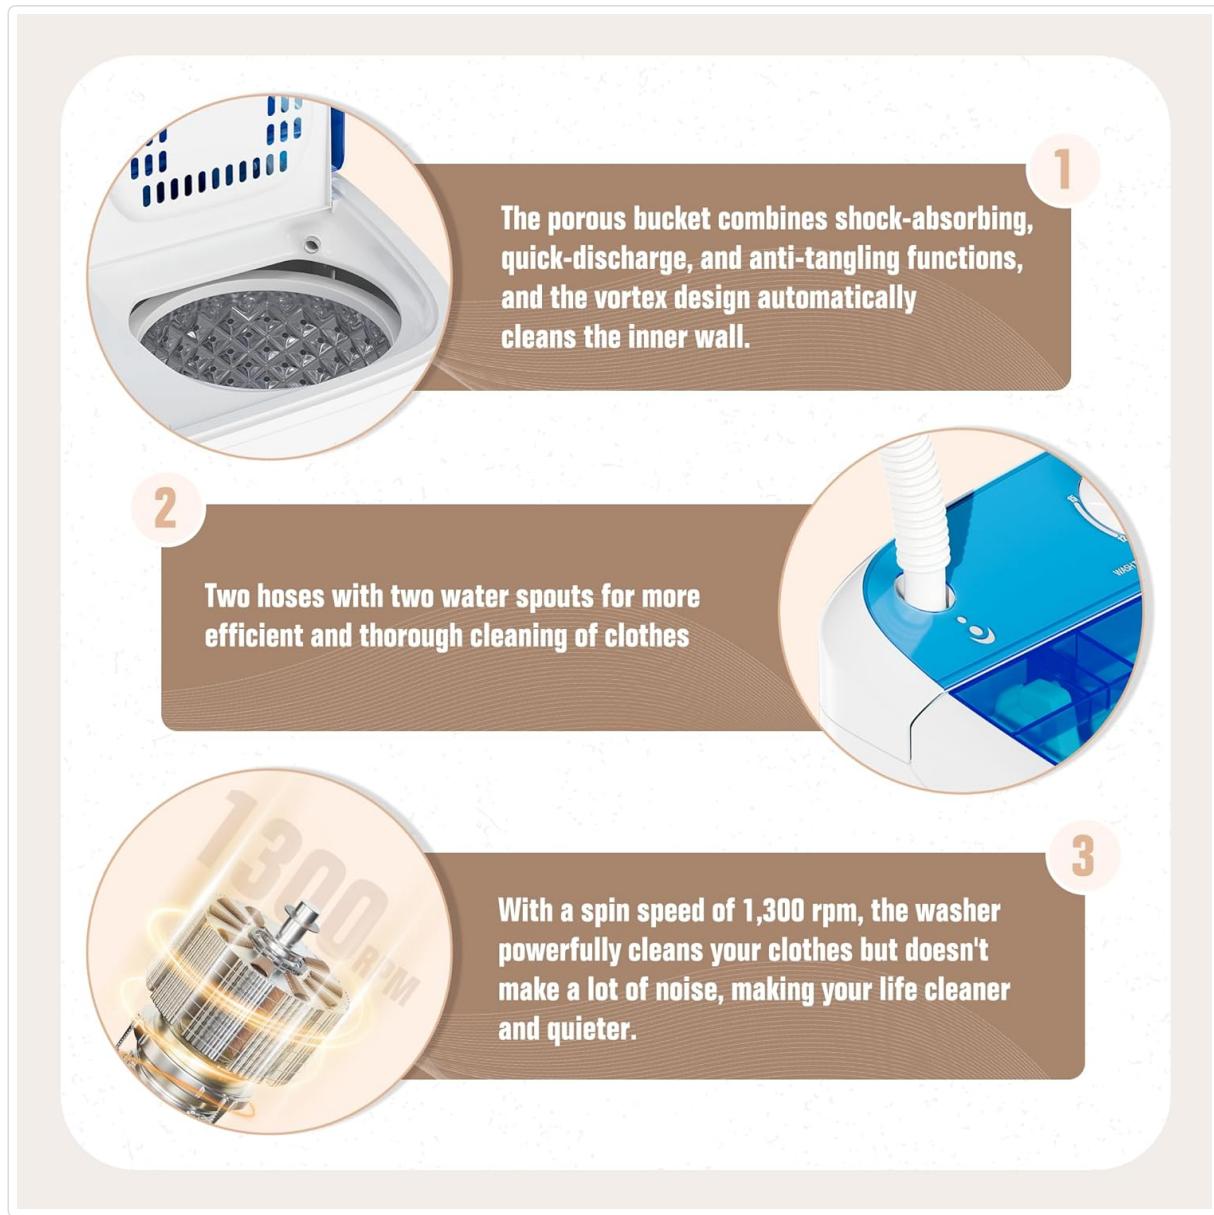


Image: An illustration highlighting the porous bucket's shock-absorbing and anti-tangling features, the two water spouts for efficient cleaning, and the powerful 1,300 RPM motor for effective dewatering.

CARE AND MAINTENANCE

1. Cleaning the Filter

- After each wash cycle, remove and clean the filter located in the washing tub. This collects lint and debris, ensuring efficient operation and preventing odors.
- Rinse the filter under running water and reinsert it.

2. Exterior Cleaning

- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- Ensure the control panel remains dry.

3. Tub Cleaning

- Periodically clean the interior of both tubs to prevent residue buildup and maintain hygiene. A mild detergent and soft brush can be used.
- Rinse thoroughly after cleaning.

4. Storage

- If storing the machine for an extended period, ensure both tubs are completely dry.
- Disconnect water hoses and drain hose, and store them properly.
- Store in a dry, cool place.

TROUBLESHOOTING GUIDE

Before contacting customer support, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	<ul style="list-style-type: none"> ◦ Power cord not plugged in. ◦ Lid not securely closed (safety switch engaged). ◦ Timer not set. 	<ul style="list-style-type: none"> ◦ Ensure power cord is firmly plugged into a live outlet. ◦ Close the lid completely. ◦ Set the Wash Timer or Spin Timer.
Water not filling	<ul style="list-style-type: none"> ◦ Water supply turned off. ◦ Water inlet hoses kinked or blocked. 	<ul style="list-style-type: none"> ◦ Turn on the water supply. ◦ Check hoses for kinks or obstructions.
Water not draining	<ul style="list-style-type: none"> ◦ Drain hose kinked or blocked. ◦ Drain selector not set to "Drain". 	<ul style="list-style-type: none"> ◦ Check drain hose for kinks or obstructions. ◦ Ensure the "Wash Selector" knob is set to "Drain".

Problem	Possible Cause	Solution
Excessive vibration or noise during spin	<ul style="list-style-type: none"> Uneven load in spin tub. Machine not on a level surface. 	<ul style="list-style-type: none"> Redistribute clothes evenly in the spin tub. Ensure the machine is placed on a stable, level surface.
Leaking water	<ul style="list-style-type: none"> Loose hose connections. Damaged hoses. Overfilling the tub. 	<ul style="list-style-type: none"> Tighten all water inlet and drain hose connections. Inspect hoses for cracks or damage; replace if necessary. Do not fill water above the maximum level indicator.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	INTERGREAT
Model	B0BV2Q3F8L
Type	Portable Twin Tub Washer and Spin Dryer
Color	Blue
Washing Capacity	9.6 lbs (4.35 kg)
Spin Capacity	6.4 lbs (2.9 kg)
Product Dimensions (L x W x H)	22.4 x 14 x 25.4 inches (56.9 x 35.6 x 64.5 cm)
Item Weight	27.5 pounds (12.47 kg)
Voltage	110 Volts
Washing Power	250 Watts
Spin Power	140 Watts
Total Wattage	280 Watts

Feature	Detail
Material	Stainless Steel (Spin Tub), Plastic (Body)
Control Console	Push Button / Rotary Knobs
Access Location	Top Load
Special Features	Compact, Portable, Semi-automatic, Lid Safety Switch

WARRANTY AND CUSTOMER SUPPORT

Warranty Information

For specific warranty details regarding your INTERGREAT Portable Twin Tub Washer and Spin Dryer, please refer to the documentation included with your purchase or contact the seller directly. Warranty terms may vary. Optional protection plans may be available for purchase separately.

Customer Support

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact INTERGREAT customer support or the retailer from whom you purchased the product.

- **Brand:** INTERGREAT
- **Seller:** INTERGREAT (as per Amazon listing)
- Refer to your purchase receipt or product packaging for direct contact information.

VIDEO RESOURCES

No official product videos from the seller with m3u8 format were provided in the product data. Please check the product listing page for any available video demonstrations or guides.

Related Documents - B0BV2Q3F8L

	<p>INTERGREAT 6-Door Locker Assembly Instructions (SKU: H04BN402/H04GN401/H04GG409)</p> <p>Step-by-step assembly guide for the INTERGREAT 6-door metal locker, including parts list, hardware details, and installation instructions for home, office, or gym use.</p>
---	--

 <p>SKU: H04BN403/H04GG404</p>	<p><u>Assembly Instructions for H04BN403/H04GG404 Metal Locker</u></p> <p>Step-by-step assembly guide for the INTERGREAT Metal Locker, model H04BN403/H04GG404. This guide details the installation of the locker's components, including side panels, shelves, and doors, using provided hardware.</p>
 <p>SKU: H04BN402/H04GN401/H04GG409</p>	<p><u>Installation Instructions for Tall Metal Storage Cabinet</u></p> <p>Step-by-step assembly guide for the INTERGREAT Tall Metal Storage Cabinet with 4 adjustable shelves and 2 locking doors. Includes parts list and assembly diagrams.</p>
 <p>SKU: H04BN402/H04GN401/H04GG409</p>	<p><u>INTERGREAT 6-Door Locker Assembly Instructions (SKU: H04BN402/H04GN401/H04GG409)</u></p> <p>Step-by-step assembly guide for the INTERGREAT 6-door metal locker, including parts list, hardware details, and installation instructions for home, office, or gym use.</p>
 <p>SKU: H04BN403/H04GG404</p>	<p><u>Assembly Instructions for H04BN403/H04GG404 Metal Locker</u></p> <p>Step-by-step assembly guide for the INTERGREAT Metal Locker, model H04BN403/H04GG404. This guide details the installation of the locker's components, including side panels, shelves, and doors, using provided hardware.</p>
 <p>SKU: H04BN402/H04GN401/H04GG409</p>	<p><u>Installation Instructions for Tall Metal Storage Cabinet</u></p> <p>Step-by-step assembly guide for the INTERGREAT Tall Metal Storage Cabinet with 4 adjustable shelves and 2 locking doors. Includes parts list and assembly diagrams.</p>